EXTERNAL ELECTRICAL CONNECTION TO THE VENTILATION UNIT

CONTACT DATA:
GUARD FUNCTION:
NORMAL SITUATION = OPEN
ACTIVATED = CLOSED

HOUSE AUTOMATION:
NORMAL SITUATION = OPEN
ERROR SITUATION
(HOOD OR VENTILATION UNIT) = CLOSED
ACTIVATED GUARD FUNCTION = FLASHING
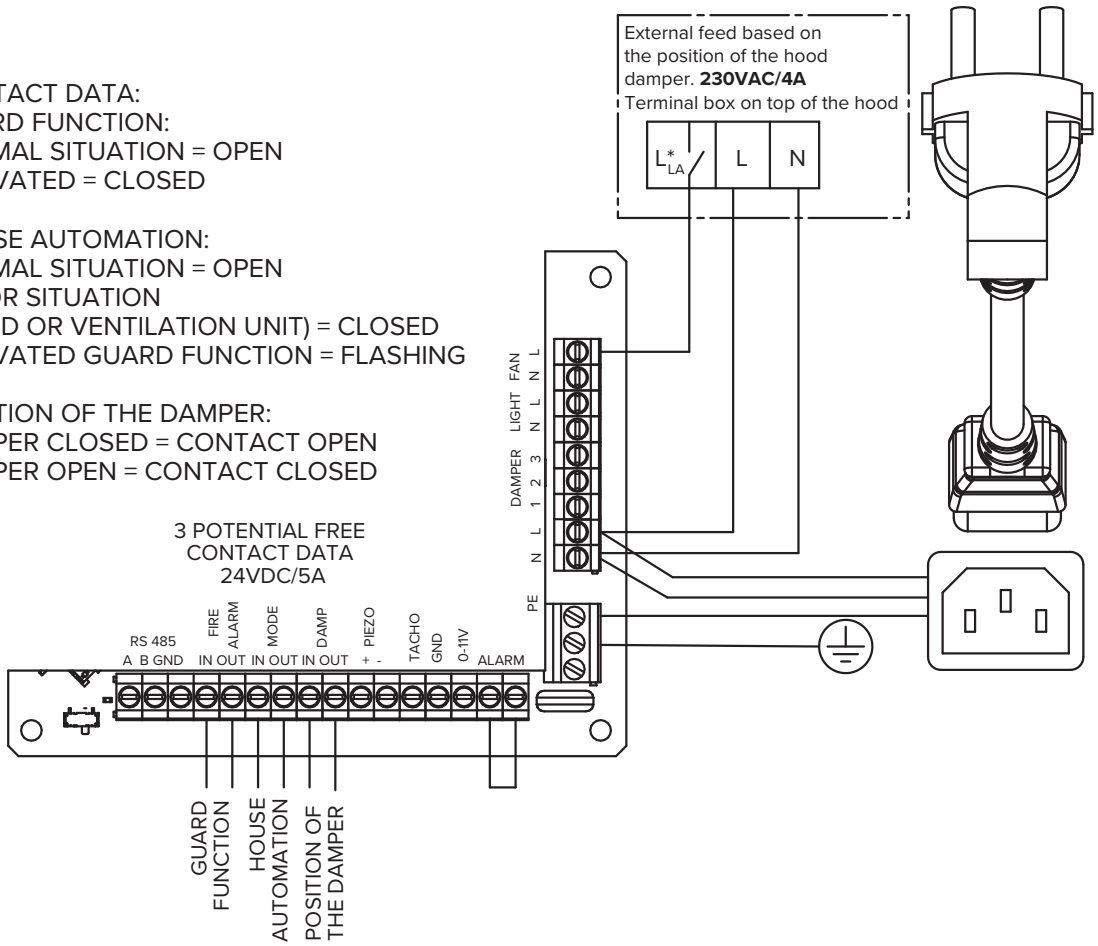
POSITION OF THE DAMPER:
DAMPER CLOSED = CONTACT OPEN
DAMPER OPEN = CONTACT CLOSED