VALLOX
HOME *of* FRESH AIR

## EXTERNAL ELECTRICAL CONNECTION TO THE VENTILATION UNIT OR A ROOF FAN

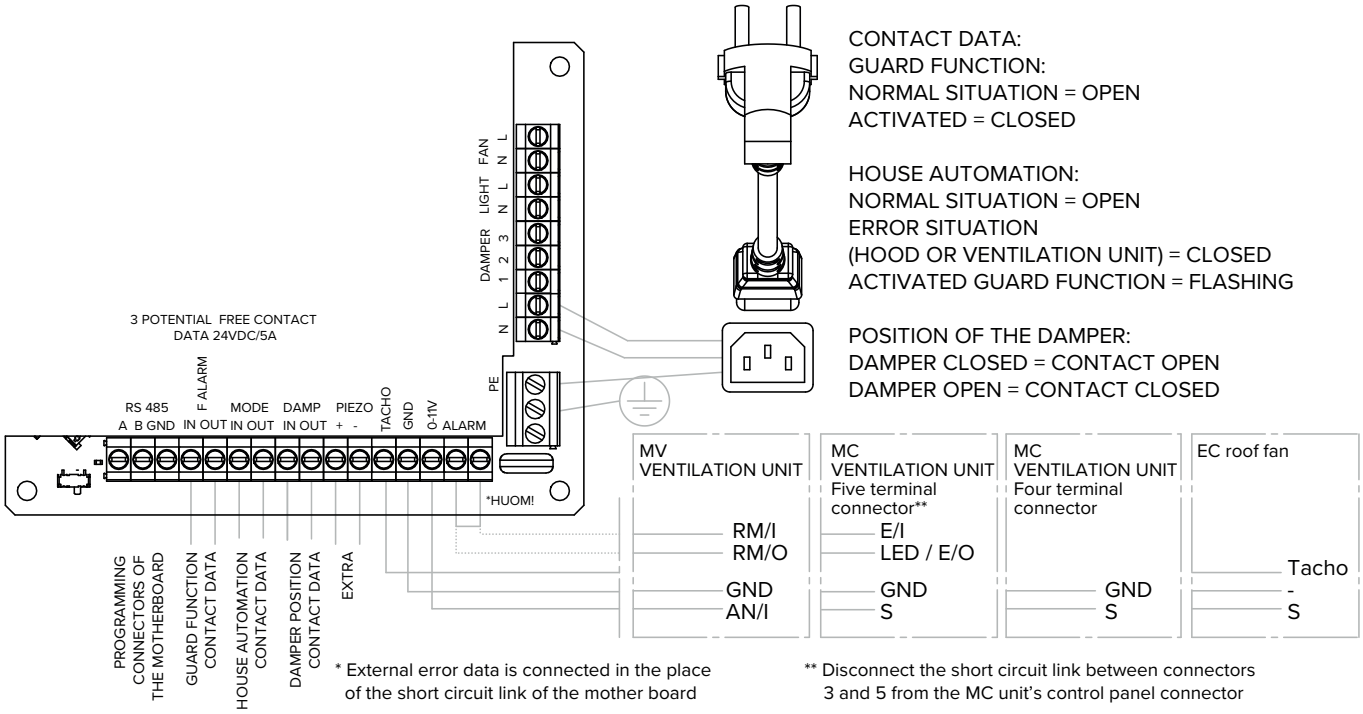


* External error data is connected in the place of the short circuit link of the mother board

** Disconnect the short circuit link between connectors 3 and 5 from the MC unit's control panel connector