


# **CROSLEY**








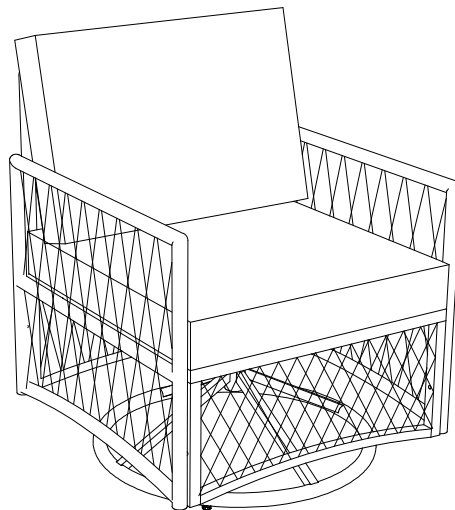

---

## FURNITURE

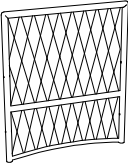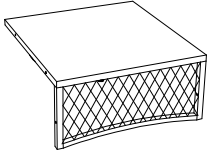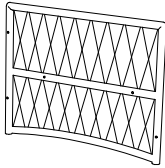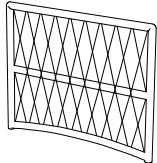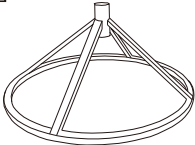


### Outdoor Wicker Swivel Rocker Chair CO6343



## PART LIST


<b>A</b> 	<b>B</b> 	<b>C</b> 	<b>D</b> 	<b>E</b> 
Back Panel 1 PC	Seat Panel 1 PC	Right Arm Panel 1 PC	Left Arm Panel 1 PC	Base 1 PC
<b>F</b> 	<b>G</b> 	<b>H</b> 	<b>I</b> 	*Please note cushion covers will ship separately.
Cover of Seat Cushion * 1 PC	Core of Seat Cushion 1 PC	Cover of Back Cushion * 1 PC	Core of Back Cushion 1 PC	

## HARDWARE LIST

<b>#1</b> 	<b>#2</b> 	<b>#3</b> 
M6*45mm  Bolt 11 PCS (Extra 1)	M6mm  Flat Washer 11 PCS (Extra 1)	M6mm  Allen Wrench 1 PC


Step 1. Lay left arm panel (part D) down on a soft flat surface, such as carpet, as shown below. Attach seat panel (part B) to left arm panel (part D) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

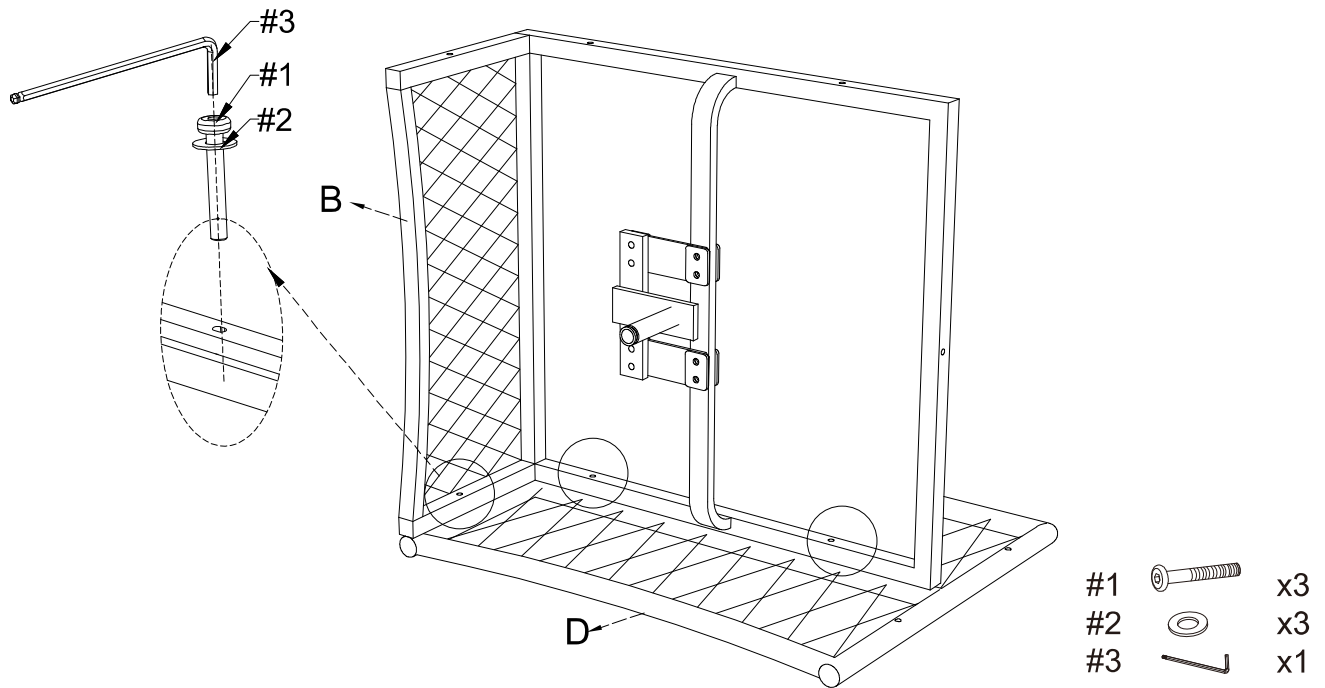


Step 2. Attach back panel (part A) to left arm panel (part D) and seat panel (part B) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

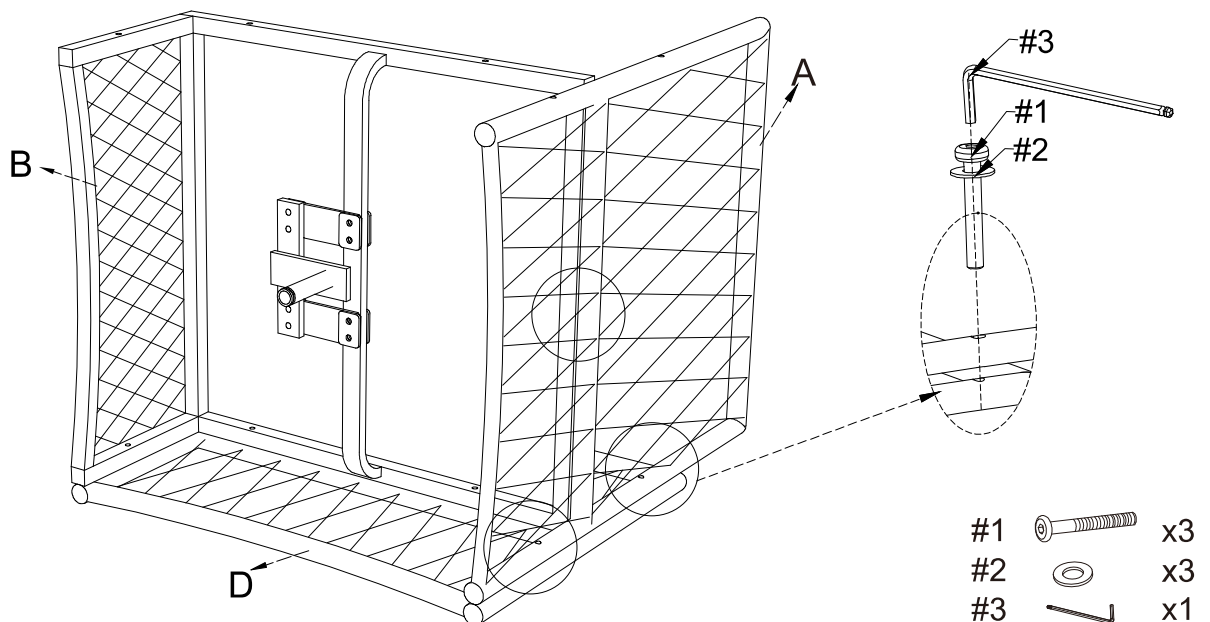


Step 3. Attach right arm panel (part C) to back panel (part A) and seat panel (part B) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).

NOTE: Please fully tighten all bolts at this time.

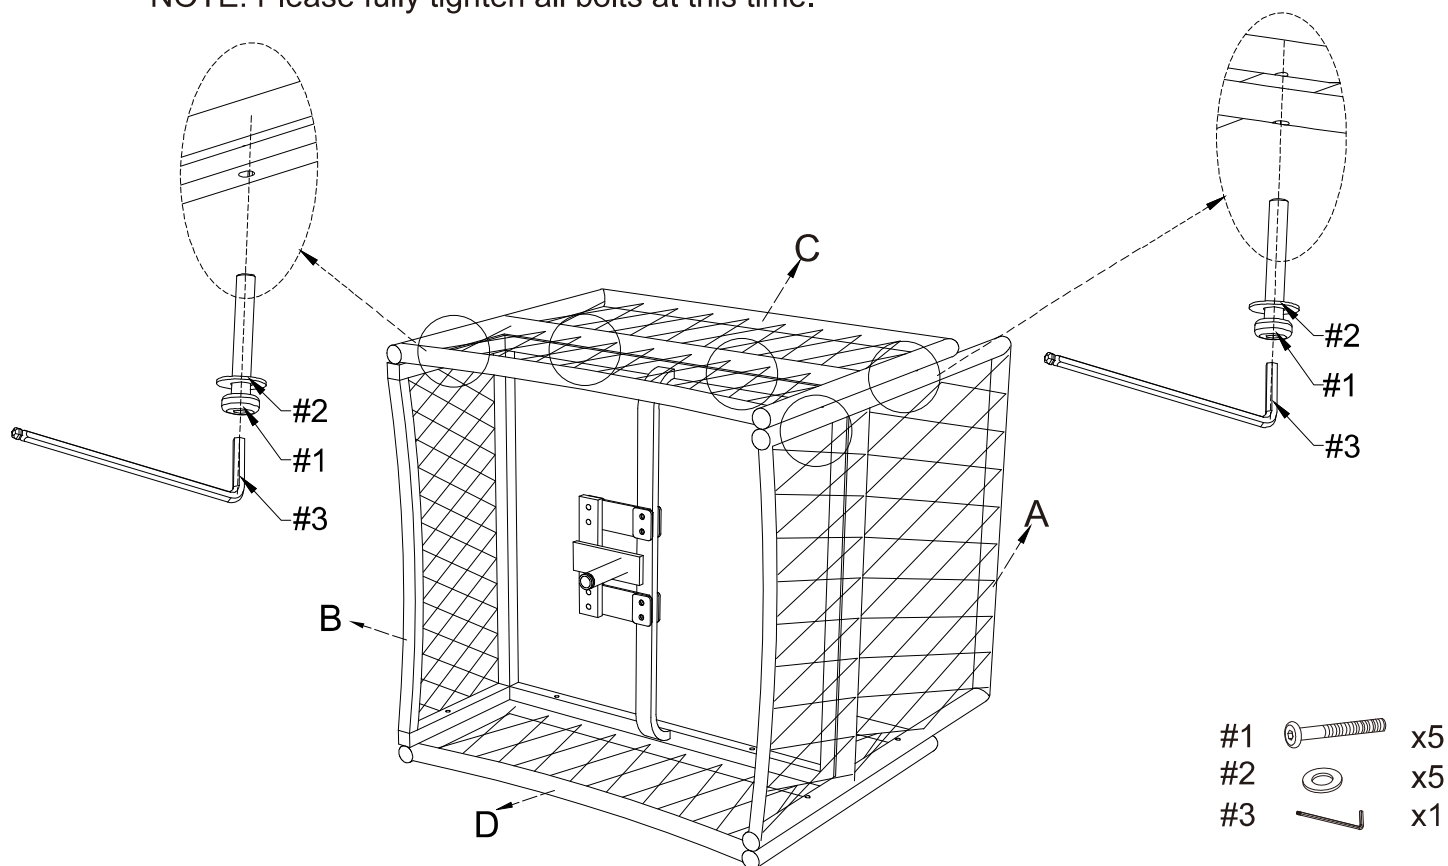


Step 4. Attach assembled unit (parts A, B, C & D) to base (part E).

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

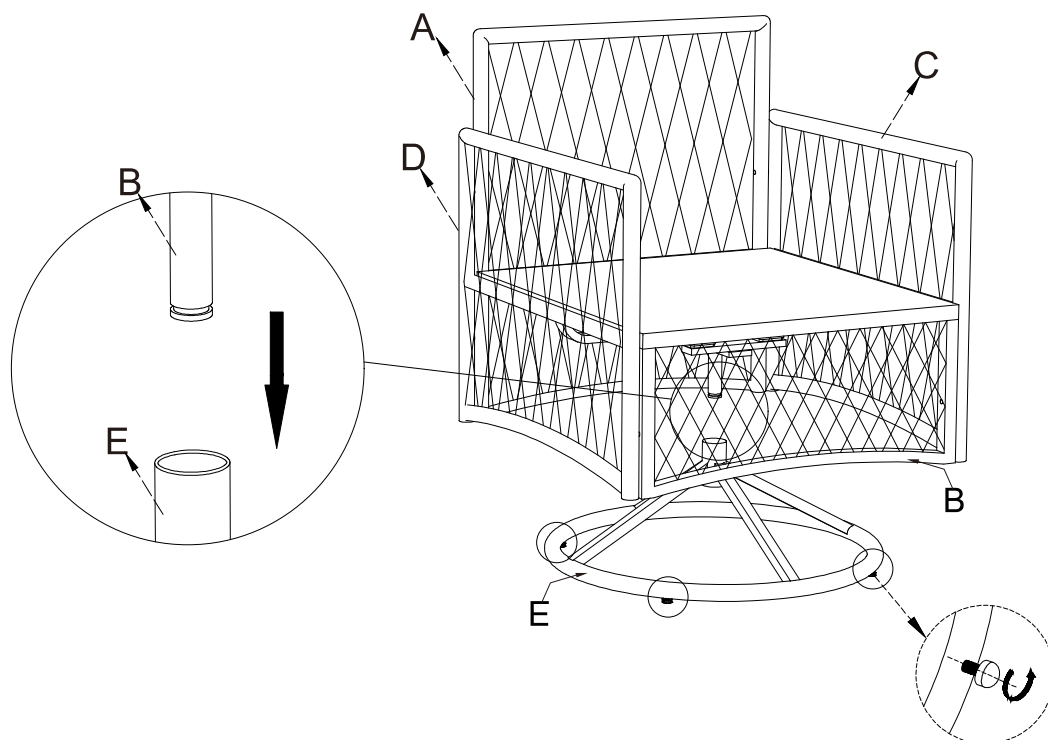

Step 5. Insert core of seat cushion (part G) into cover of seat cushion (part F).  
Insert core of back cushion (part I) into cover of back cushion (part H).

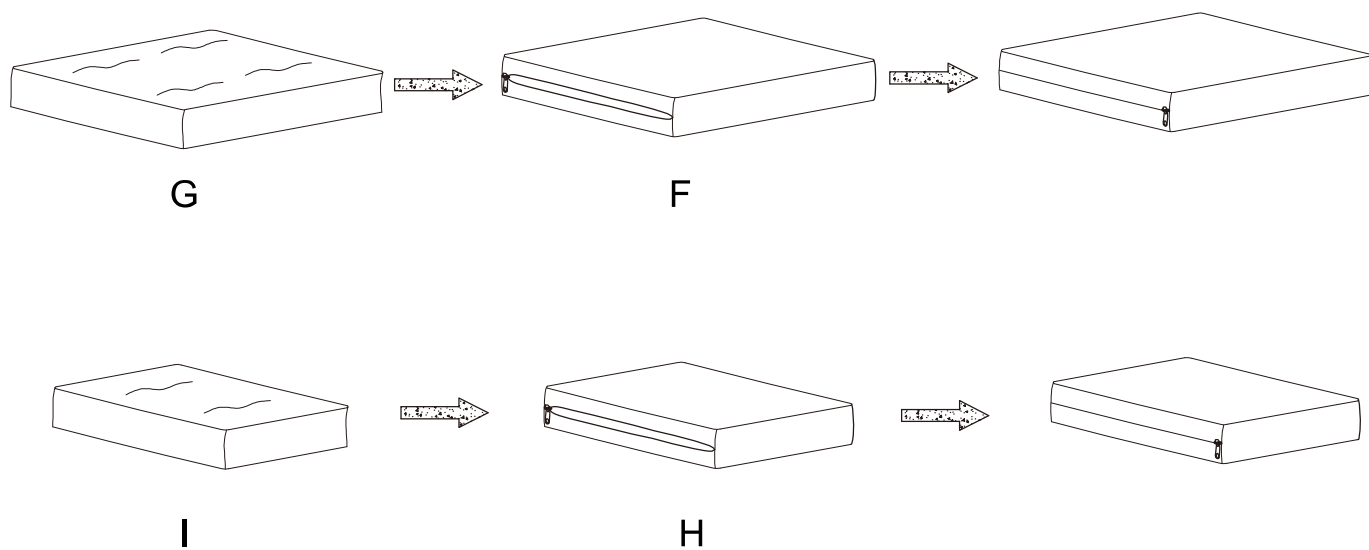

Step 6. Carefully turn unit upright and add cushions as shown below.

