

# Installation Guide


PERLATO

## Perlato Lapistone™/Eco-Lapistone™ Freestanding Tubs


### IMPORTANT

Before you begin installation, make sure that the tub is the correct model and size, and conduct a thorough inspection and water test. It is recommended to inspect tub for damage even if it was previously inspected.


1. Mark tub and drain location on floor.

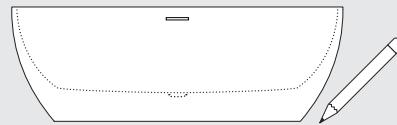


2. Clean the drain hole area and prepare tailpiece and drain pipe for connection to tub.

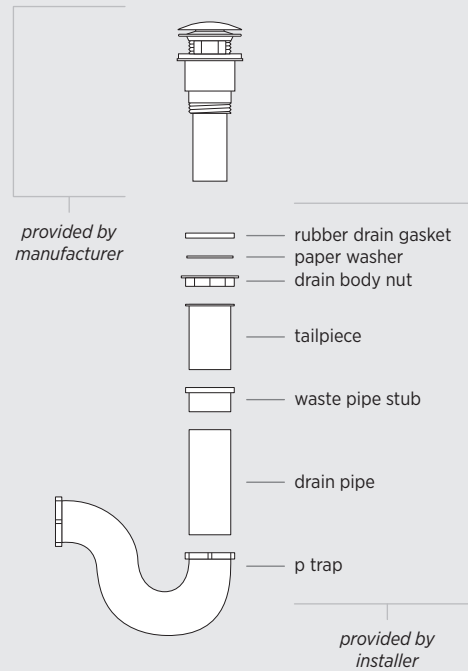

3. Carefully set tub into its proper position and connect pre-installed drain fittings to tailpiece.

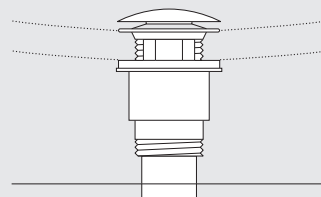

4. Fill tub with water until the overflow and then drain the tub. Maintain access below floor level and inspect the waste connections for leaks as the water drains.

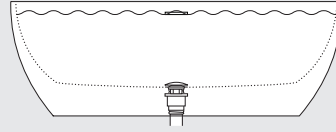

5. Run tub and tile caulk around bottom edge of tub, where it meets the floor. Use a wet cloth to wipe excess caulk.

