

# Installation Guide


PERLATO

## Perlato Akoya™ Freestanding Tubs


### IMPORTANT

Before you begin installation, make sure that the tub is the correct model and size, and conduct a thorough inspection and water test. It is recommended to inspect tub for damage even if it was previously inspected.


1. Place tub in desired position and level it by adjusting leg height. Trace outline with erasable marking.

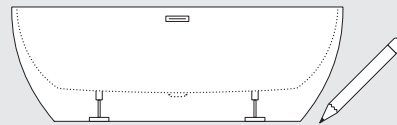


2. Move tub away, carefully placing it upside down on a protective surface. Measure distance from edge to drain pipe and mark location on floor.

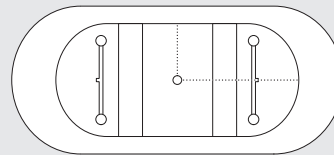


3. Clean the drain hole area and prepare tailpiece and drain pipe for connection to tub.

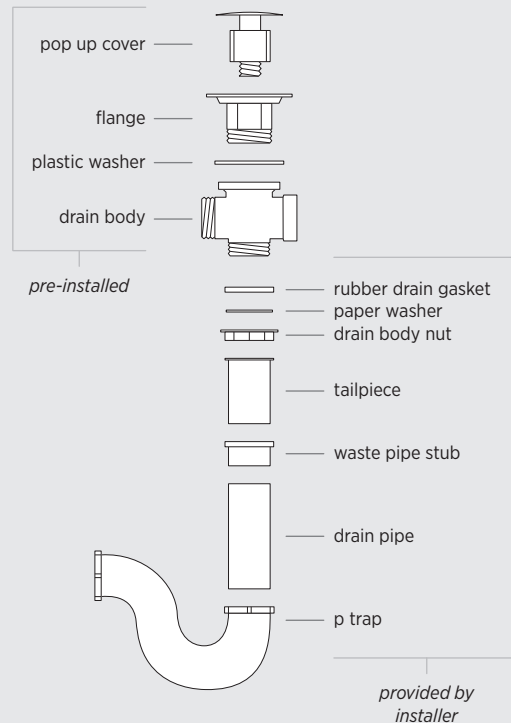


4. Generously apply adhesive or silicone to bottom of tub supports.

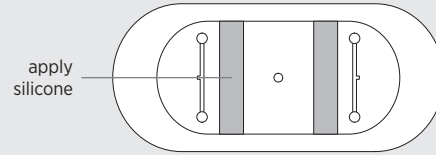


5. Carefully set tub into its proper position and connect pre-installed drain fittings to tailpiece.

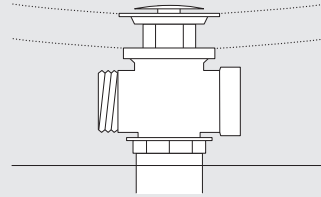

6. Fill tub with water until the overflow and then drain the tub. Maintain access below floor level and inspect the waste connections for leaks as the water drains.

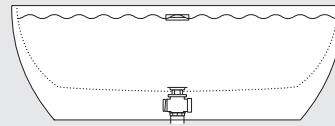

7. Run tub and tile caulk around bottom edge of tub, where it meets the floor. Use a wet cloth to wipe excess caulk.

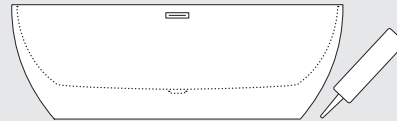

## Tub Mechanism Diagram

---

See diagram below for an illustration of tub's pre-installed drain mechanism. This will be useful in the event that a replacement component is required.

To change trim finish, replace overflow slot, pop up cover and flange.

