


Installation Instructions


CPC Series Pipe Grounding Connectors

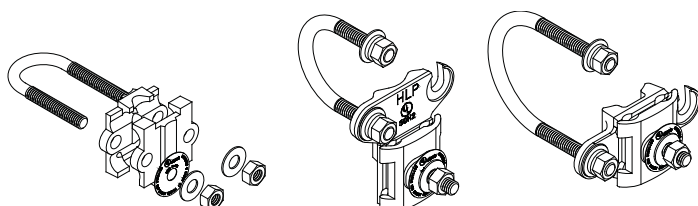


CPC.5/.75

CPC1/1.25


CPC1.5/2 - CPC5/6

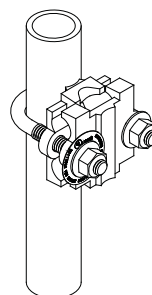

CPC.5/.75

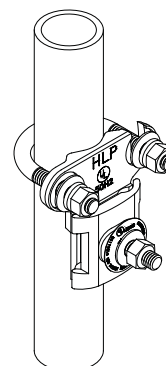


CPC1/1.25

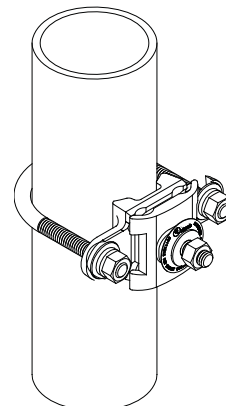


CPC1.5/2 - CPC5/6

- 1A) Remove hardware from U-bolt, then remove U-bolt from casting (CPC.5/.75 only).
1B) For CPC1/1.25 through CPC5/6, loosen hardware and "swing" U-bolt out.

- 2) Prepare pipe mounting surface by removing paint, oil, debris, etc. and apply antioxidant.
3) Attach clamp to pipe loosely.

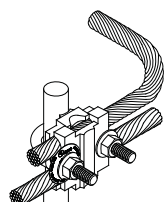


CPC.5/.75

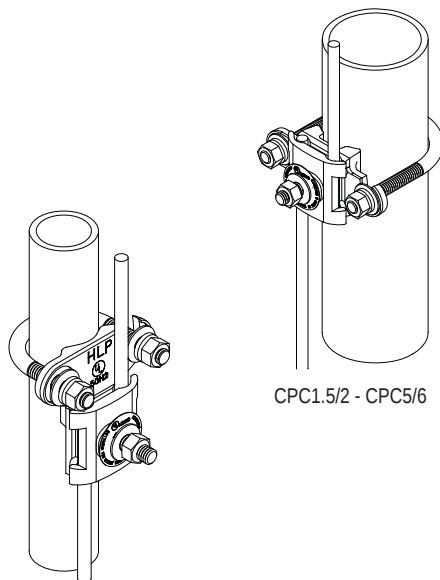


CPC1.5/2 - CPC5/6


CPC1/1.25

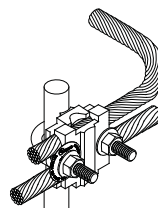

CPC.5/.75

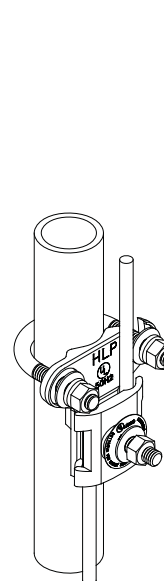

CPC1/1.25

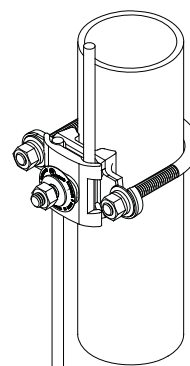

CPC1.5/2 - CPC5/6

- 4) Loosen bolt located on screw (CPC1/1.25 through CPC5/6 only).
5) Insert conductor(s).

- 6) Tighten all nuts to 75 inch pounds.



301 Ziegler Drive, Grayslake, IL 60030
Phone: 847-548-8700
Fax: 847-548-8755
Website: www.harger.com