
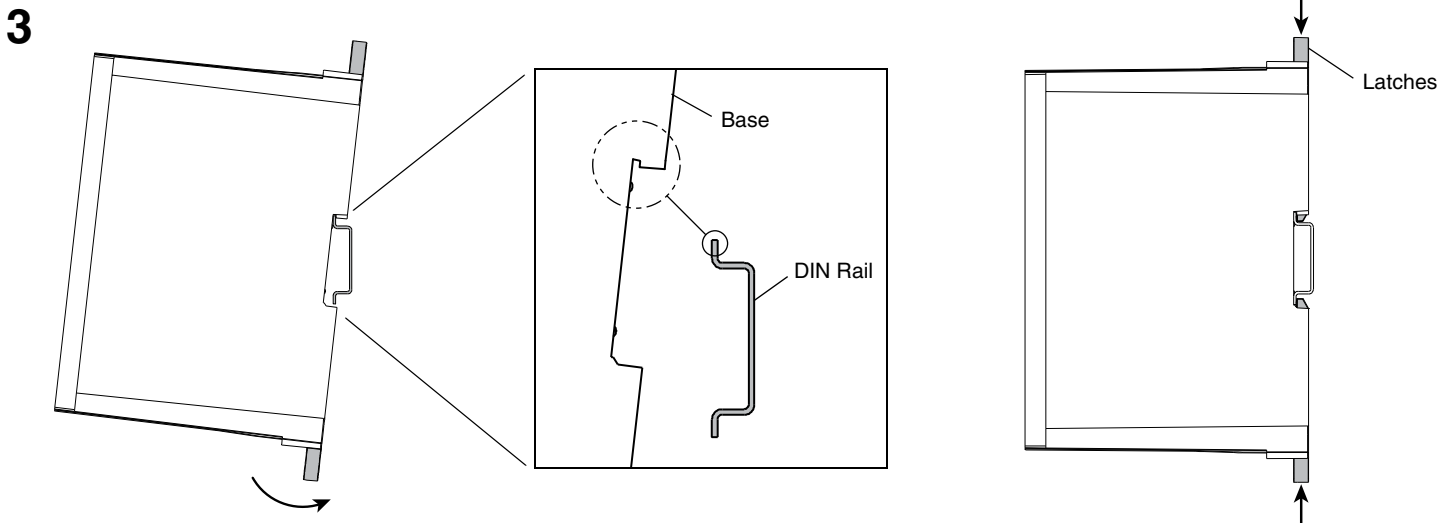
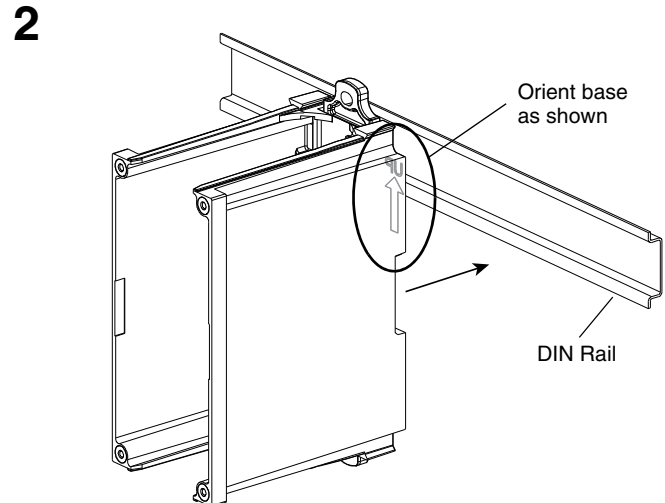
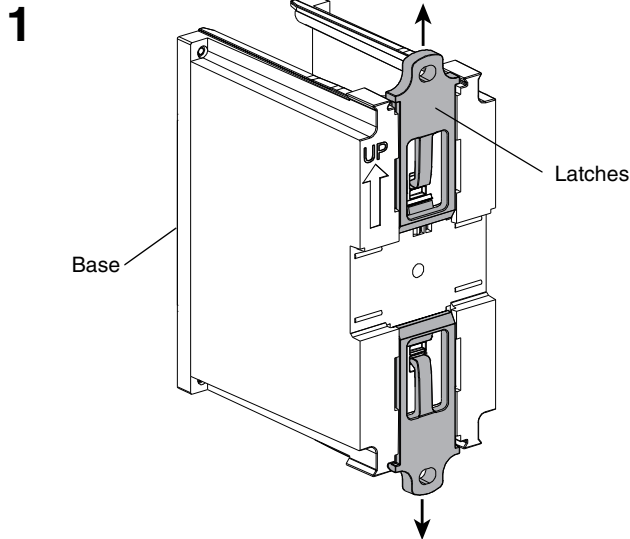
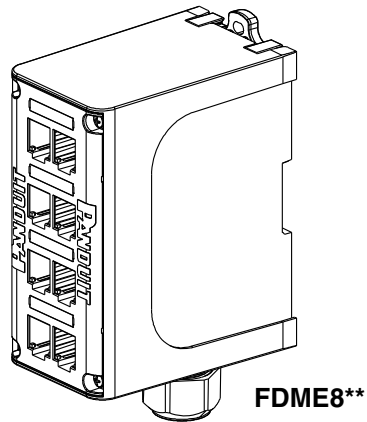
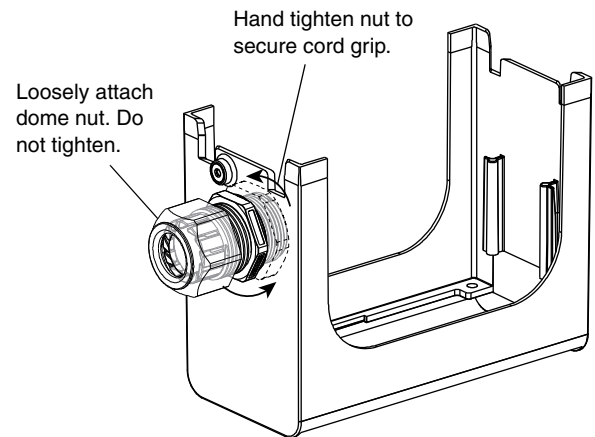
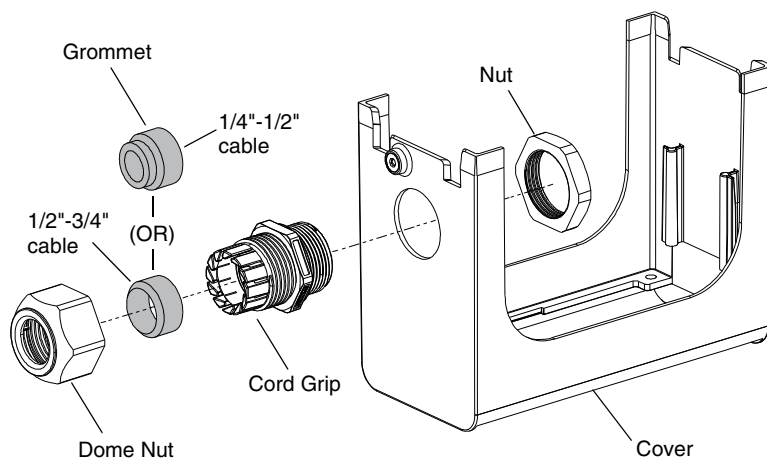
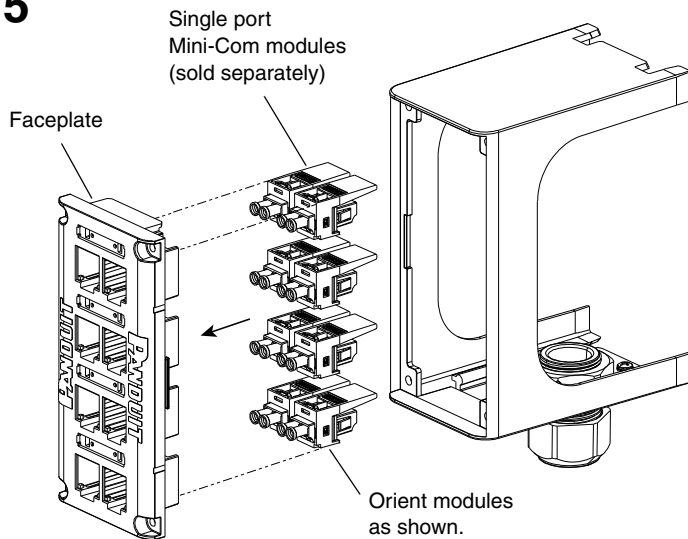
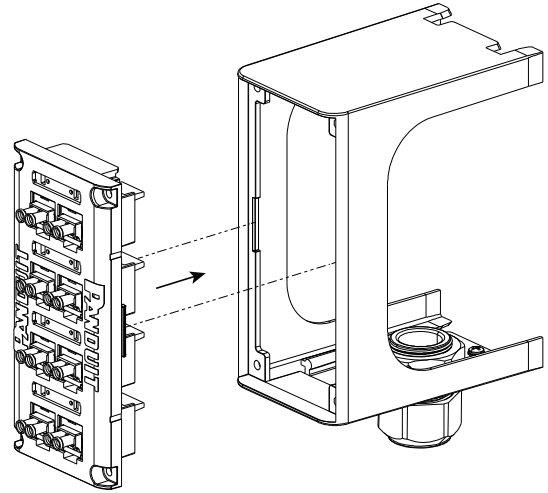
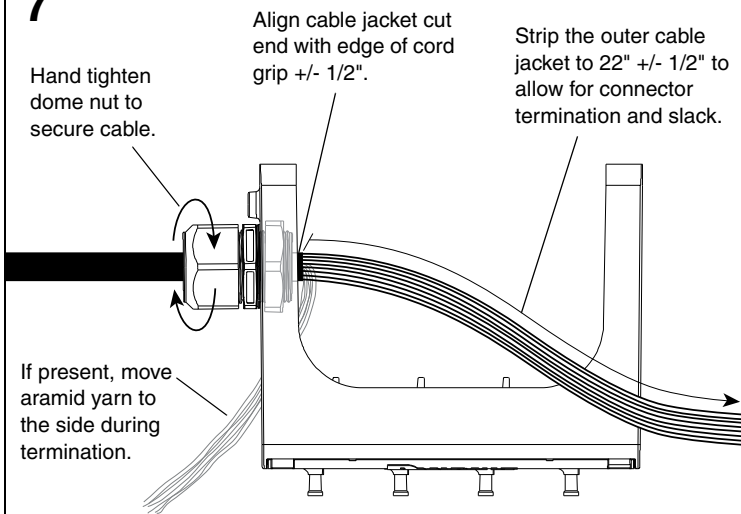


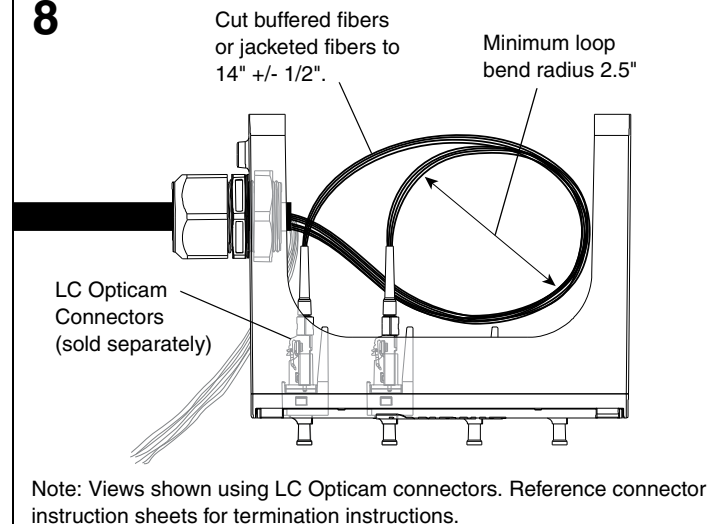


** Denotes color.

4**5****6****7****8**


9

Cut buffered fibers
or jacketed fibers to
20" $\pm$ 1/2".


Minimum loop
bend radius 2.5"

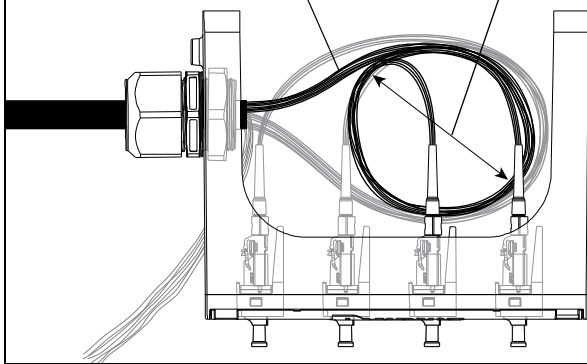**10**



Secure loops loosely
with a piece of Tak-ty
(sold separately).

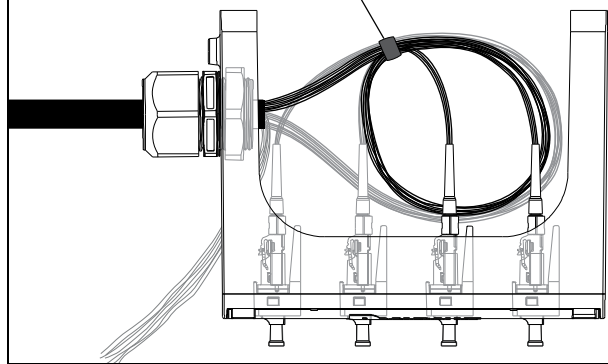**11**

Trim aramid
yarn to 3".

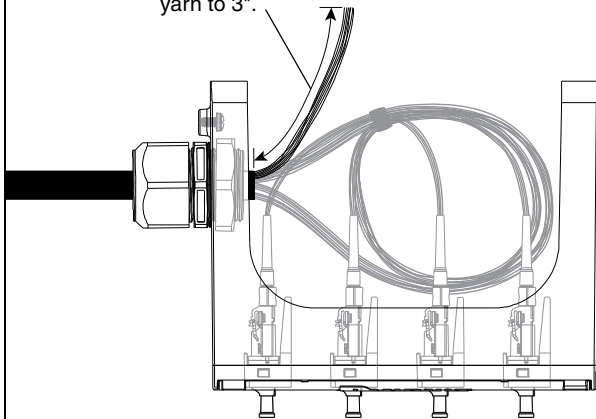
**12**

Wrap aramid yarn at least one
full loop clockwise around the
screw and secure.

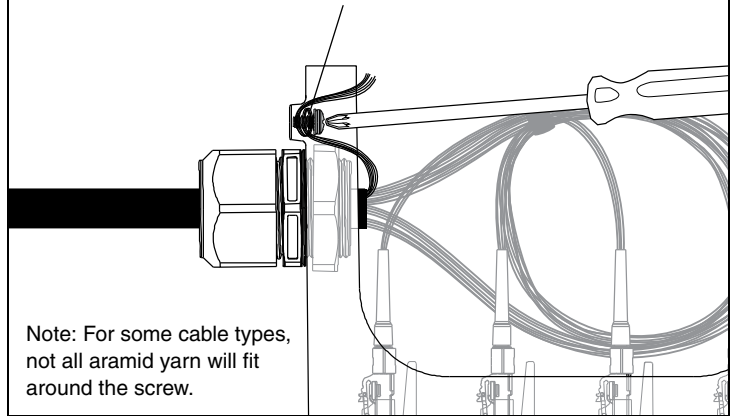
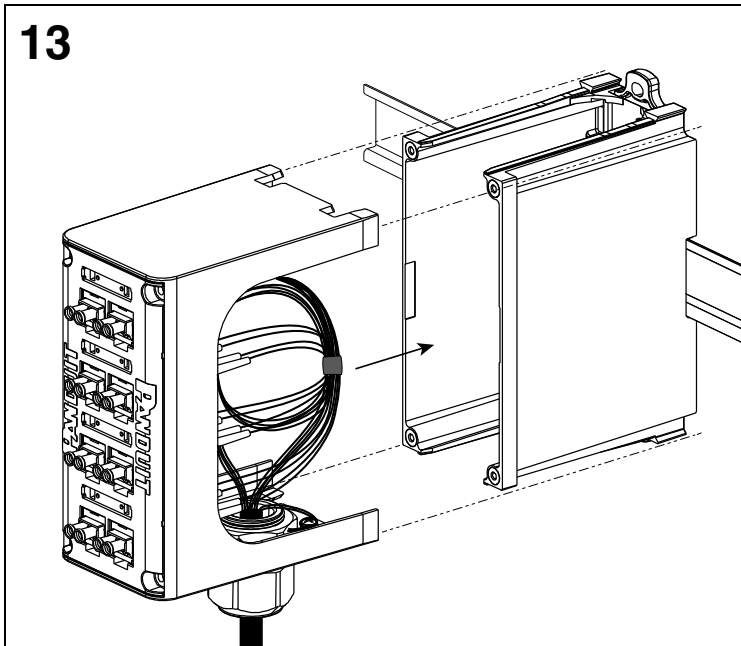
**13****14**

#6-32 x 3/8"
screws

Torque screws to
5 - 8 lb-in.

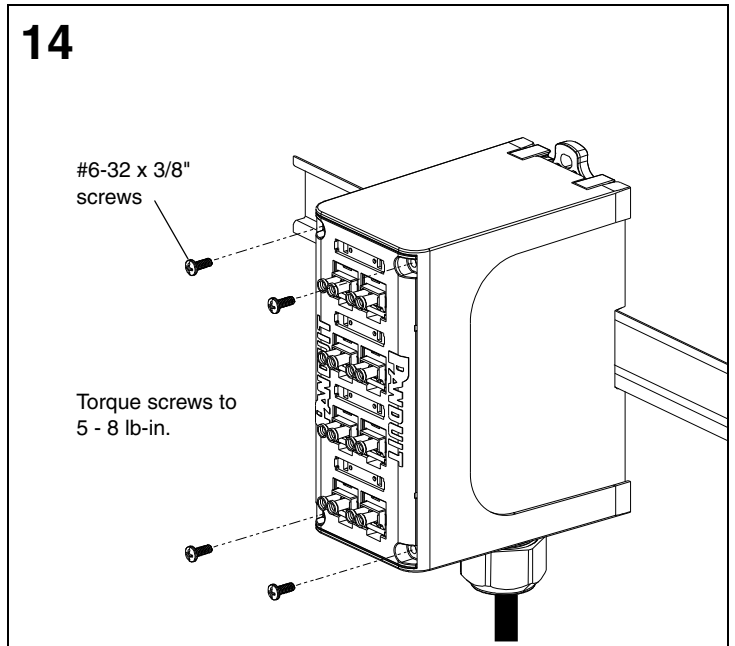


15

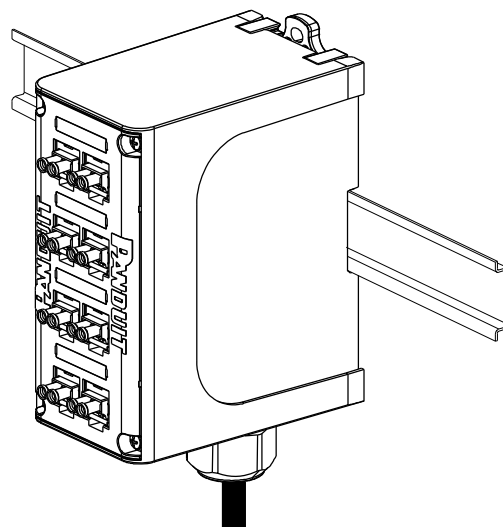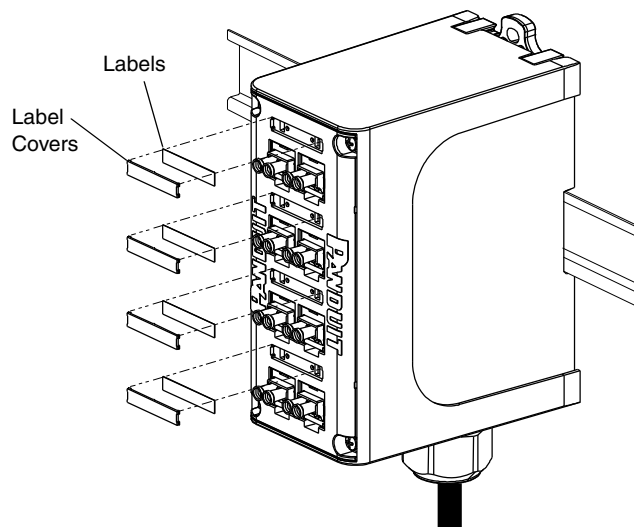


Optional Surface Mounting

1

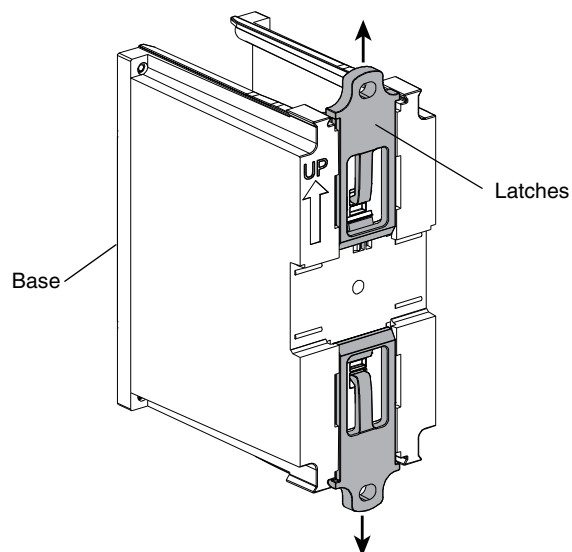

2

Use mounting screws to secure the base to the surface.
#10-32 screws recommended.

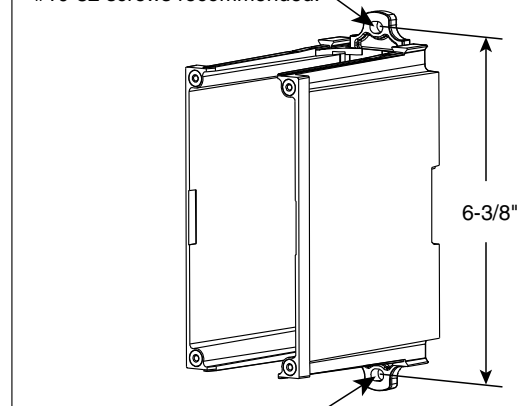

For Instructions in Local Languages
and Technical Support:

www.panduit.com/resources/install_maintain.asp

PANDUIT
www.panduit.com

E-mail:
techsupport@panduit.com

Phone:
866-405-6654