


CT Handles and Staples




A Pentair Company

Hoffman Enclosures Inc.

2100 Hoffman Way
Anoka, MN 55303-1745
(763) 422-2211 Tel
www.hoffmanonline.com

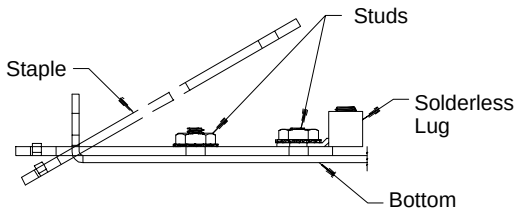

1. Insert staple as indicated by the dashed lines.
2. Lower over studs as indicated by arrow.
3. Install lug over rear stud.
4. Install and tighten keps nuts.

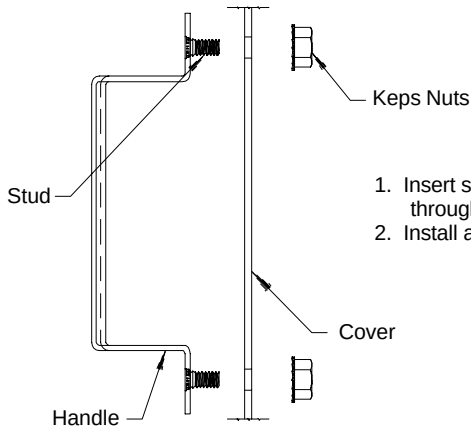

1. Insert studs in handle through the cover.
2. Install and tighten keps nuts.