


INSIDE
OF DOOR

OUTSIDE
OF DOOR

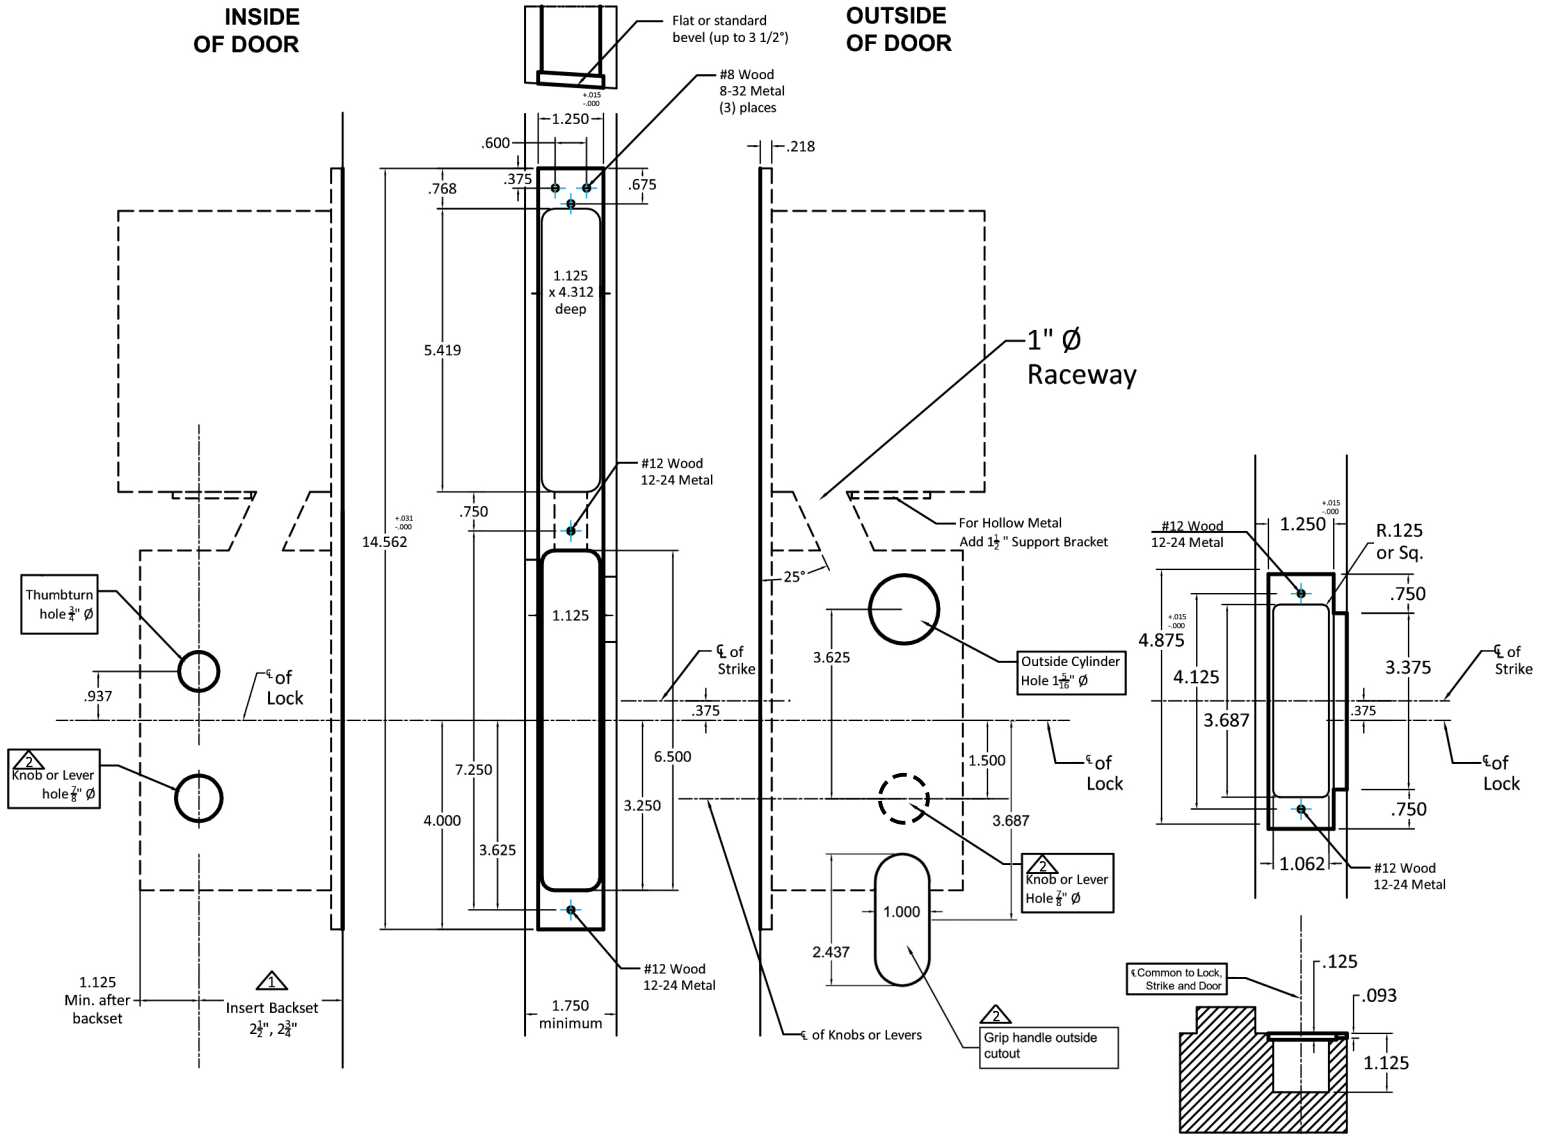

Notes:

- ▲ Insert backset here $2\frac{1}{2}"$, $2\frac{3}{4}"$
- ▲ Knob, outside grip handle, thumbturn and ER hole sizes may vary from different trim manufacturers. Please refer to their templates to confirm these dimensions. The OUTSIDE KNOB HOLE MAY NOT BE NEEDED - THIS FULLY DEPENDS ON THE SPINDLE ARRANGEMENT OF THE TRIM MANUFACTURER BEING USED.

Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See catalog / spec sheets for additional lock details

ACCURATE
LOCK & HARDWARE
AMERICAN CRAFTED SINCE 1972

**SM9159E Thumbpiece x Lever/
Thumbpiece x Knob Template
All Backsets**

T-ALH.SM9159E.TL