


INSIDE  
OF DOOR

OUTSIDE  
OF DOOR

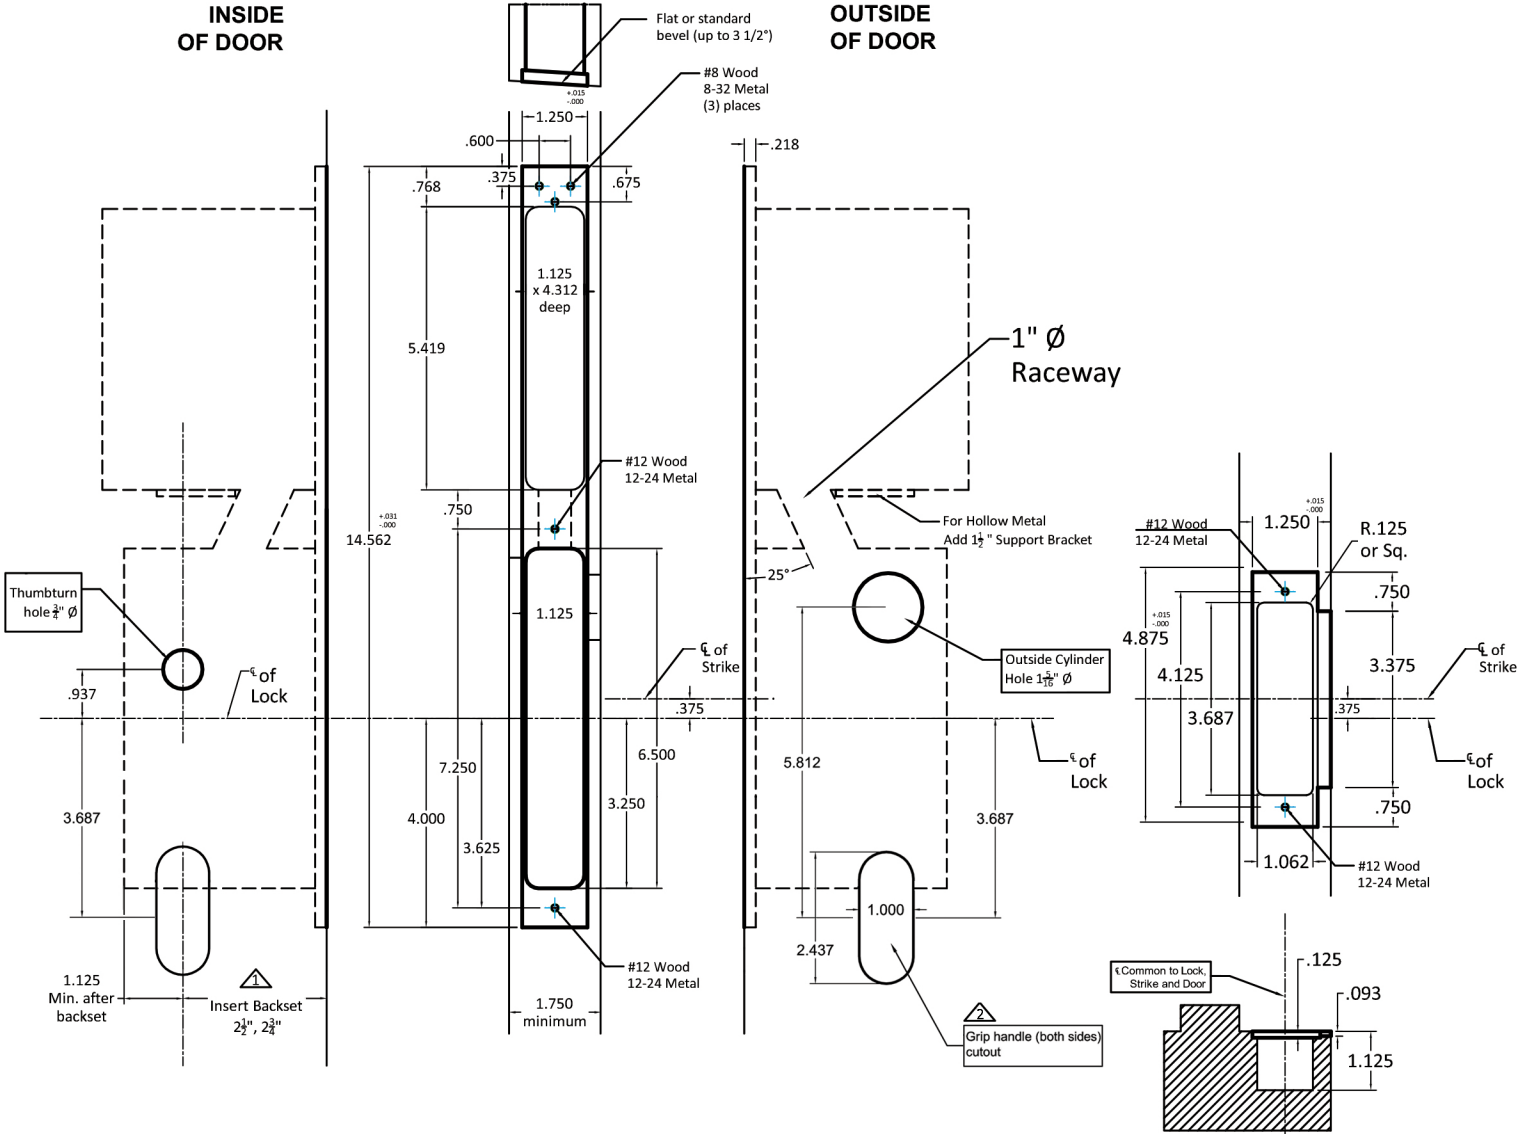

**Notes:**

- ▲ Insert backset here  $2\frac{1}{2}$ " ,  $2\frac{3}{4}$ "
- ▲ Grip handles, thumbturn and ER hole sizes may vary from different trim manufacturers. Please refer to their templates to confirm these dimensions.

**Additional Notes:**

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See catalog / spec sheets for additional lock details

**ACCURATE**  
LOCK & HARDWARE  
AMERICAN CRAFTED SINCE 1972

SM9159E Thumbpiece x  
Thumbpiece Template  
All Backsets

T-ALH.SM9159E.TT