





## 1912 URBAN DEADBOLT

### **EASY RETROFIT**

Four screws needed to simply replace a traditional rim lock (e.g. Segal lock)


### **STATEMENT ACCESSORY**


- This design improves upon the aesthetics of traditional rim locks to make it a decorative accessory
- Available in a variety of finishes
- Customizable upon request

### **ADDITIONAL SECURITY**

Popular in metropolitan environments, this auxiliary deadbolt provides an additional layer of security


## 1912 Urban Deadbolt Dimensions

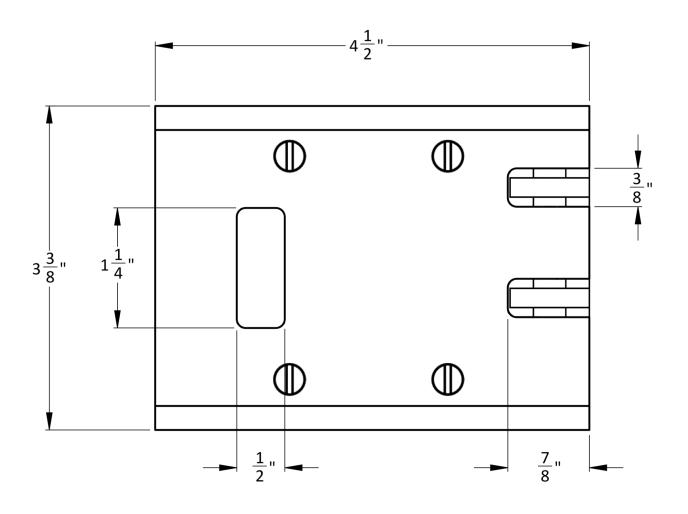

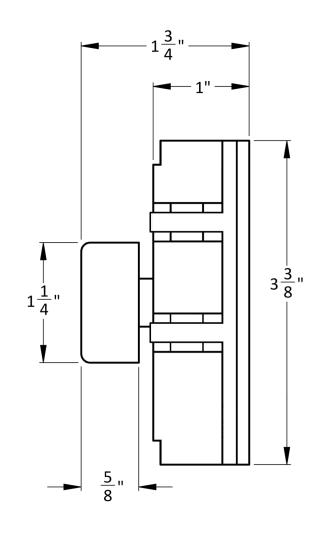

| 10 | 9 | 8 | 7 | 6 | 5 | 4 |

# 1912 Urban Deadbolt Components

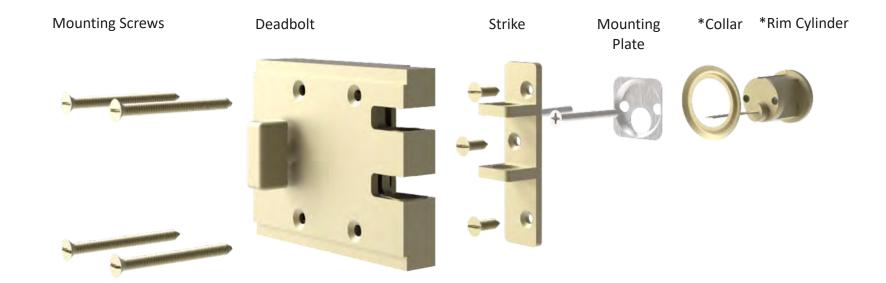

\*Collar and Rim Cylinder supplied by Accurate when ordered.

Τ.

**LH DOOR SWING:** 

illustration.

From inside, lock installed

on **left** side of the door per

1912 Urban Deadbolt Door Handing

**LH INSIDE** 


Use **LH** template plate to mark for holes on door and frame.



**RH INSIDE** 



**RH DOOR SWING:** From inside, lock installed on **right** side of the door per illustration.

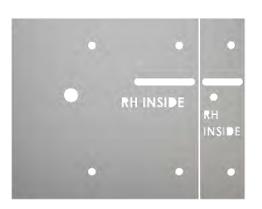

Use **RH** template plate to mark for holes on door and frame.

11

10

6

11

## **HOW TO SPECIFY**

## 1912.FINISH.HAND.DOORTHICKNESS

## **EXAMPLES**

**Urban Deadbolt | Satin Chrome** 

E.g.: 1912.US26D.RH.134

**Urban Deadbolt | Burnished Brass** 

E.g.: 1912.BB.LH.134

**Urban Deadbolt | Duronotic** 

E.g.: 1912.DURO.LH.134

### **FINISHES**

**GROUP 1:** US4, US4NL, US26D

**GROUP 2:** US3, US3NL, US26, US10B, US14, US15, US19

GROUP 3: BN, BB, TN, TB, DURO, ESN, US15A, US5

\*Other finishes may be available as a special order, please call for assistance.

To view example of finishes visit: <u>Accurate Finishes</u>.

## **ACCURATE LOCK & HARDWARE MANUFACTURERS OF LOCKS AND CUSTOM ARCHITECTURAL HARDWARE**

Stamford, CT 06902 1 Annie Place

**P:** 203.348.8865 **F:** 203.348.5234

E: sales@accuratelockandhardware.com

www.accuratelockandhardware.com

