


**INSIDE
OF DOOR**

**OUTSIDE
OF DOOR**

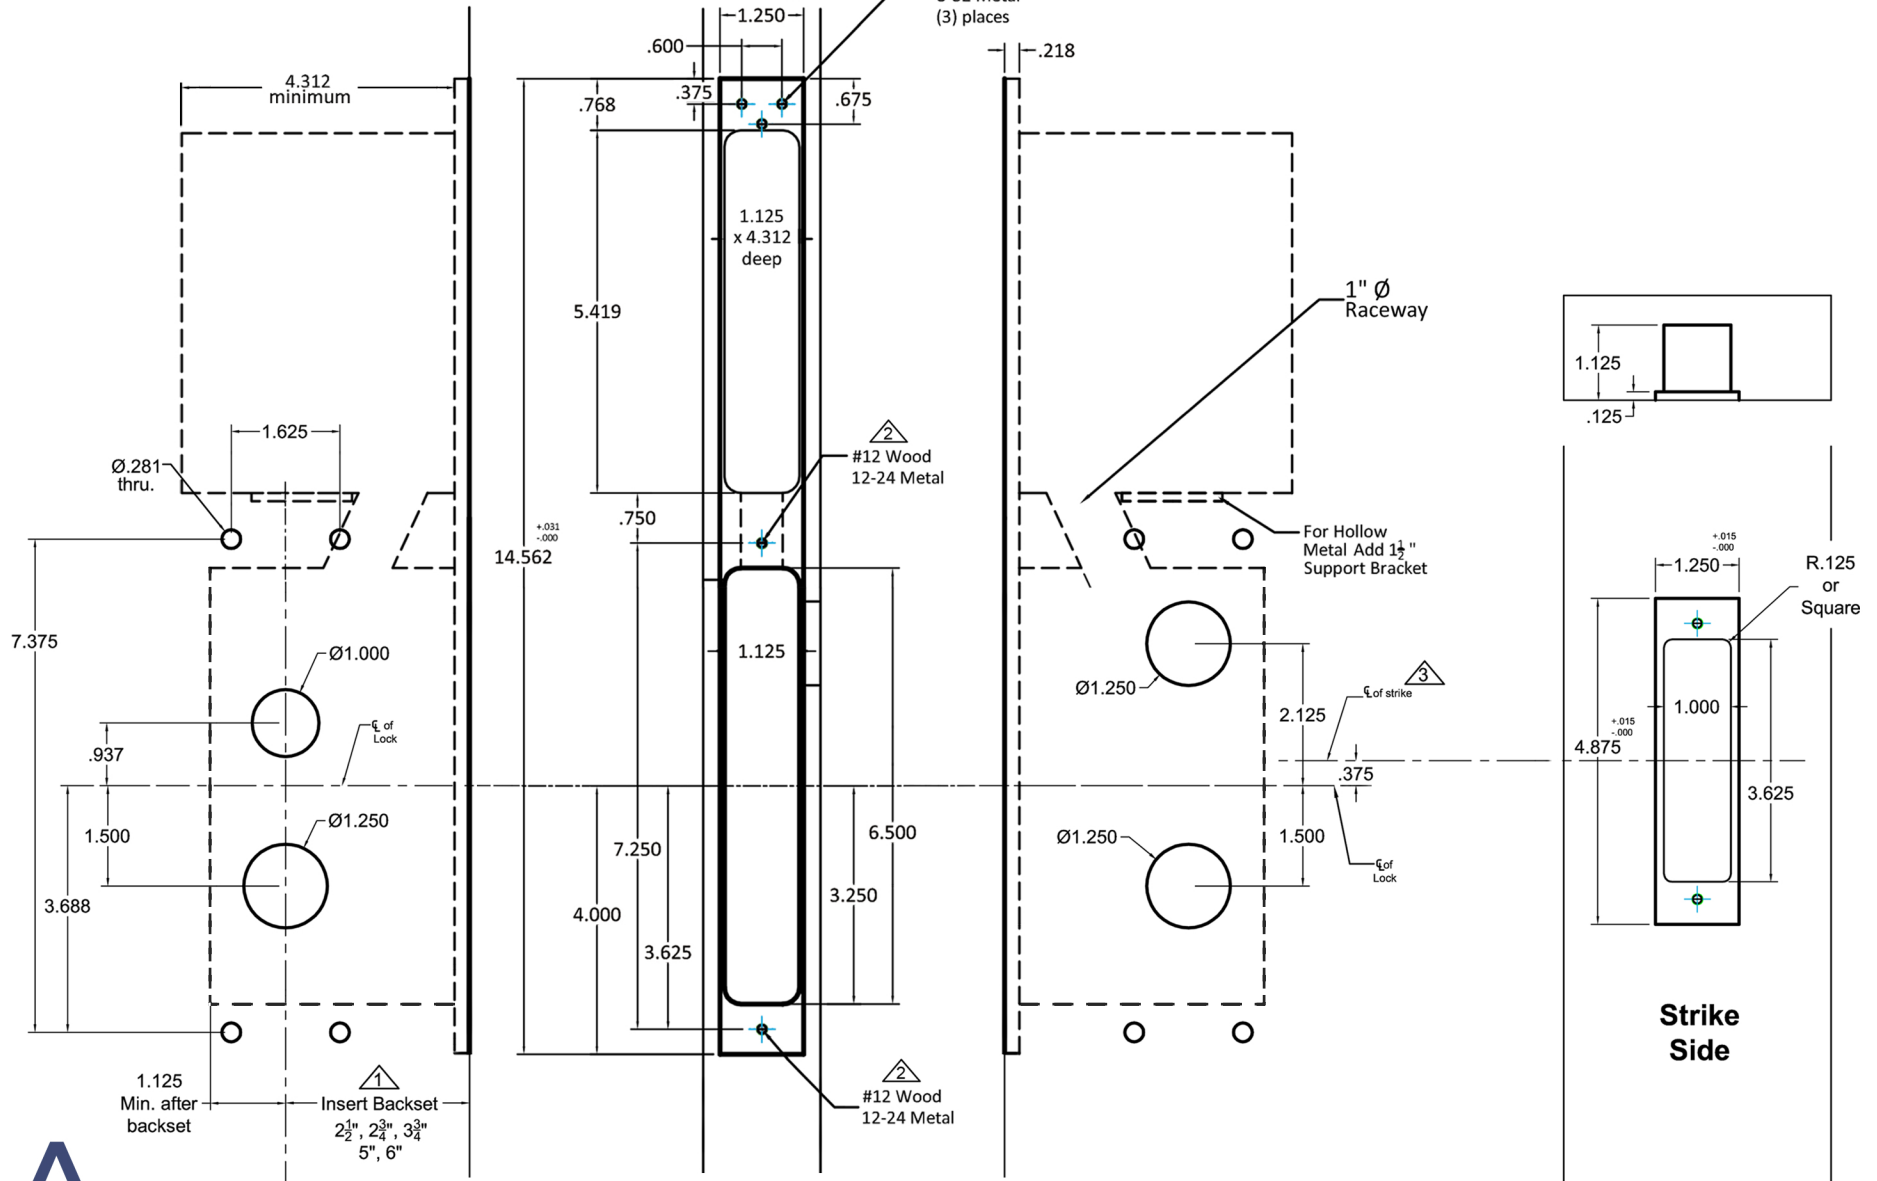

Strike Side

Notes:

- ① Insert backset here 2 $\frac{1}{2}$ ", 2 $\frac{3}{4}$ ", 3 $\frac{3}{4}$ ", 5", or 6"
- ② Prep for #12 wood or 12-24 machine screws
- ③ Centerline of strike is $\frac{3}{8}$ " above centerline of lock

Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See catalog / spec sheets #SL9153ADA for additional lock details



ACCURATE
LOCK & HARDWARE
AMERICAN CRAFTED SINCE 1972

SmartEntry SL-SM9159E.ADA Template-
All Backsets

T-ALH.SL9159E.ADA