


INSIDE OF DOOR

OUTSIDE OF DOOR

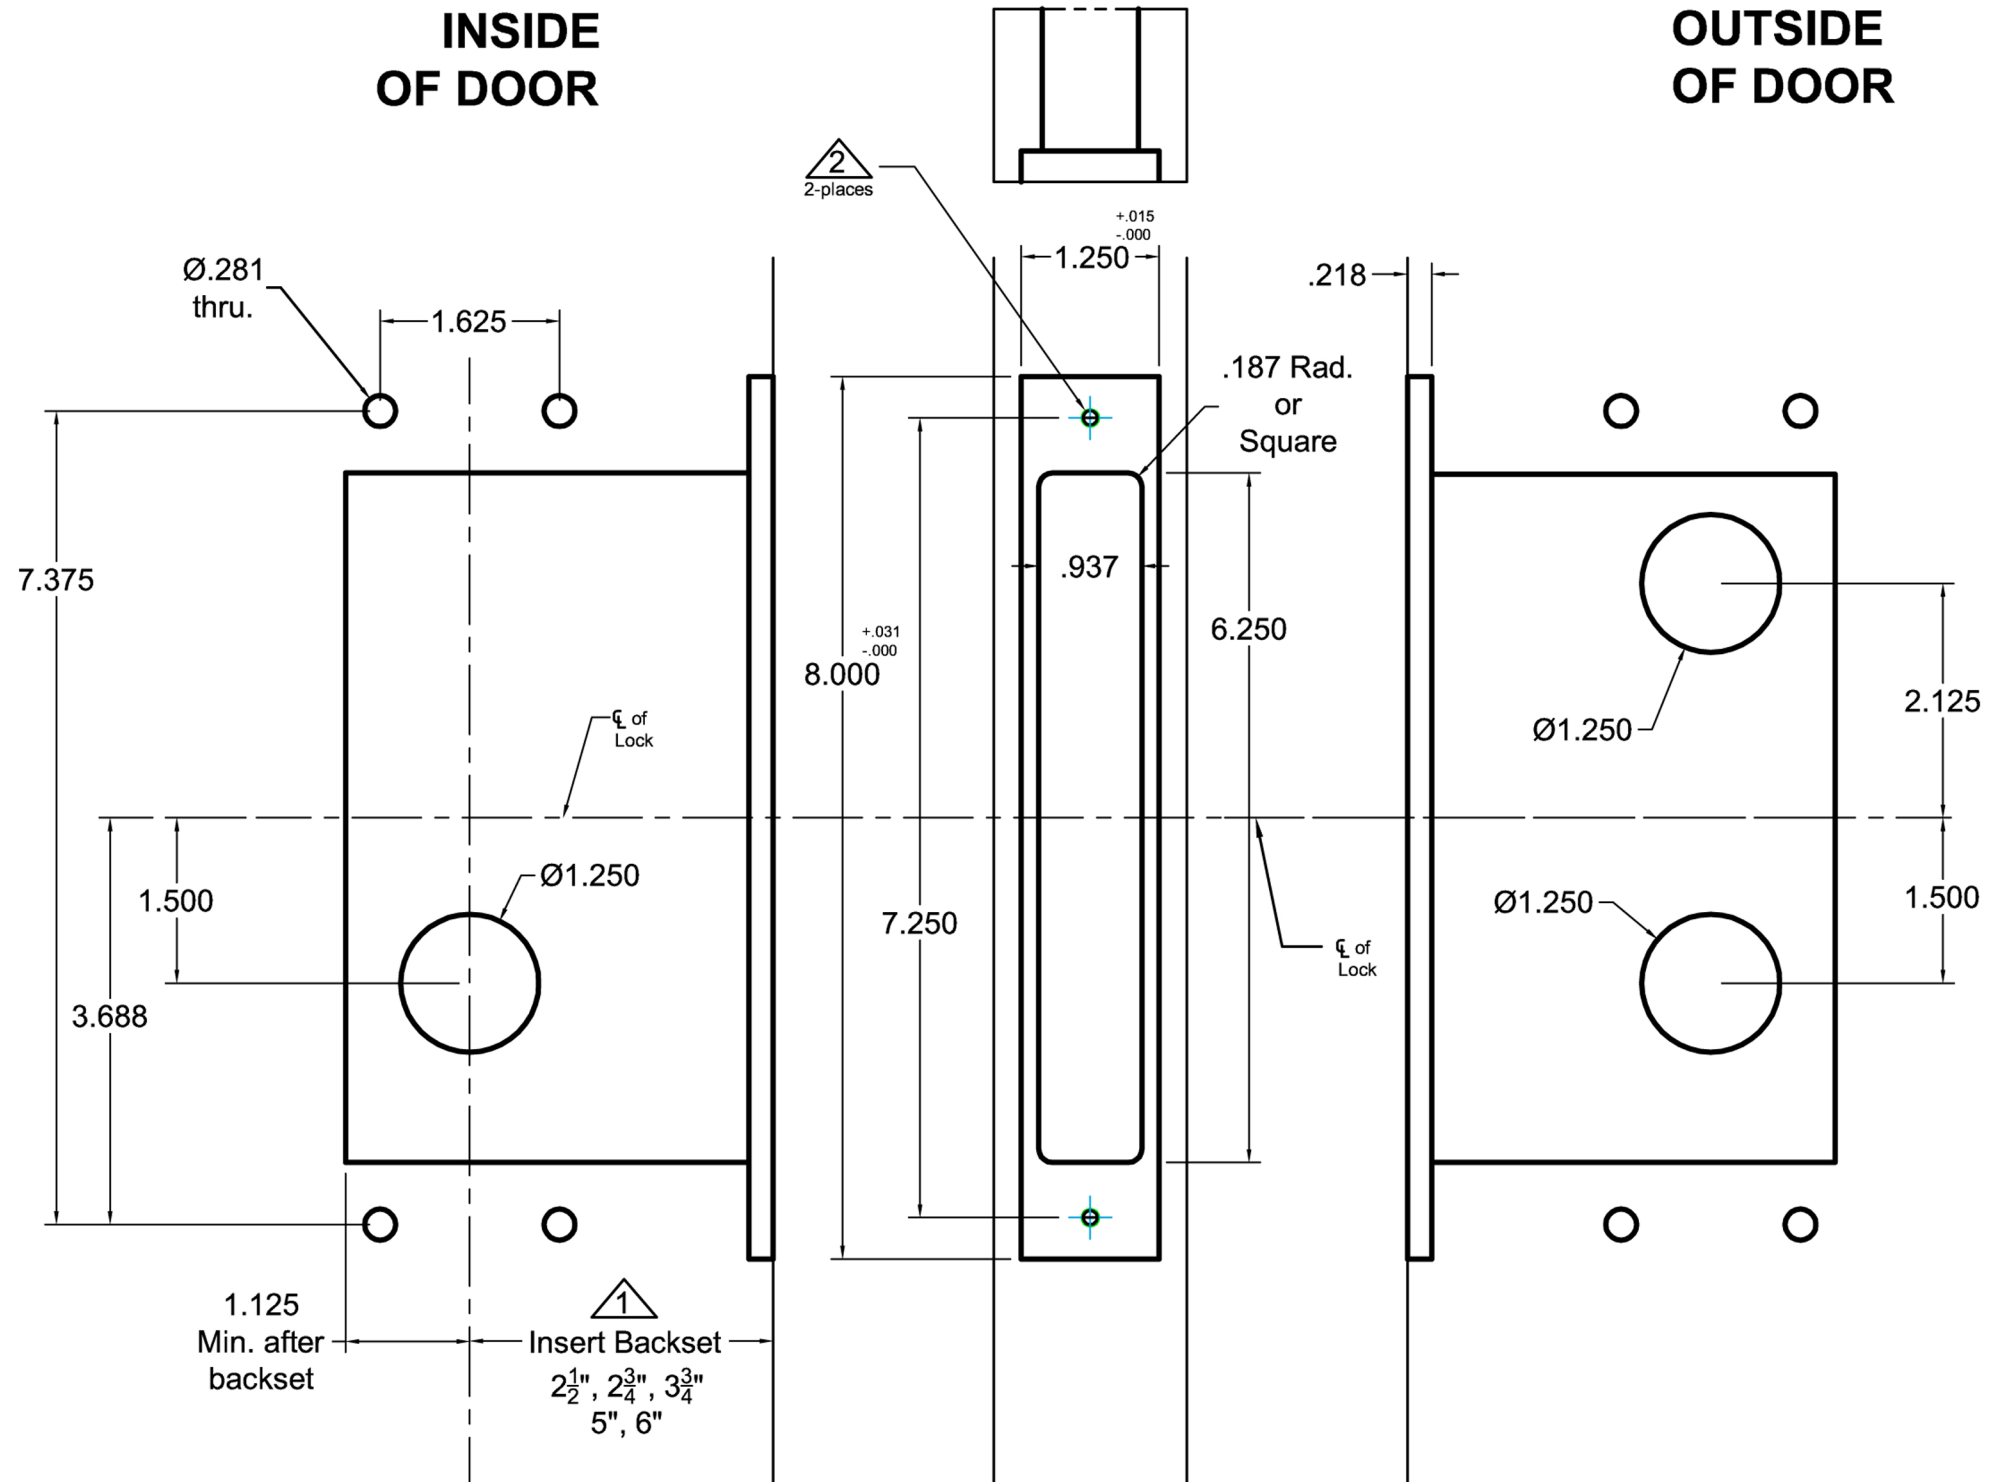

Notes:

- △ Insert backset here 2½", 2¾", 3¾", 5", or 6"
- △ Prep for #12 wood or 12-24 machine screws

Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- c) See catalog / spec sheets for additional lock details

ACCURATE
LOCK & HARDWARE
AMERICAN CRAFTED SINCE 1972

Standard 9100ADAL-3ST-
All Backsets

T-ALH.9100ADAL-3ST