


INSIDE OF DOOR

OUTSIDE OF DOOR

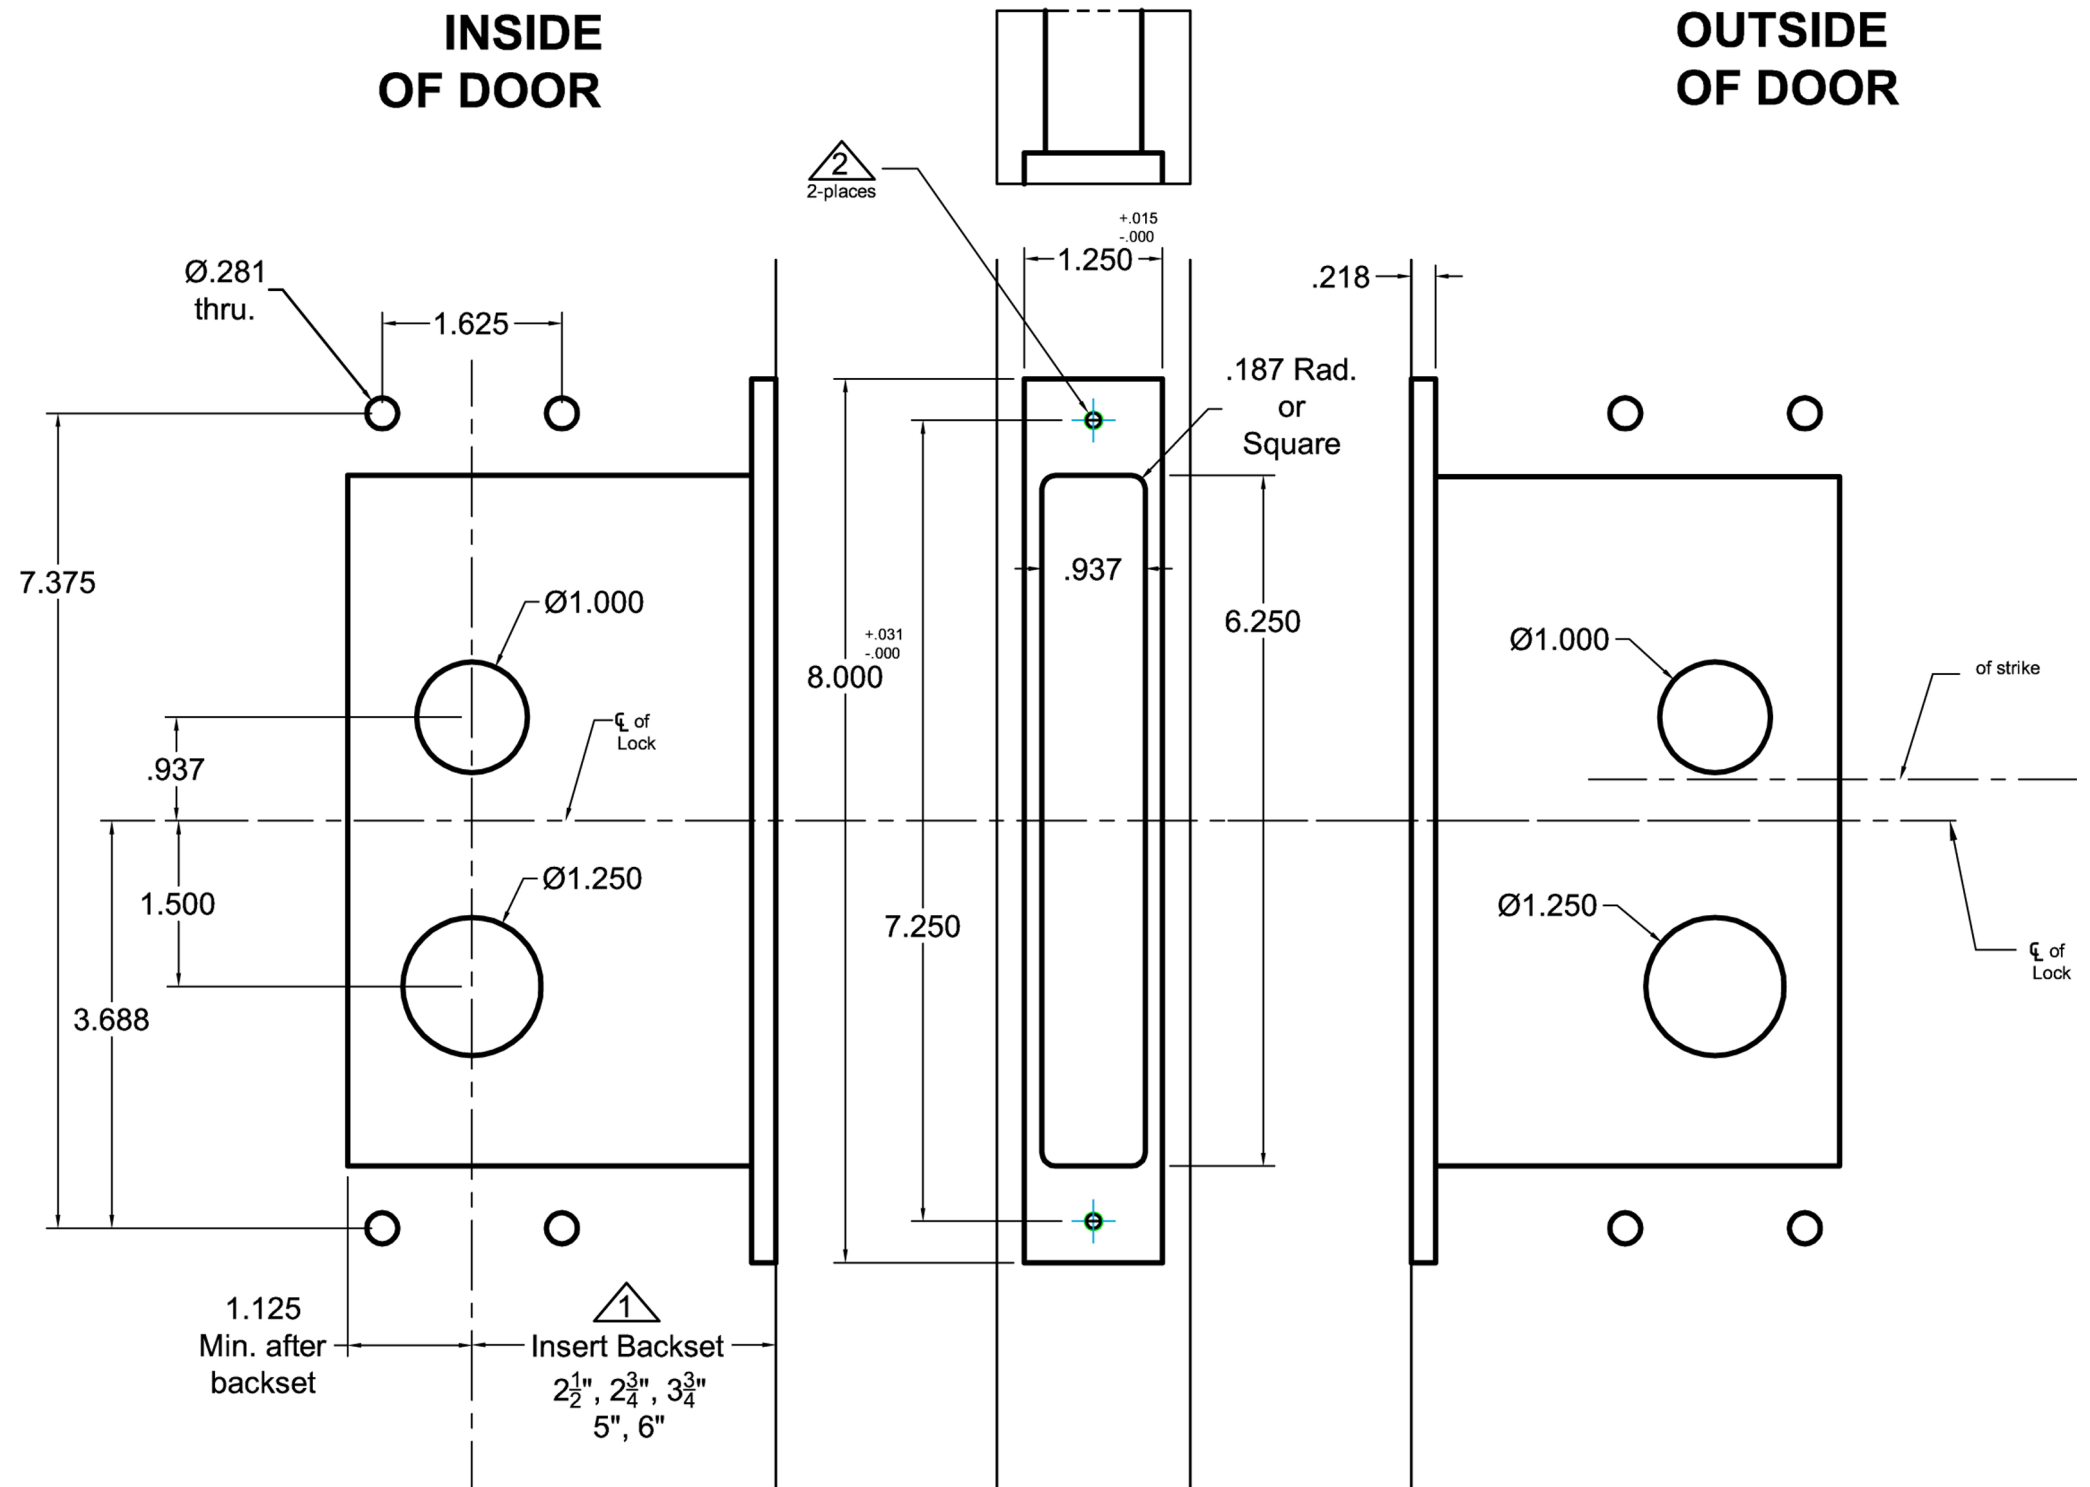

Notes:

- 1 Insert backset here $2\frac{1}{2}"$, $2\frac{3}{4}"$, $3\frac{3}{4}"$, $5"$, or $6"$
- 2 Prep for #12 wood or 12-24 machine screws

Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See catalog / spec sheets for additional lock details

ACCURATE
LOCK & HARDWARE
AMERICAN CRAFTED SINCE 1972

Standard 9100ADAL-5-
All Backsets

T-ALH.9100ADAL-5