

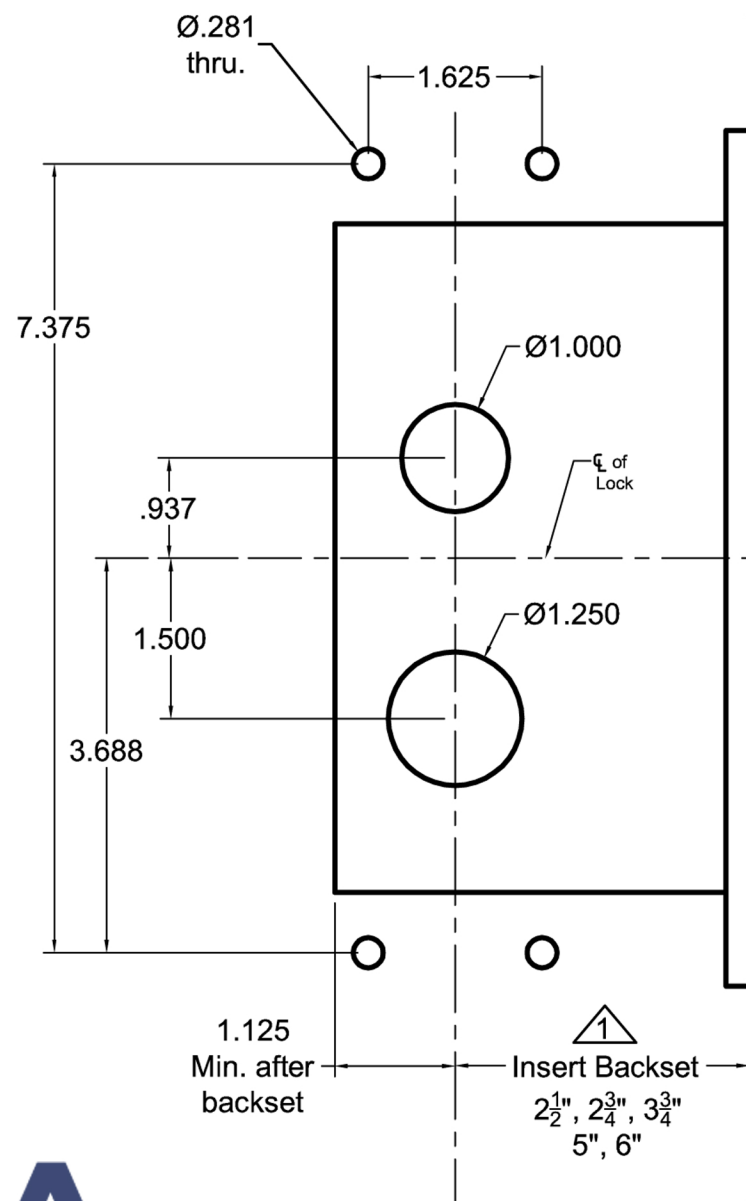


INSIDE OF DOOR

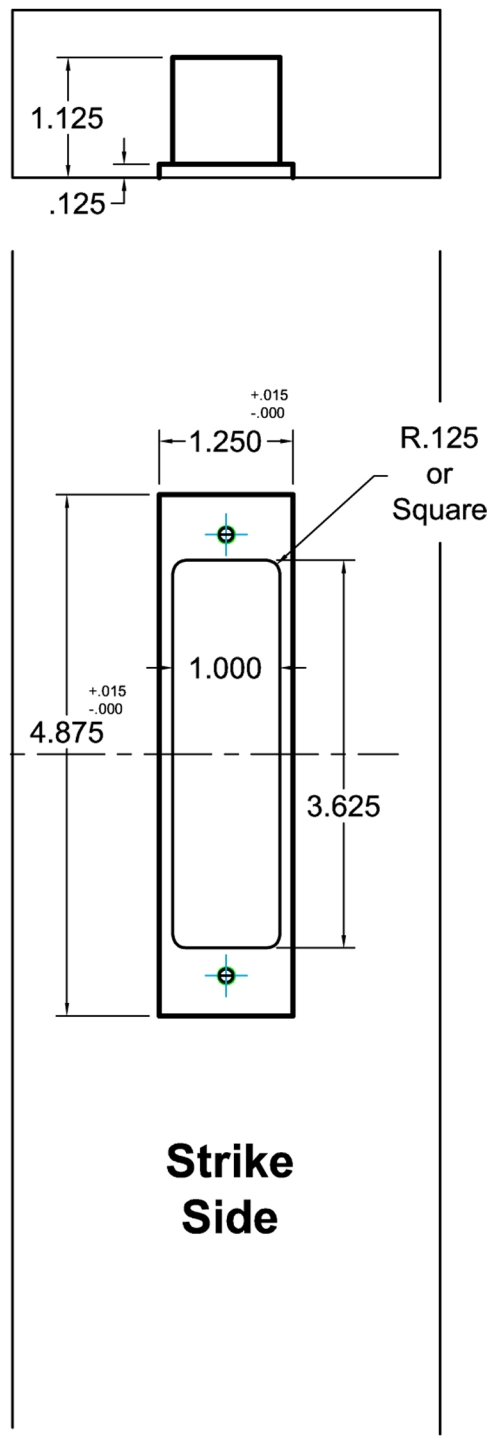

OUTSIDE OF DOOR

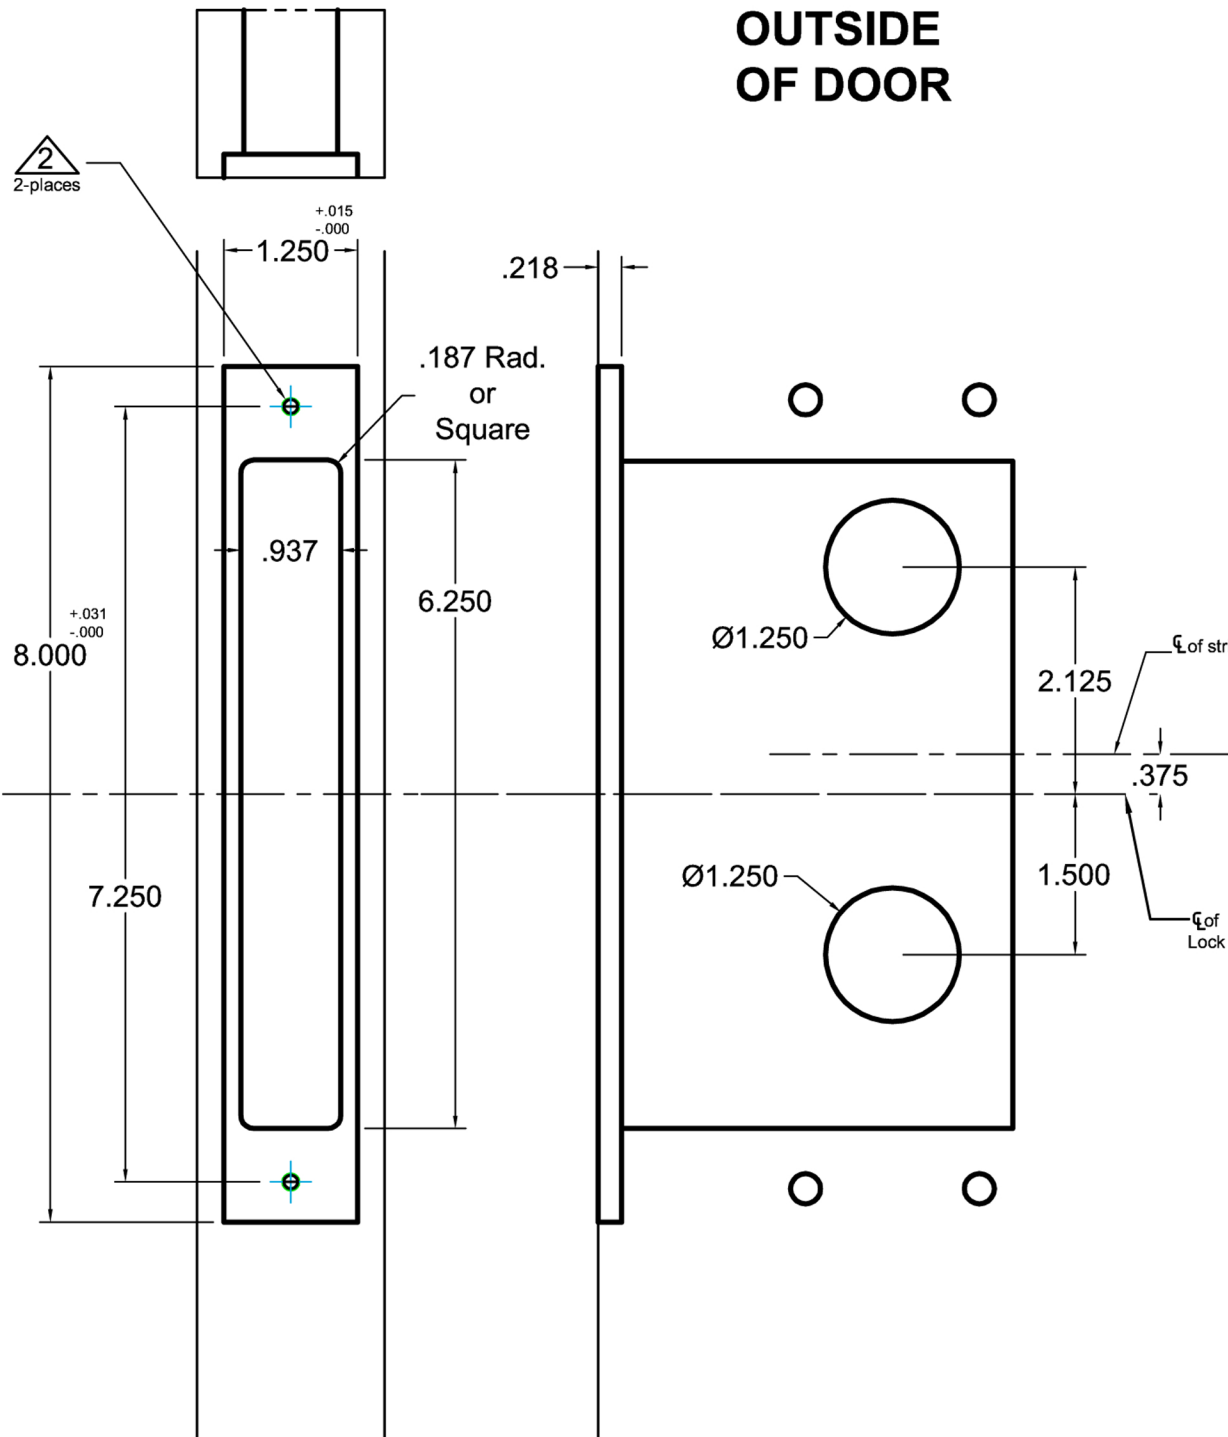

Notes:

- ▲ Insert backset here $2\frac{1}{2}$ ", $2\frac{3}{4}$ ", $3\frac{3}{4}$ ", 5", or 6"
- ▲ Prep for #12 wood or 12-24 machine screws
- ▲ Centerline of strike is $\frac{3}{8}$ " above centerline of lock

Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See catalog / spec sheets #SL9153ADA for additional lock details



Standard SL9153ADA
All Backsets

T-ALH.SL9153ADA