


Lock Functions	Inside of door			Outside of door		
	"A" knob/lever = 3/4" dia.			"D" knob/lever = 3/4" dia.		
	"B" thumbturn = 5/8" dia.			"E" ER or indicator = 5/8" dia.		
	"C" cylinder = 1 1/4" dia.			"F" cylinder = 1 1/4" dia.		
8600ADL	●			●		
8601						●
8602			●			●
8603		●				●
8622	●		●	●		●
8624	●	●		●		●
8625	●			●		●
8639	●	●		●	○	
8648	●	●		●		●
8656	●			●		●
8659	●			●		●
● Required Holes						
○ Optional Holes						

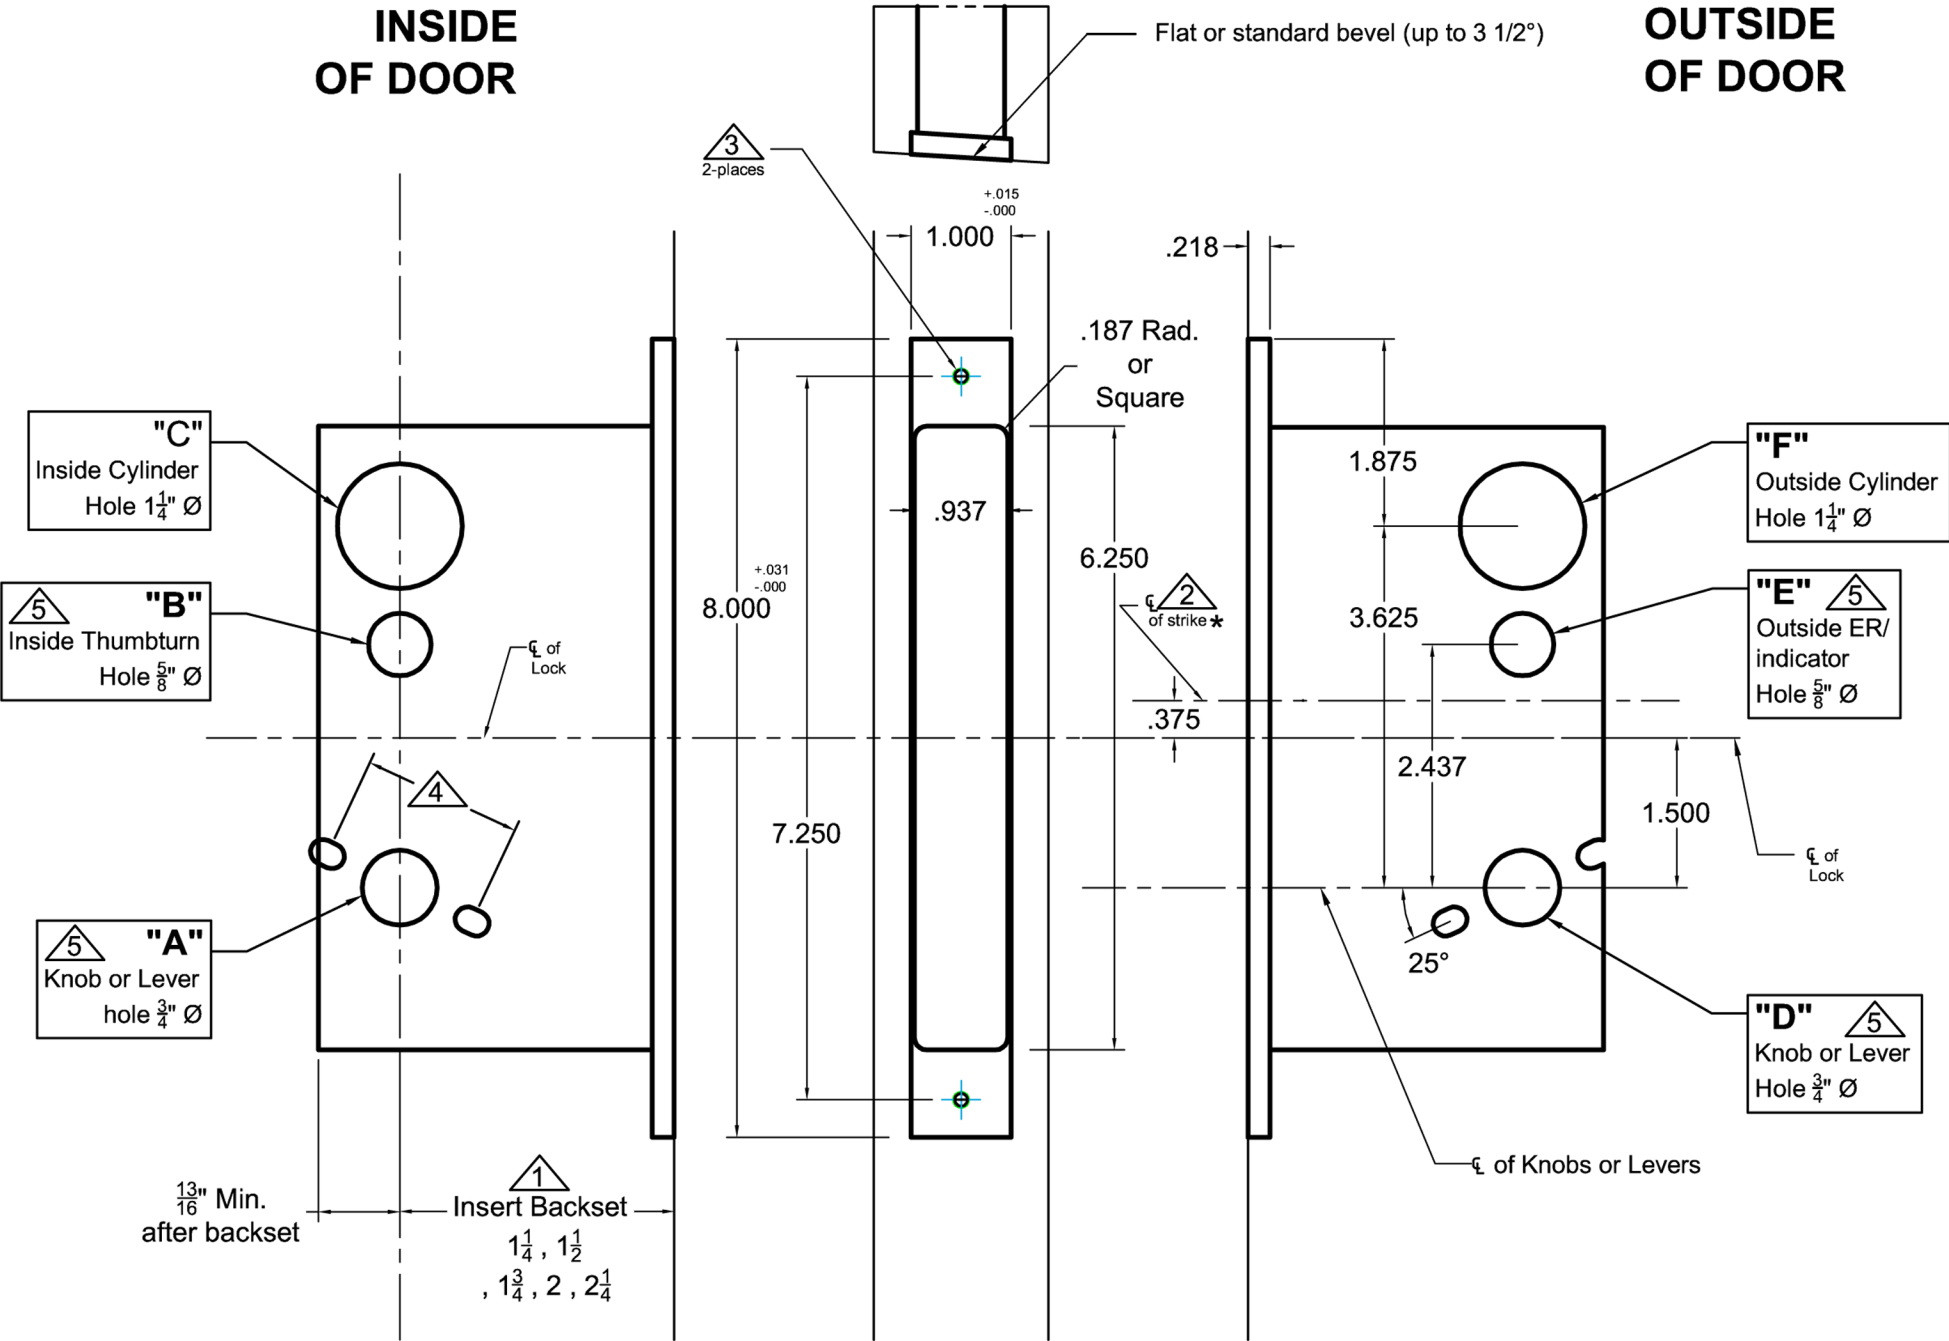

Notes:

- 1 Insert backset here 1 1/4", 1 1/2", 1 3/4", 2", 2 1/4"
- 2 ASA strike details on template # T-ALH.ASA.STK (*use template #T-ALH.ASADB.STK for #s 8601,8602 and 8603)
- 3 Prep for #12 wood or 12-24 machine screws
- 4 Thru bolting holes **ONLY** if required. See trim manufacturers standard template for details.
Accurate lock's accommodates 1 1/2" to 1 11/16" center to centers and up to 1/4" dia. post.
If there are any additional questions about the thru-bolting, please contact our office.
- 5 Knob, thumbturn and ER holes may vary from different trim manufacturers. Please refer to their templates to confirm these dimensions.

Additional Notes:

- a) **Responsibility**: Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) Please contact us if a double lip strike is needed - for a proper template
- c) See catalog / spec sheets for additional lock details



Standard 8600 Lever x Lever or
Knob x Knob- All Backsets

T-ALH.8600.LL