


**INSIDE
OF DOOR**

**OUTSIDE
OF DOOR**

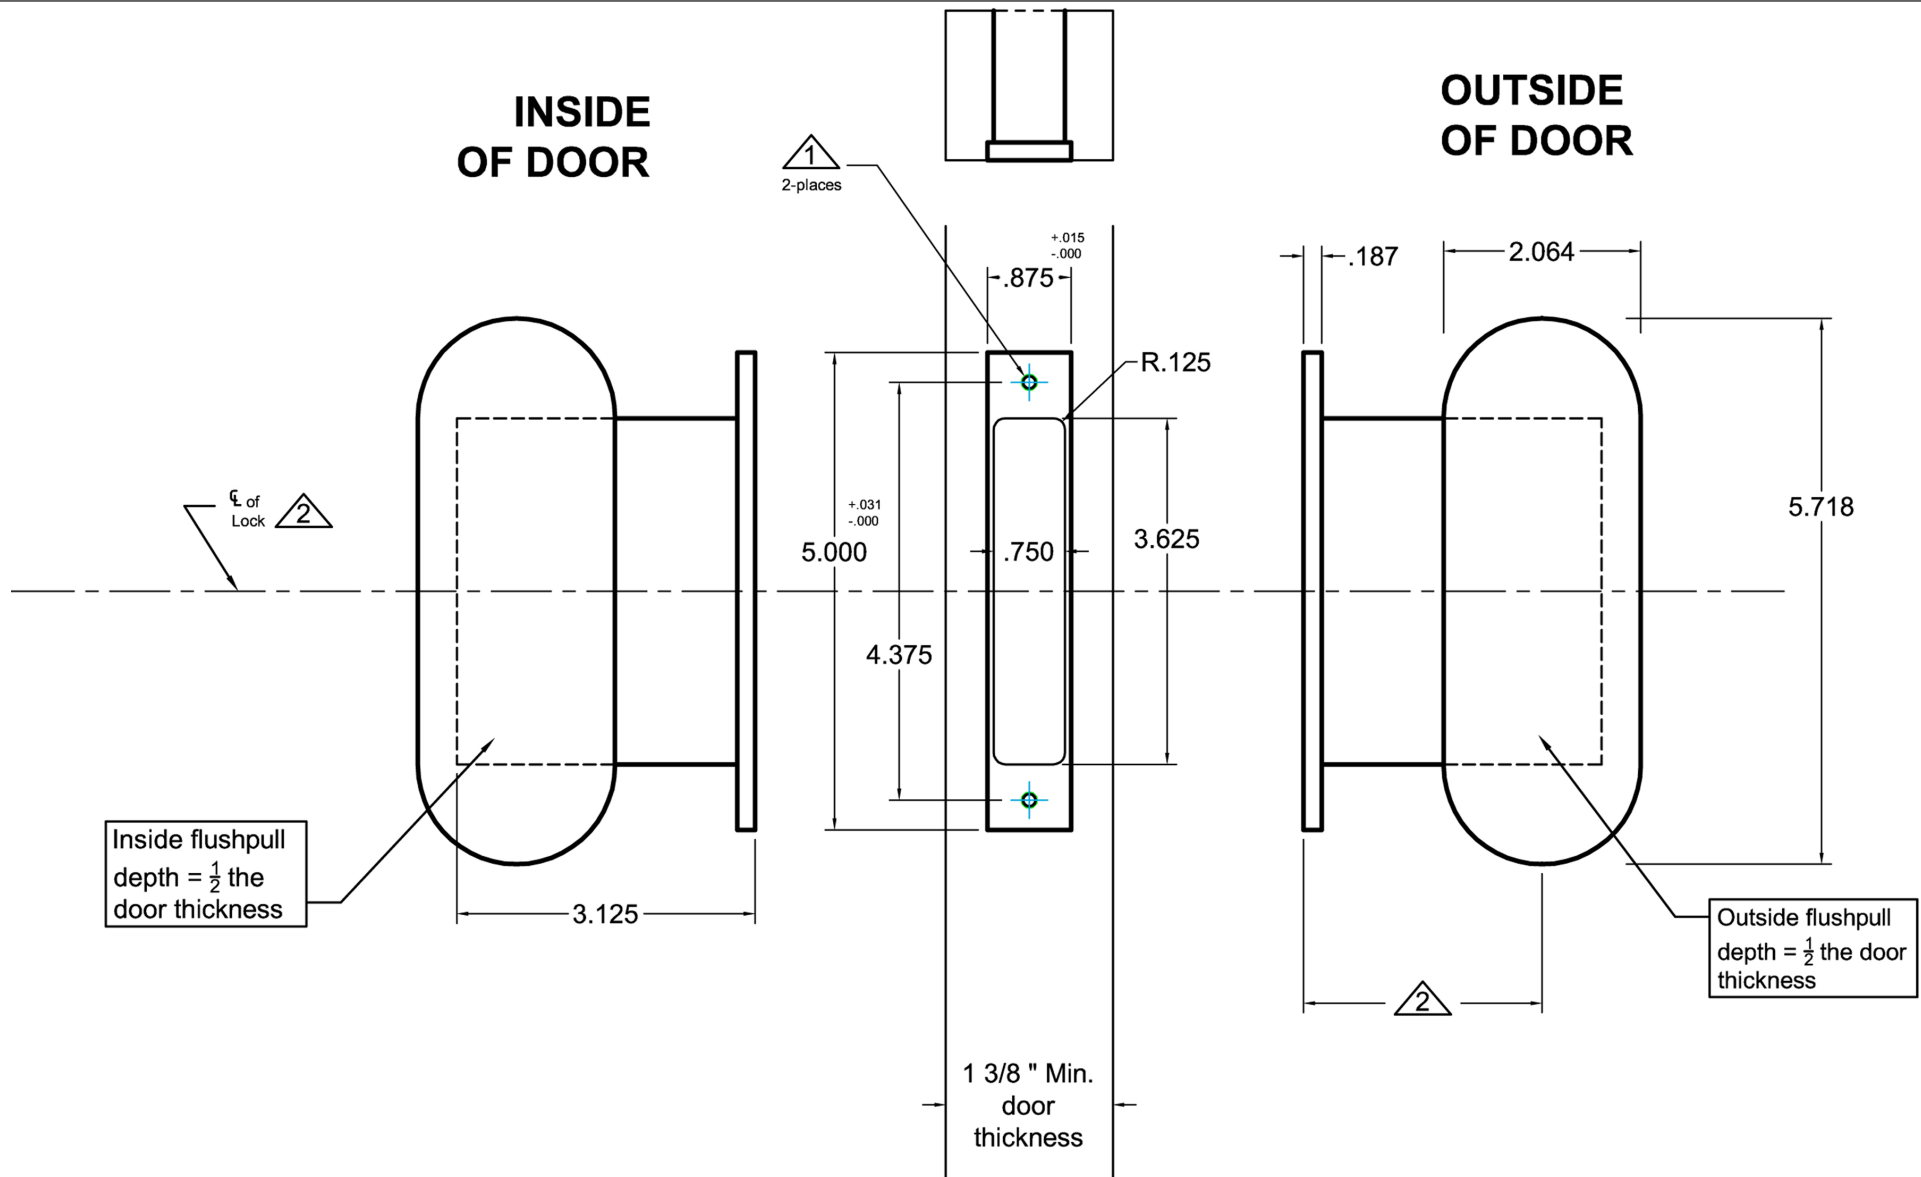

Notes:

- 1 (triangle symbol) Prep for #8 wood or 8-32 machine screws.
- 2 (triangle symbol) Horizontal and vertical spacing of the flush pulls is up to the end user. However, we do suggest to line up the backset with the other locks on your project, i.e. 2", 2 1/2", 2 3/4", 3 3/4", 5" and 6"

Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See Spec.2000/2000Q and Spec.CA2002/CN2002/CO2002 for additional details.