



INSIDE OF DOOR

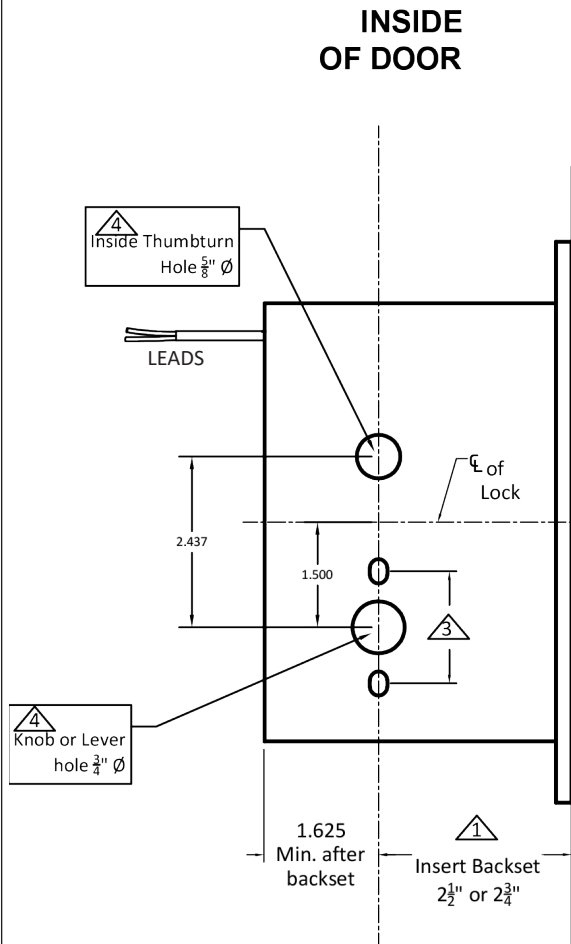

OUTSIDE OF DOOR

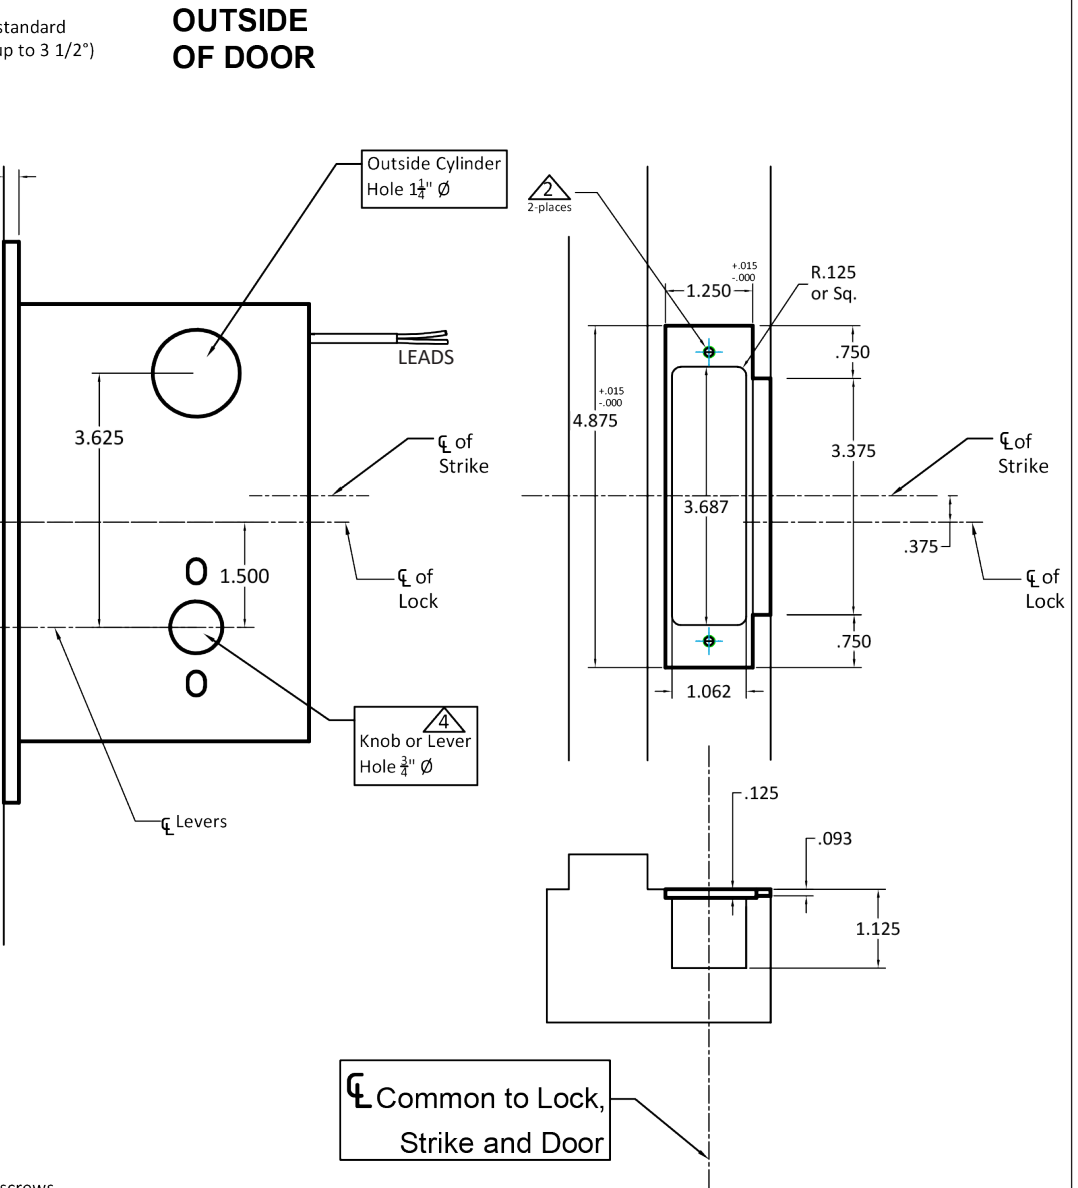

Notes:

- ▲ Insert backset here $2\frac{1}{2}"$ or $2\frac{3}{4}"$
- ▲ Prep for #12 wood or 12-24 machine screws
- ▲ Thru bolting holes **ONLY** if required. See trim manufacturers standard template for details.
Accurate lock's accommodates $1\frac{1}{2}"$ to $1\frac{11}{16}"$ center to centers and up to $\frac{1}{4}"$ dia. post.
If there are any additional questions about the thru-bolting, please contact our office.
- ▲ Knob / Lever / thumbturn holes may vary from different trim manufacturers. Please refer to their templates to confirm these dimensions.

Additional Notes:

- a) **Responsibility**: Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) Please contact us if a double lip strike is needed - for a proper template.
- c) See spec sheets for additional lock details.