

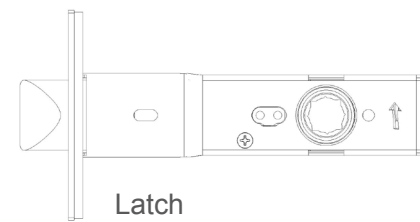



T2200 STANDARD BORE INSTALLATION INSTRUCTIONS

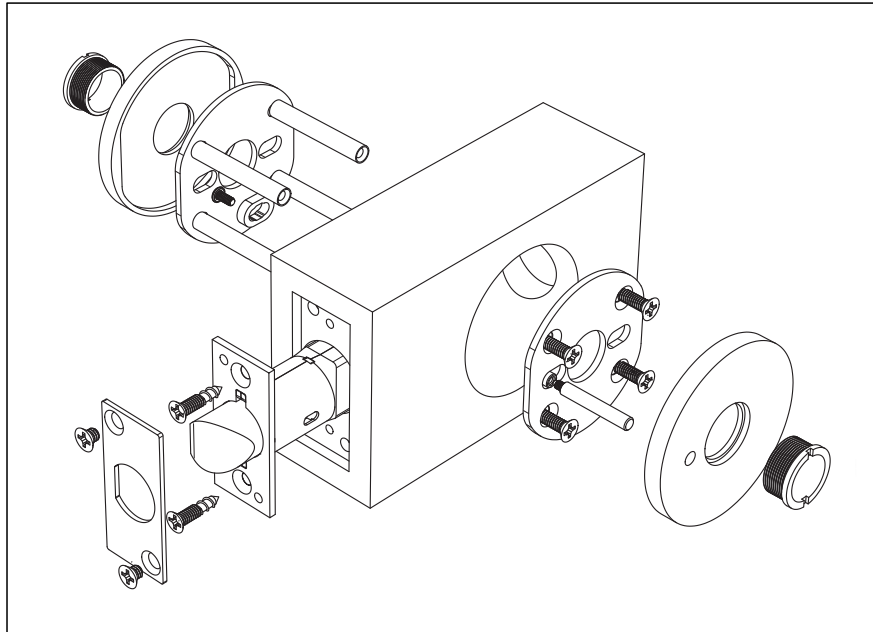


Latch




Faceplate

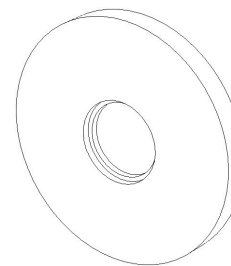


Passage
Rose

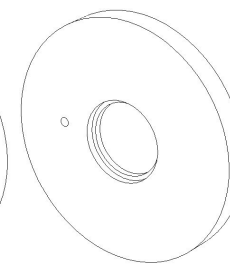


Exterior
Privacy Rose

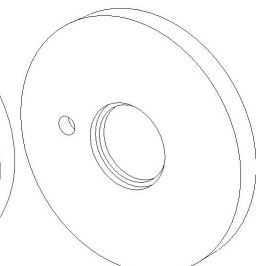


Interior
Privacy Rose

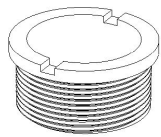


Locknut (2x)

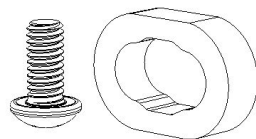


Privacy Keeper

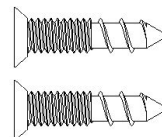


#8 Combo
Screws

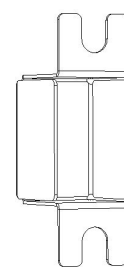


Dustbox

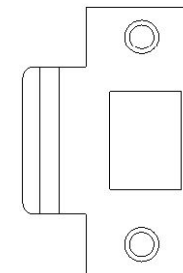

Strike

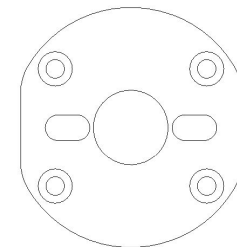


Subrose (2x)

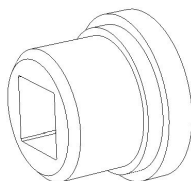

Alignment
Bushing (2x)



Privacy Pin



Faceplate
Screws




Subrose Screws

STRIKE INSTALLATION

BEFORE STARTING ENSURE DOOR AND JAMB ARE PREPARED IN ACCORDANCE WITH ACCURATE 2200 STANDARD BORE TEMPLATE

STEP 1

- Install strike and dustbox, secure with two #8 combo screws.

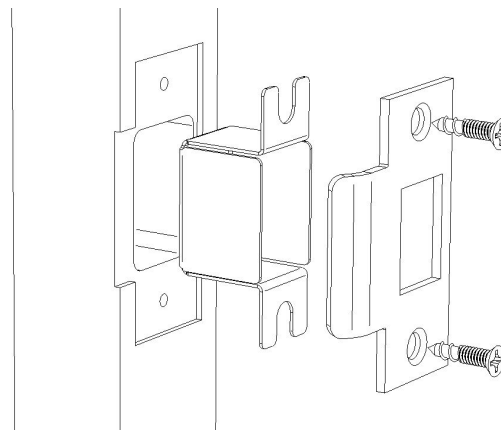


LATCH INSTALLATION

STEP 1

- Locate arrow on rear of latch body. Latch installs with arrow pointing up.
- Determine which side of latch will be the exterior secure locked side.


TIPS

- Mark the exterior side with permanent marker for future reference.
- The latch bevel will be changed to match the door swing later in the installation.

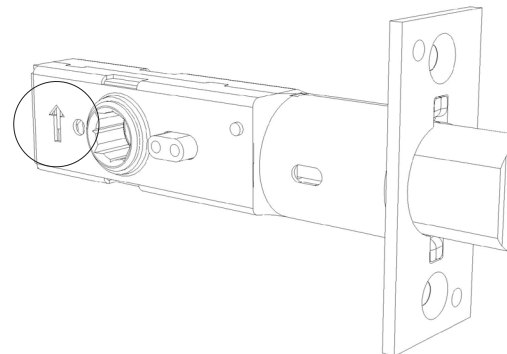


STEP 2 - PRIVACY ONLY

- On the exterior side of the latch, slide the privacy keeper over the locking bar.
- Secure keeper in place with supplied screw.

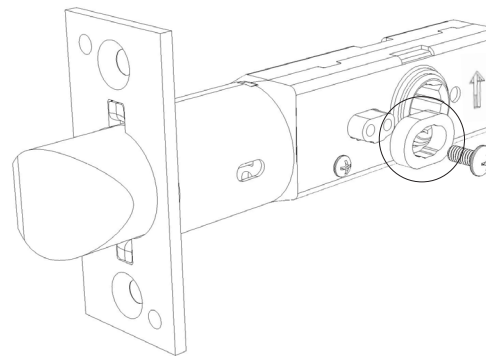

STEP 3




- Insert latch into prepared door, ensuring arrow on rear of case is pointing up.
- Secure with #8 Combination screws.

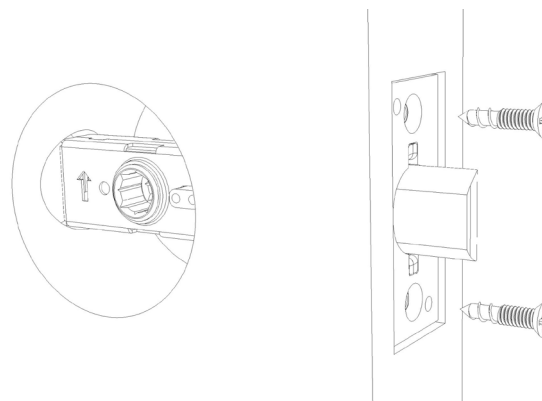

LATCH INSTALLATION



STEP 4

- From the exterior side, insert spindle through latch hubs.
- Make sure that the pockets of each spindle half are oriented correctly to the lever/knob set screw location.

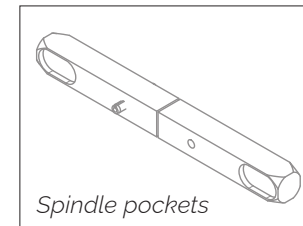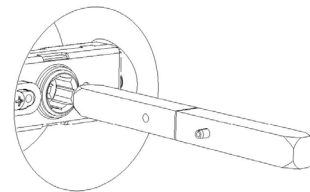


STEP 5

- Install interior and exterior sub roses and secure with 4 #8-32 screws, do not fully tighten screws, the subroses should move easily on the face of the door.
- Thread both locknuts halfway into the subroses.

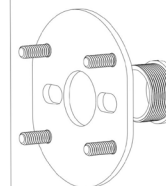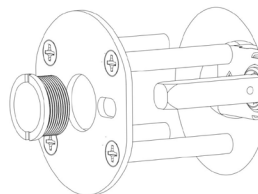

STEP 6

- On both sides install the spindle alignment bushings, ensuring they are fully seated up against the locknuts.
- Using two #2 phillips screwdrivers fully tighten the 4 #8-32 screws installed in Step 5.
- Remove alignment bushings and discard.
- Remove locknuts from subrose.




LATCH INSTALLATION

STEP 7

- Install interior and exterior roses and secure in place with locknuts.


PRIVACY ONLY

- Ensure holes in rose are towards the edge of door and that the interior and exterior roses are on the corresponding side of the door.

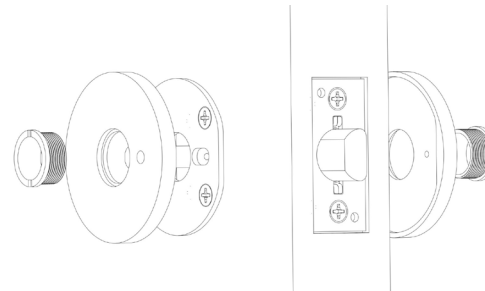

STEP 8 - PRIVACY ONLY

- Insert privacy pin through hole on interior rose and thread into latch.

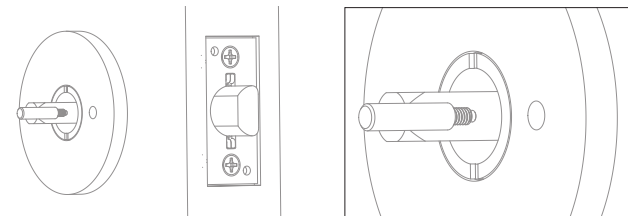


STEP 9

- Install lever/knob trim and plastic washer.
- Ensure levers/knobs can rotate independently of each other.
- Secure trim with set screws using a 1/8" hex key.

PRIVACY ONLY

- Check operation of privacy pin before securing trim. Push in pin and make sure outside lever is locked. Operate inside handle to make sure pin pops back out and unlocks the outside lever

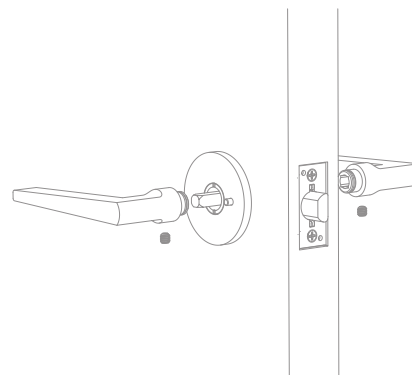

STEP 10

- Rotate latch so beveled side faces strike.
- Install faceplate and secure with 2 #8 faceplate screws.

