


INSIDE
OF DOOR

OUTSIDE
OF DOOR

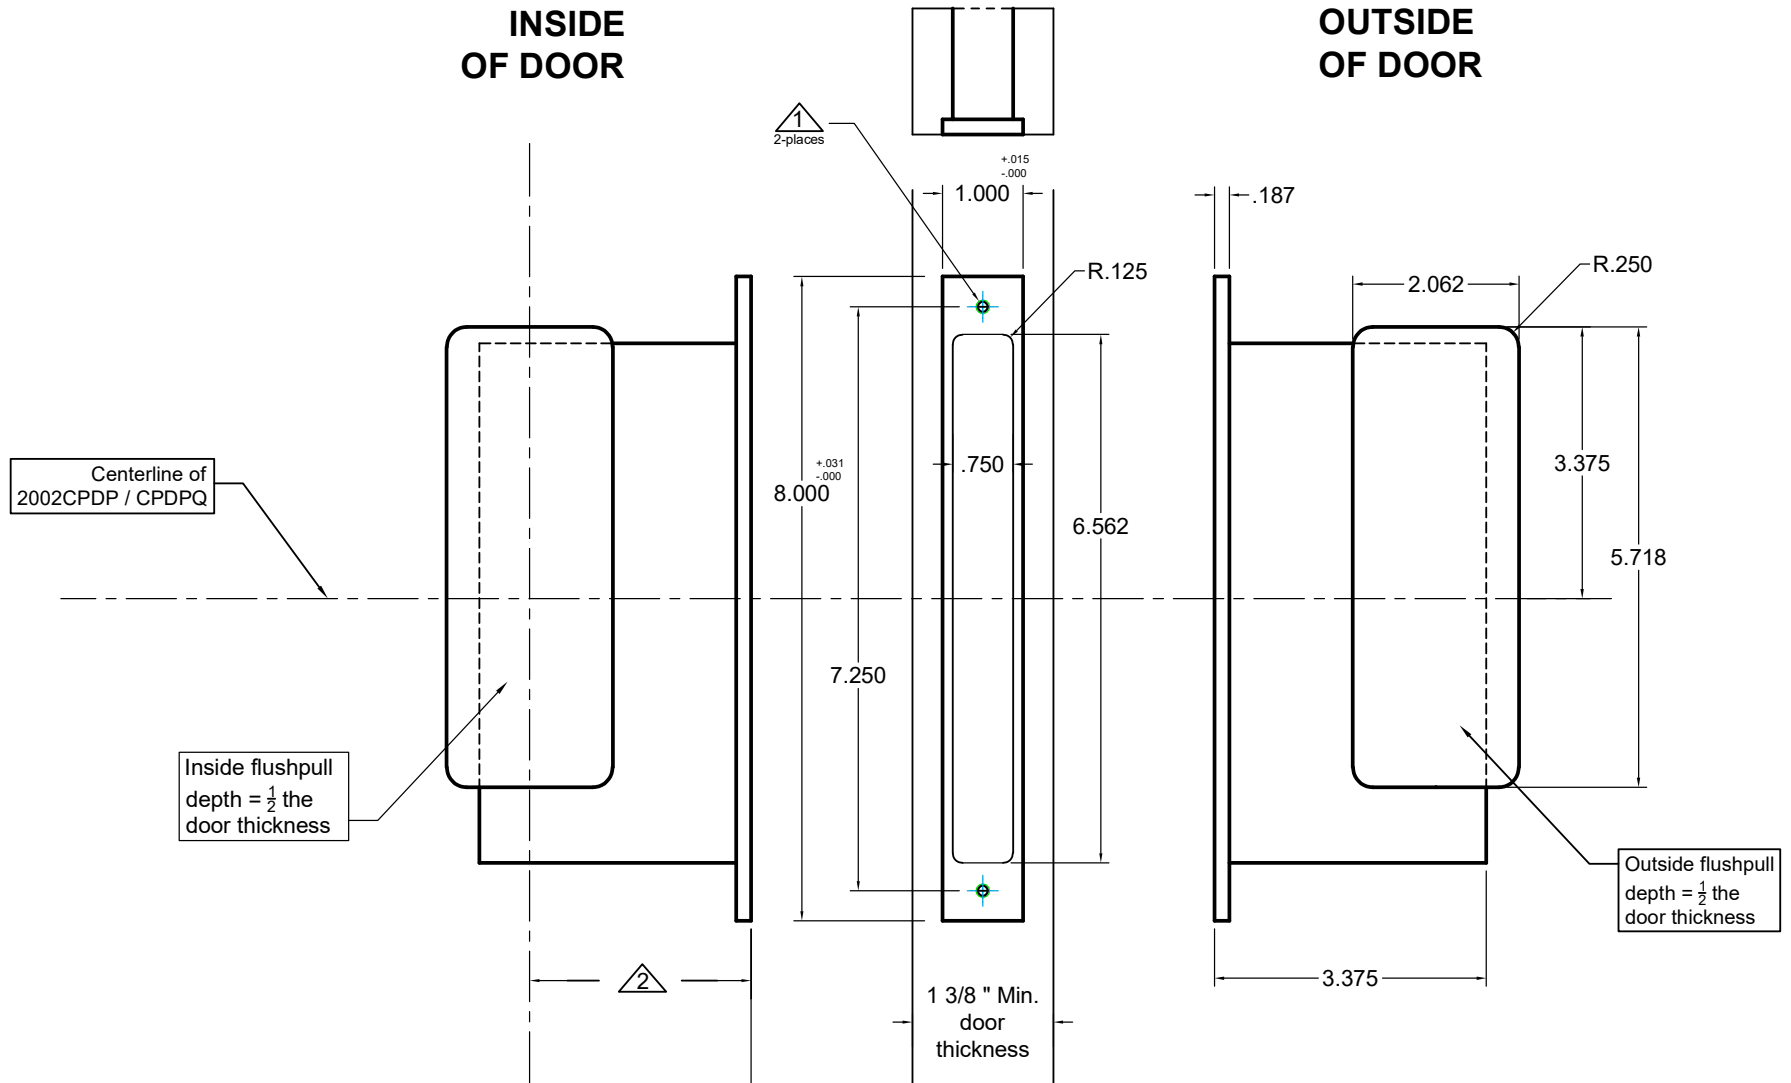

Notes:

- ⚠ Prep for #8 wood or 8-32 machine screws.
- ⚠ Horizontal and vertical spacing of the flush pulls is up to the end user. However, we do suggest to line up the backset with the other locks on your project, i.e. 2", 2 $\frac{1}{2}$ ", 2 $\frac{3}{4}$ ", 3 $\frac{3}{4}$ ", 5" and 6"

Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See catalog / spec sheets for additional lock details

ACCURATE
LOCK & HARDWARE
AMERICAN CRAFTED SINCE 1972

Standard 2002CPDP/2002CPDP-Q
Quiet Pocket Door Edge Pull S2002

T-ALH.2002CPDP.CPDP-Q.S