


## INSIDE OF DOOR

## OUTSIDE OF DOOR

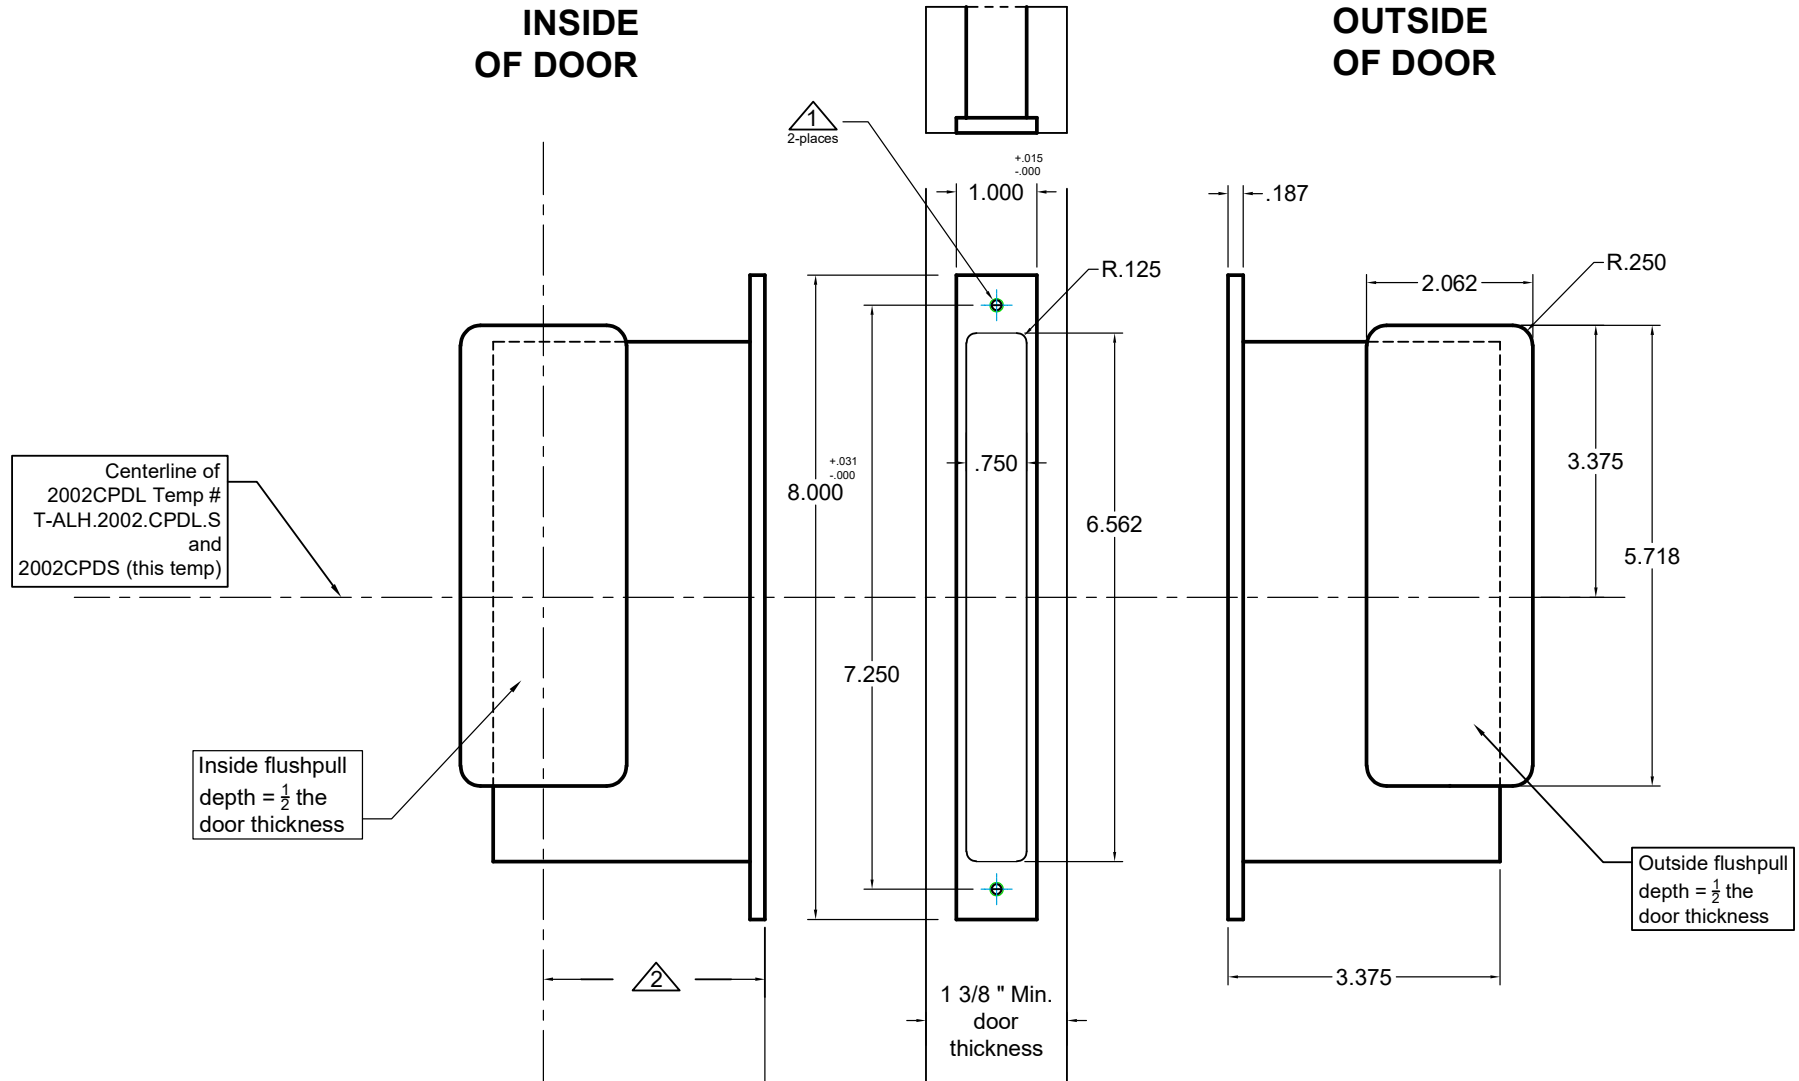

### Notes:

- △ Prep for #8 wood or 8-32 machine screws.
- △ Horizontal and vertical spacing of the flush pulls is up to the end user. However, we do suggest to line up the backset with the other locks on your project, i.e. 2", 2 $\frac{1}{2}$ ", 2 $\frac{3}{4}$ ", 3 $\frac{3}{4}$ ", 5" and 6"

### Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or reinforcement for proper installation of hardware shown.
- b) See catalog / spec sheets for additional lock details

Standard 2002CPDS/CPDS-Q Quiet  
Pocket Door Strike with Integrated Edge  
Pull CS2002

T-ALH.2002CPDS.CPDS-Q.CS