



Recommended ADA Location  
from finished floor to the  
center-line of the lock is  $41\frac{1}{2}$ "

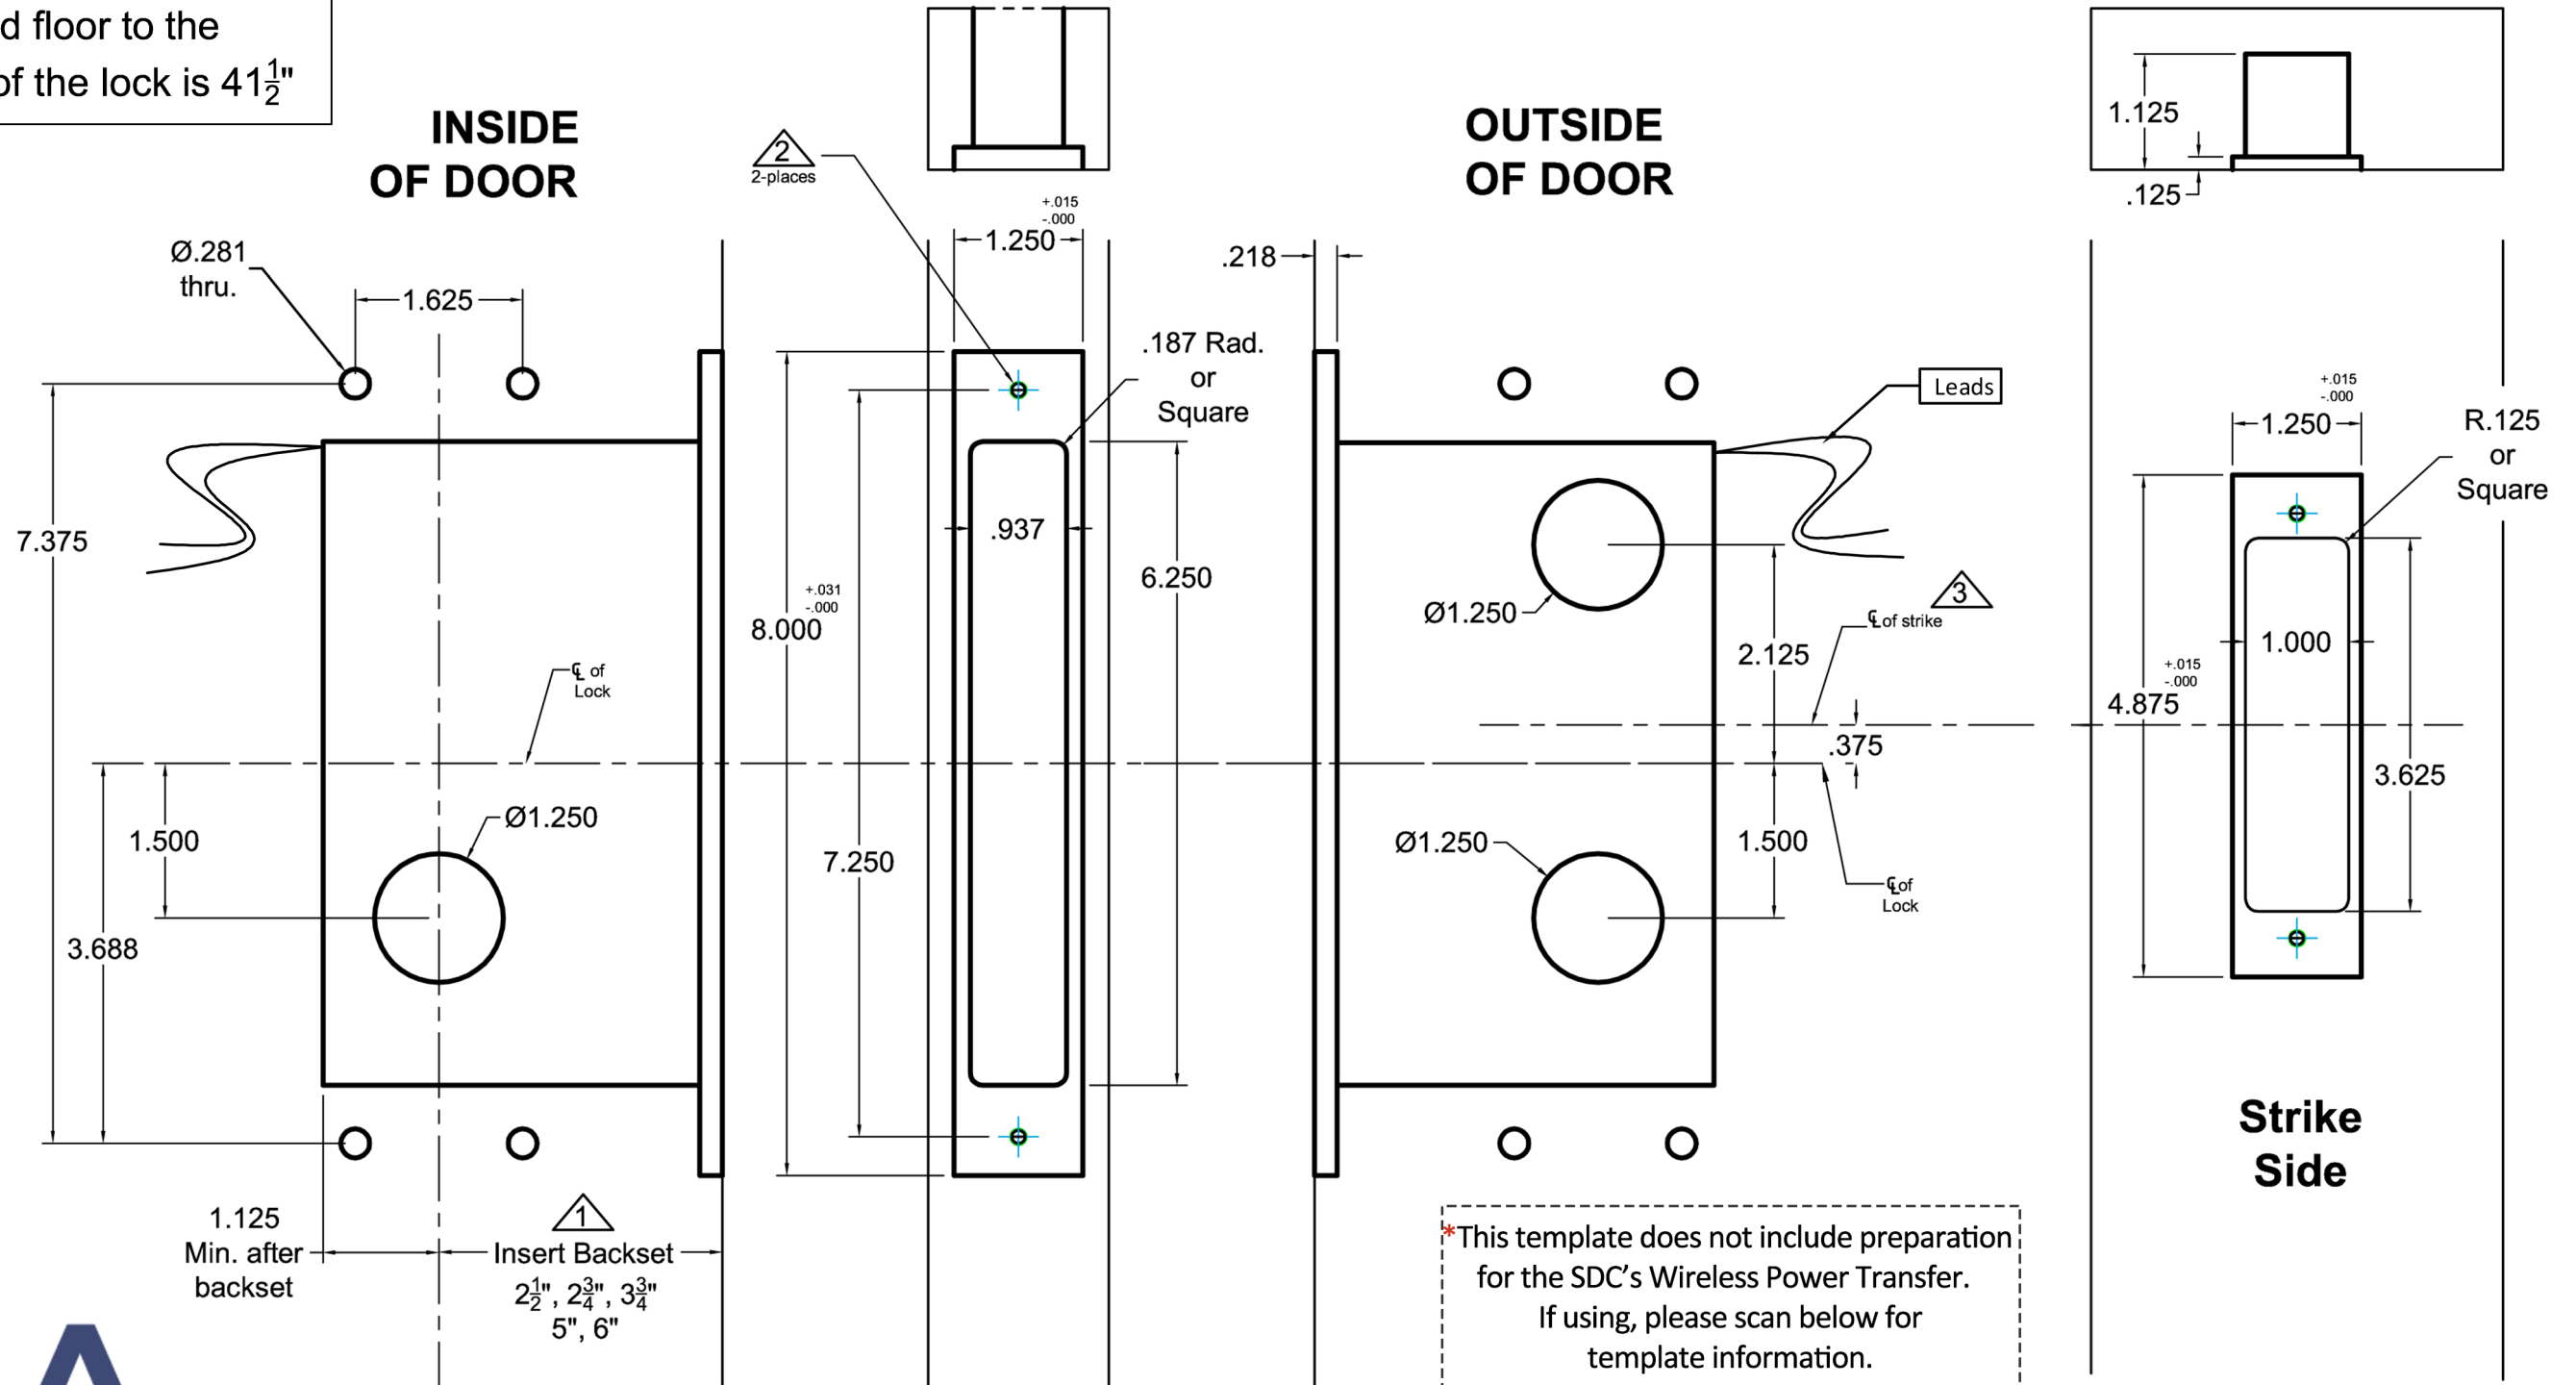

\*This template does not include preparation for the SDC's Wireless Power Transfer. If using, please scan below for template information.




- Notes:**
- ▲ Insert backset here  $2\frac{1}{2}$ ",  $2\frac{3}{4}$ ",  $3\frac{3}{4}$ ", 5", or 6"
  - ▲ Prep for #12 wood or 12-24 machine screws
  - ▲ Centerline of strike is  $\frac{3}{8}$ " above centerline of lock

- Additional Notes:**
- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
  - b) See catalog / spec sheets #SL9145ADA for additional lock details

Template for SL-M9159E with 1E  
Escutcheons Template- All Backsets

T-ALH.SL-M9159E.1E