



Recommended ADA Location
from finished floor to the
center-line of the lock is $41\frac{1}{2}$ "

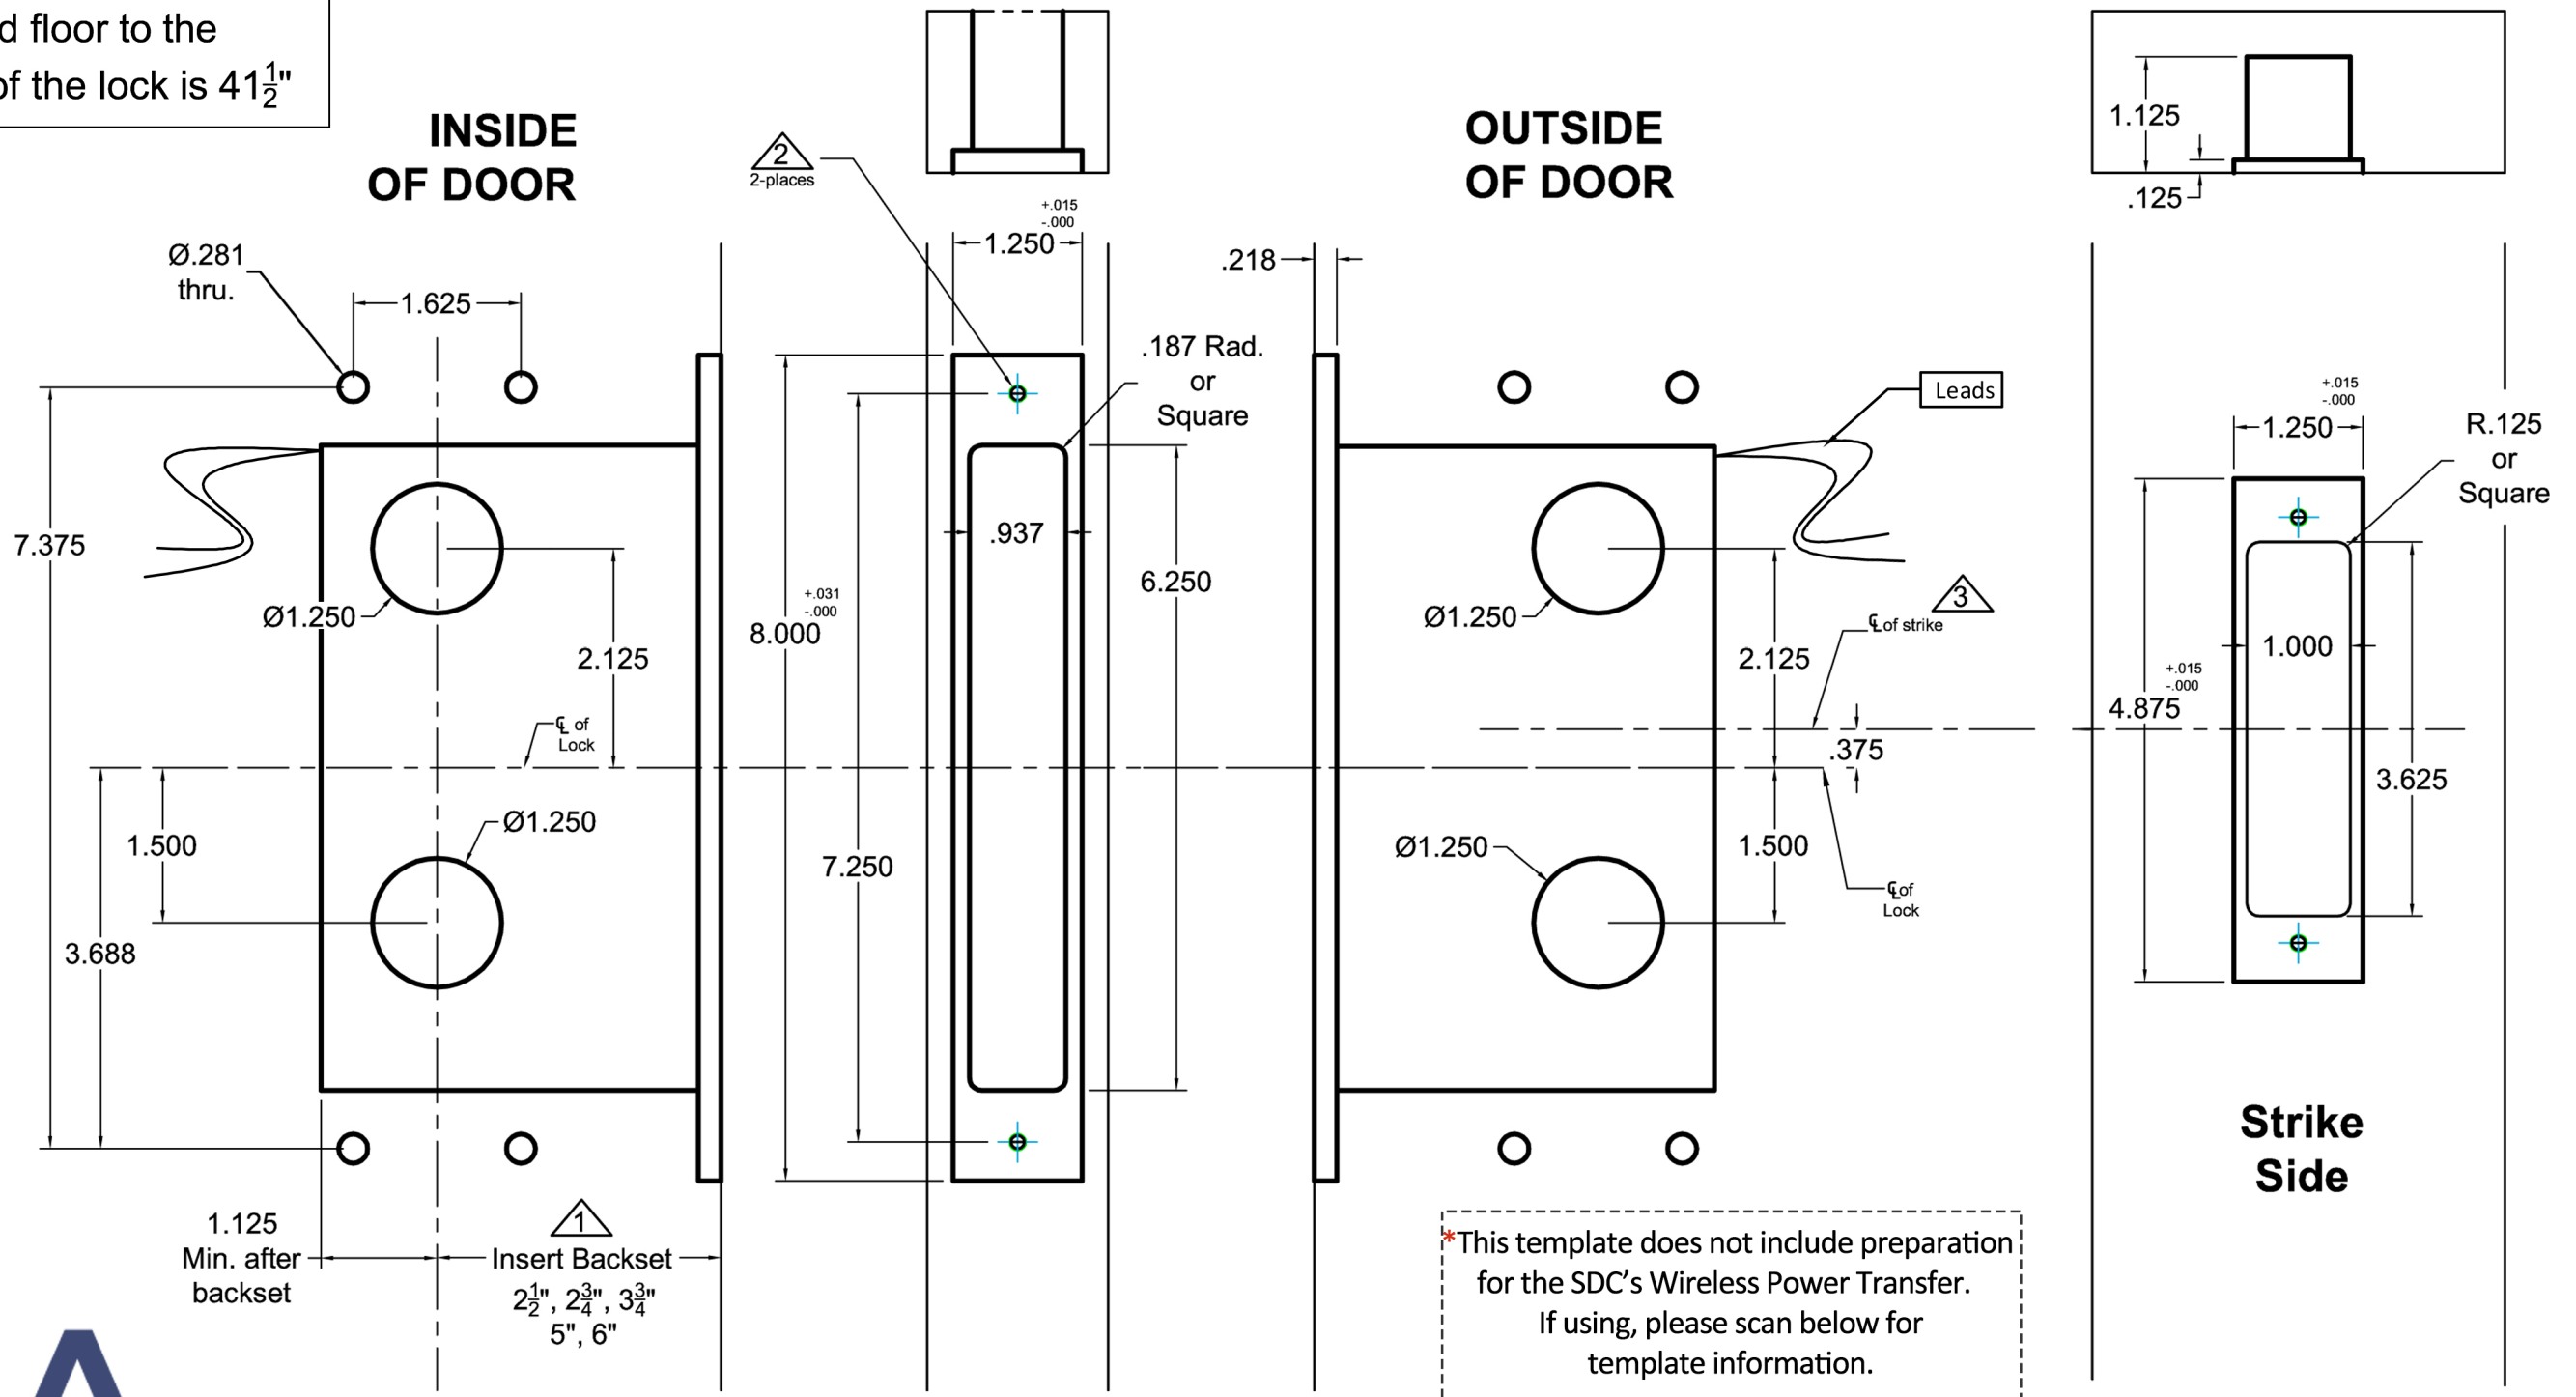

- Notes:**
- ① Insert backset here $2\frac{1}{2}$ ", $2\frac{3}{4}$ ", $3\frac{3}{4}$ ", 5", or 6"
 - ② Prep for #12 wood or 12-24 machine screws
 - ③ Centerline of strike is $\frac{3}{8}$ " above centerline of lock

- Additional Notes:**
- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
 - b) See catalog / spec sheets #SL9145ADA for additional lock details

*This template does not include preparation for the SDC's Wireless Power Transfer. If using, please scan below for template information.

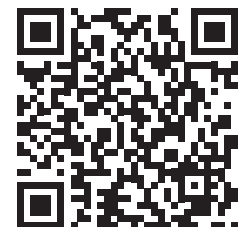

Template for SL-M9158E with 1E Escutcheons Template- All Backsets

T-ALH.SL-M9158E.1E