


Recommended ADA Location
from finished floor to the
center-line of the lock is $41\frac{1}{2}$ "

**INSIDE
OF DOOR**

**OUTSIDE
OF DOOR**

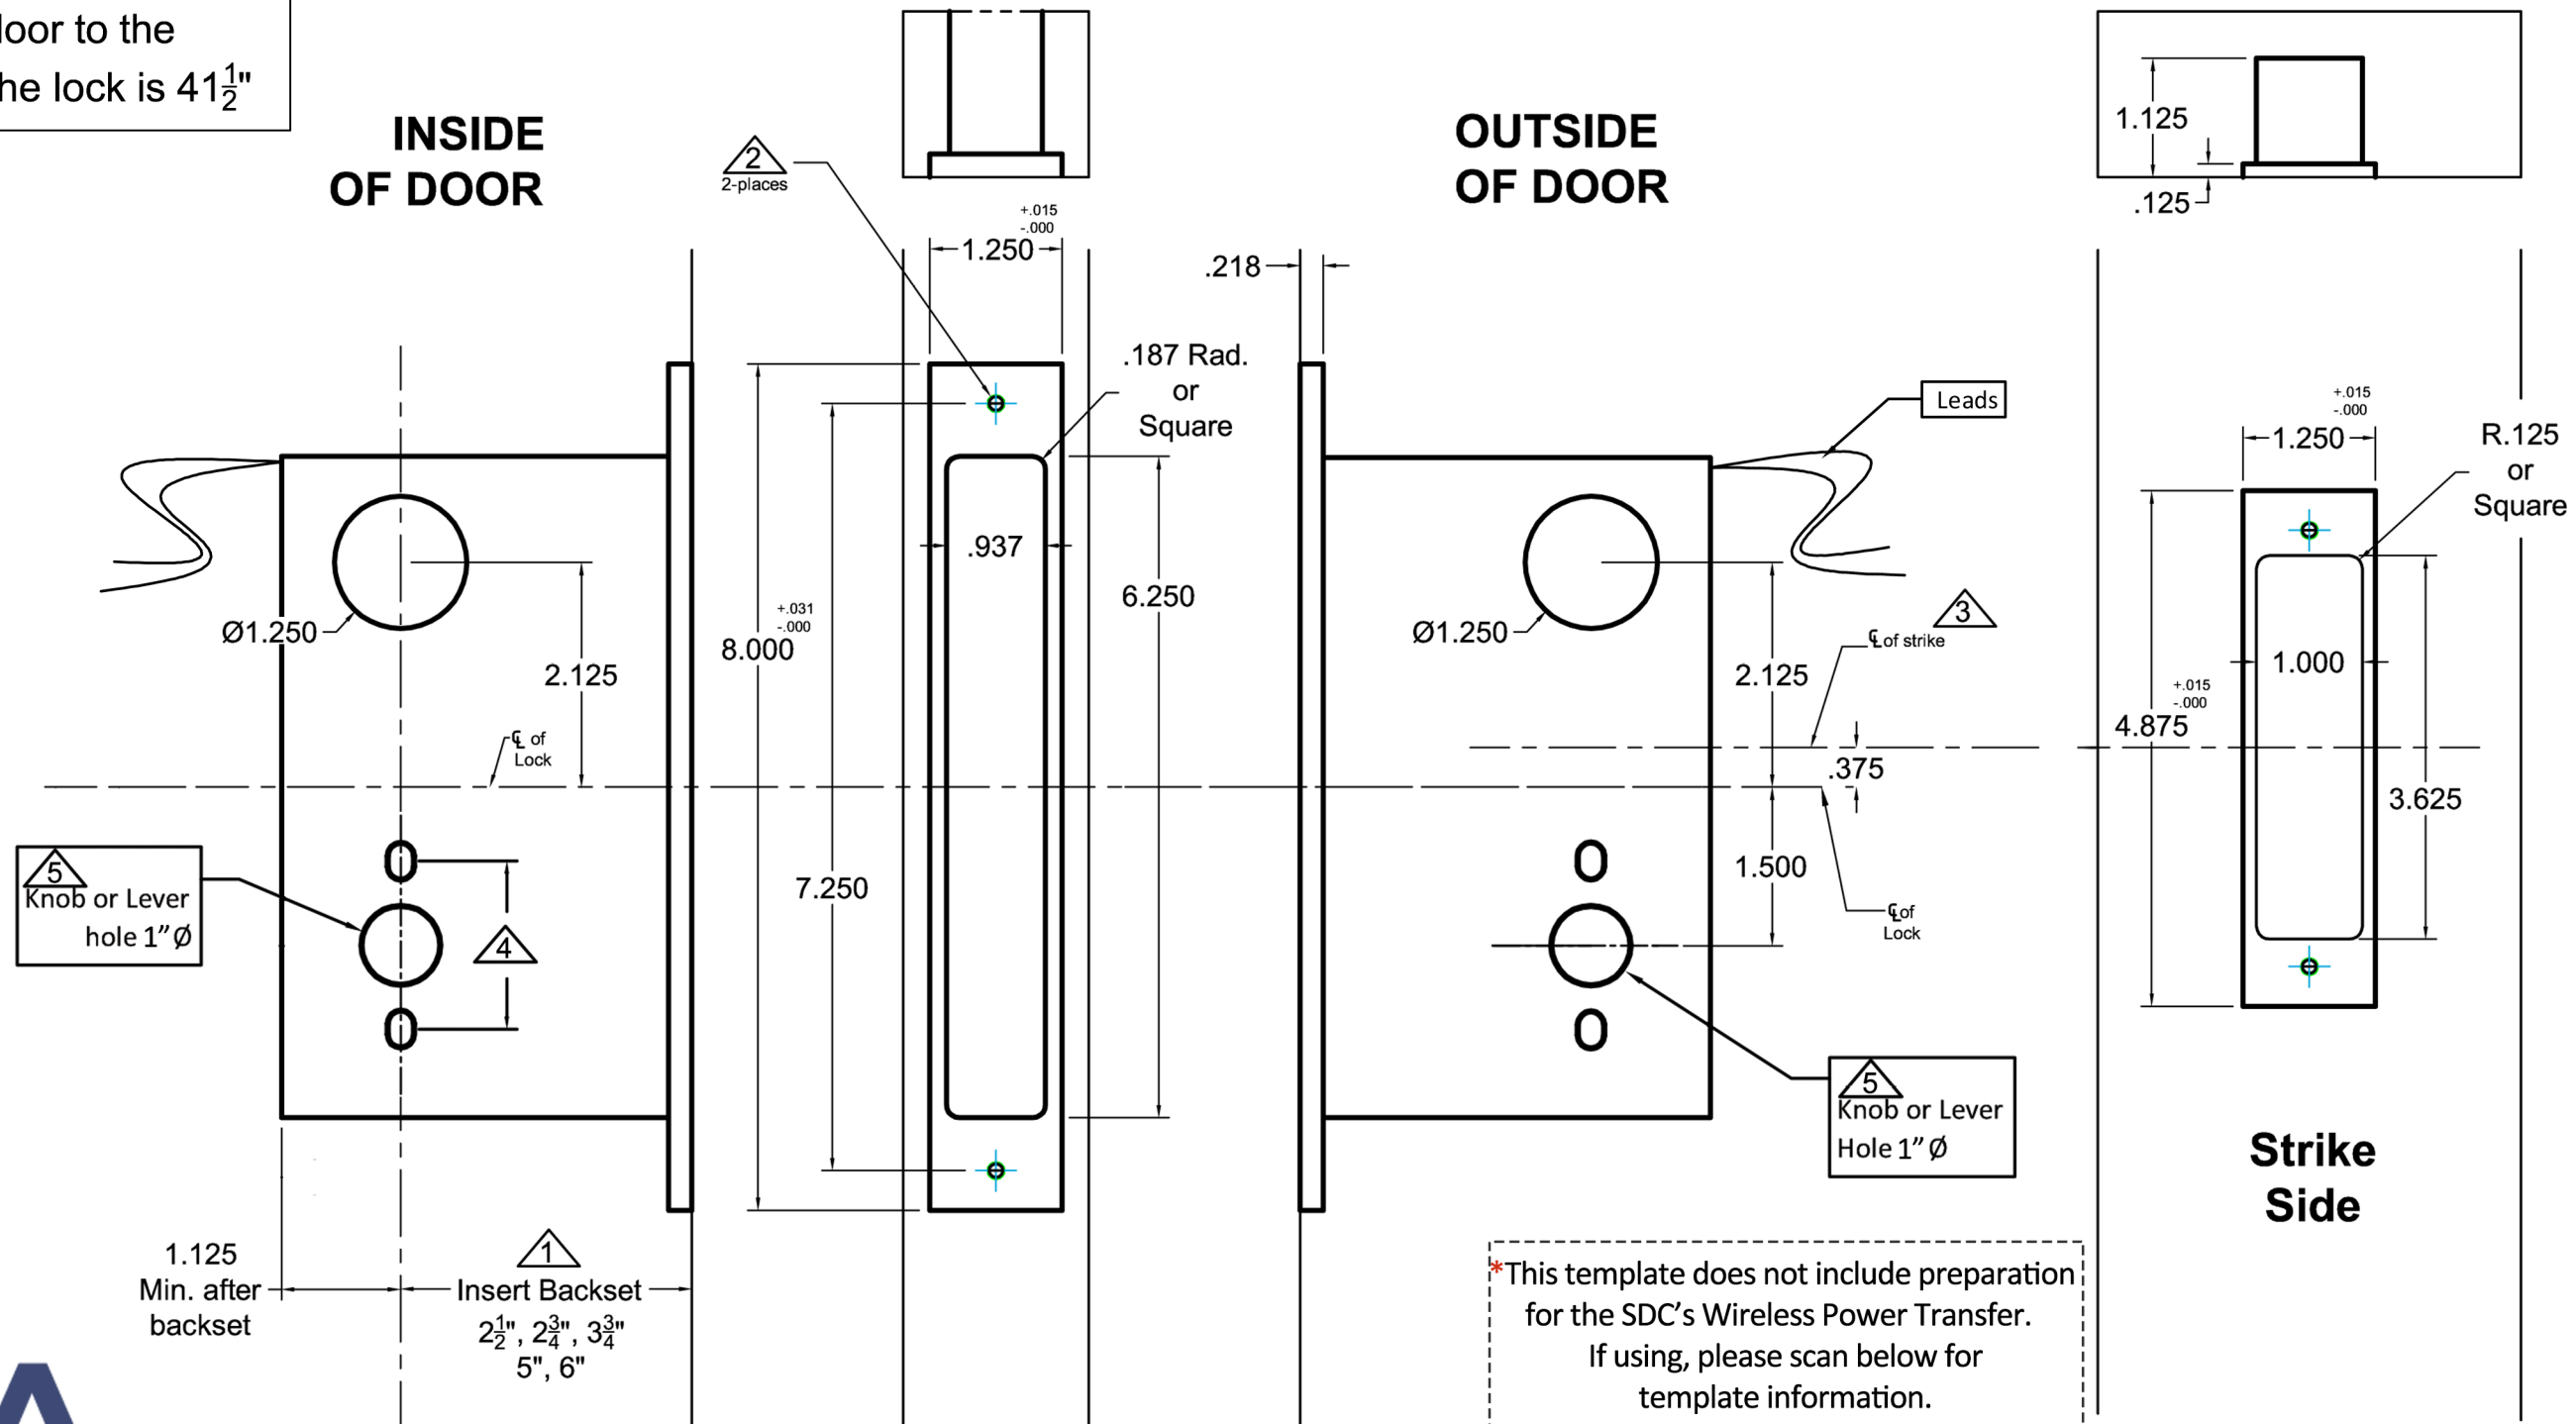

*This template does not include preparation for the SDC's Wireless Power Transfer. If using, please scan below for template information.



Notes:

- ▲ Insert backset here $2\frac{1}{2}$ ", $2\frac{3}{4}$ ", $3\frac{3}{4}$ ", 5", or 6"
- ▲ Prep for #12 wood or 12-24 machine screws
- ▲ Centerline of strike is $\frac{3}{8}$ " above centerline of lock
- ▲ Thru bolting holes **ONLY** if required. See trim manufacturers standard template for details. Accurate lock's accommodates $1\frac{1}{2}$ " to $1\frac{11}{16}$ " center to centers and up to $\frac{1}{4}$ " dia. post. If there are any additional questions about the thru-bolting, please contact our office.
- ▲ Lever holes may vary from different trim manufacturers. Please refer to their templates to confirm these dimensions.

Additional Notes:

- a) **Responsibility**: Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.

Template for SL-M9158E
Lever x Lever - All Backsets

T-ALH.SL-M9158E.LL