




T-ALH.9100.LL
 T-ALH.9100TL
 T-ALH.9100TT
 T-ALH.9000LL
 T-ALH.9000TL
 T-ALH.9000TT
 T-ALH.8500.LL
 T-ALH.8600.LL
 T-ALH.8700.LL
 T-ALH.8800.LL

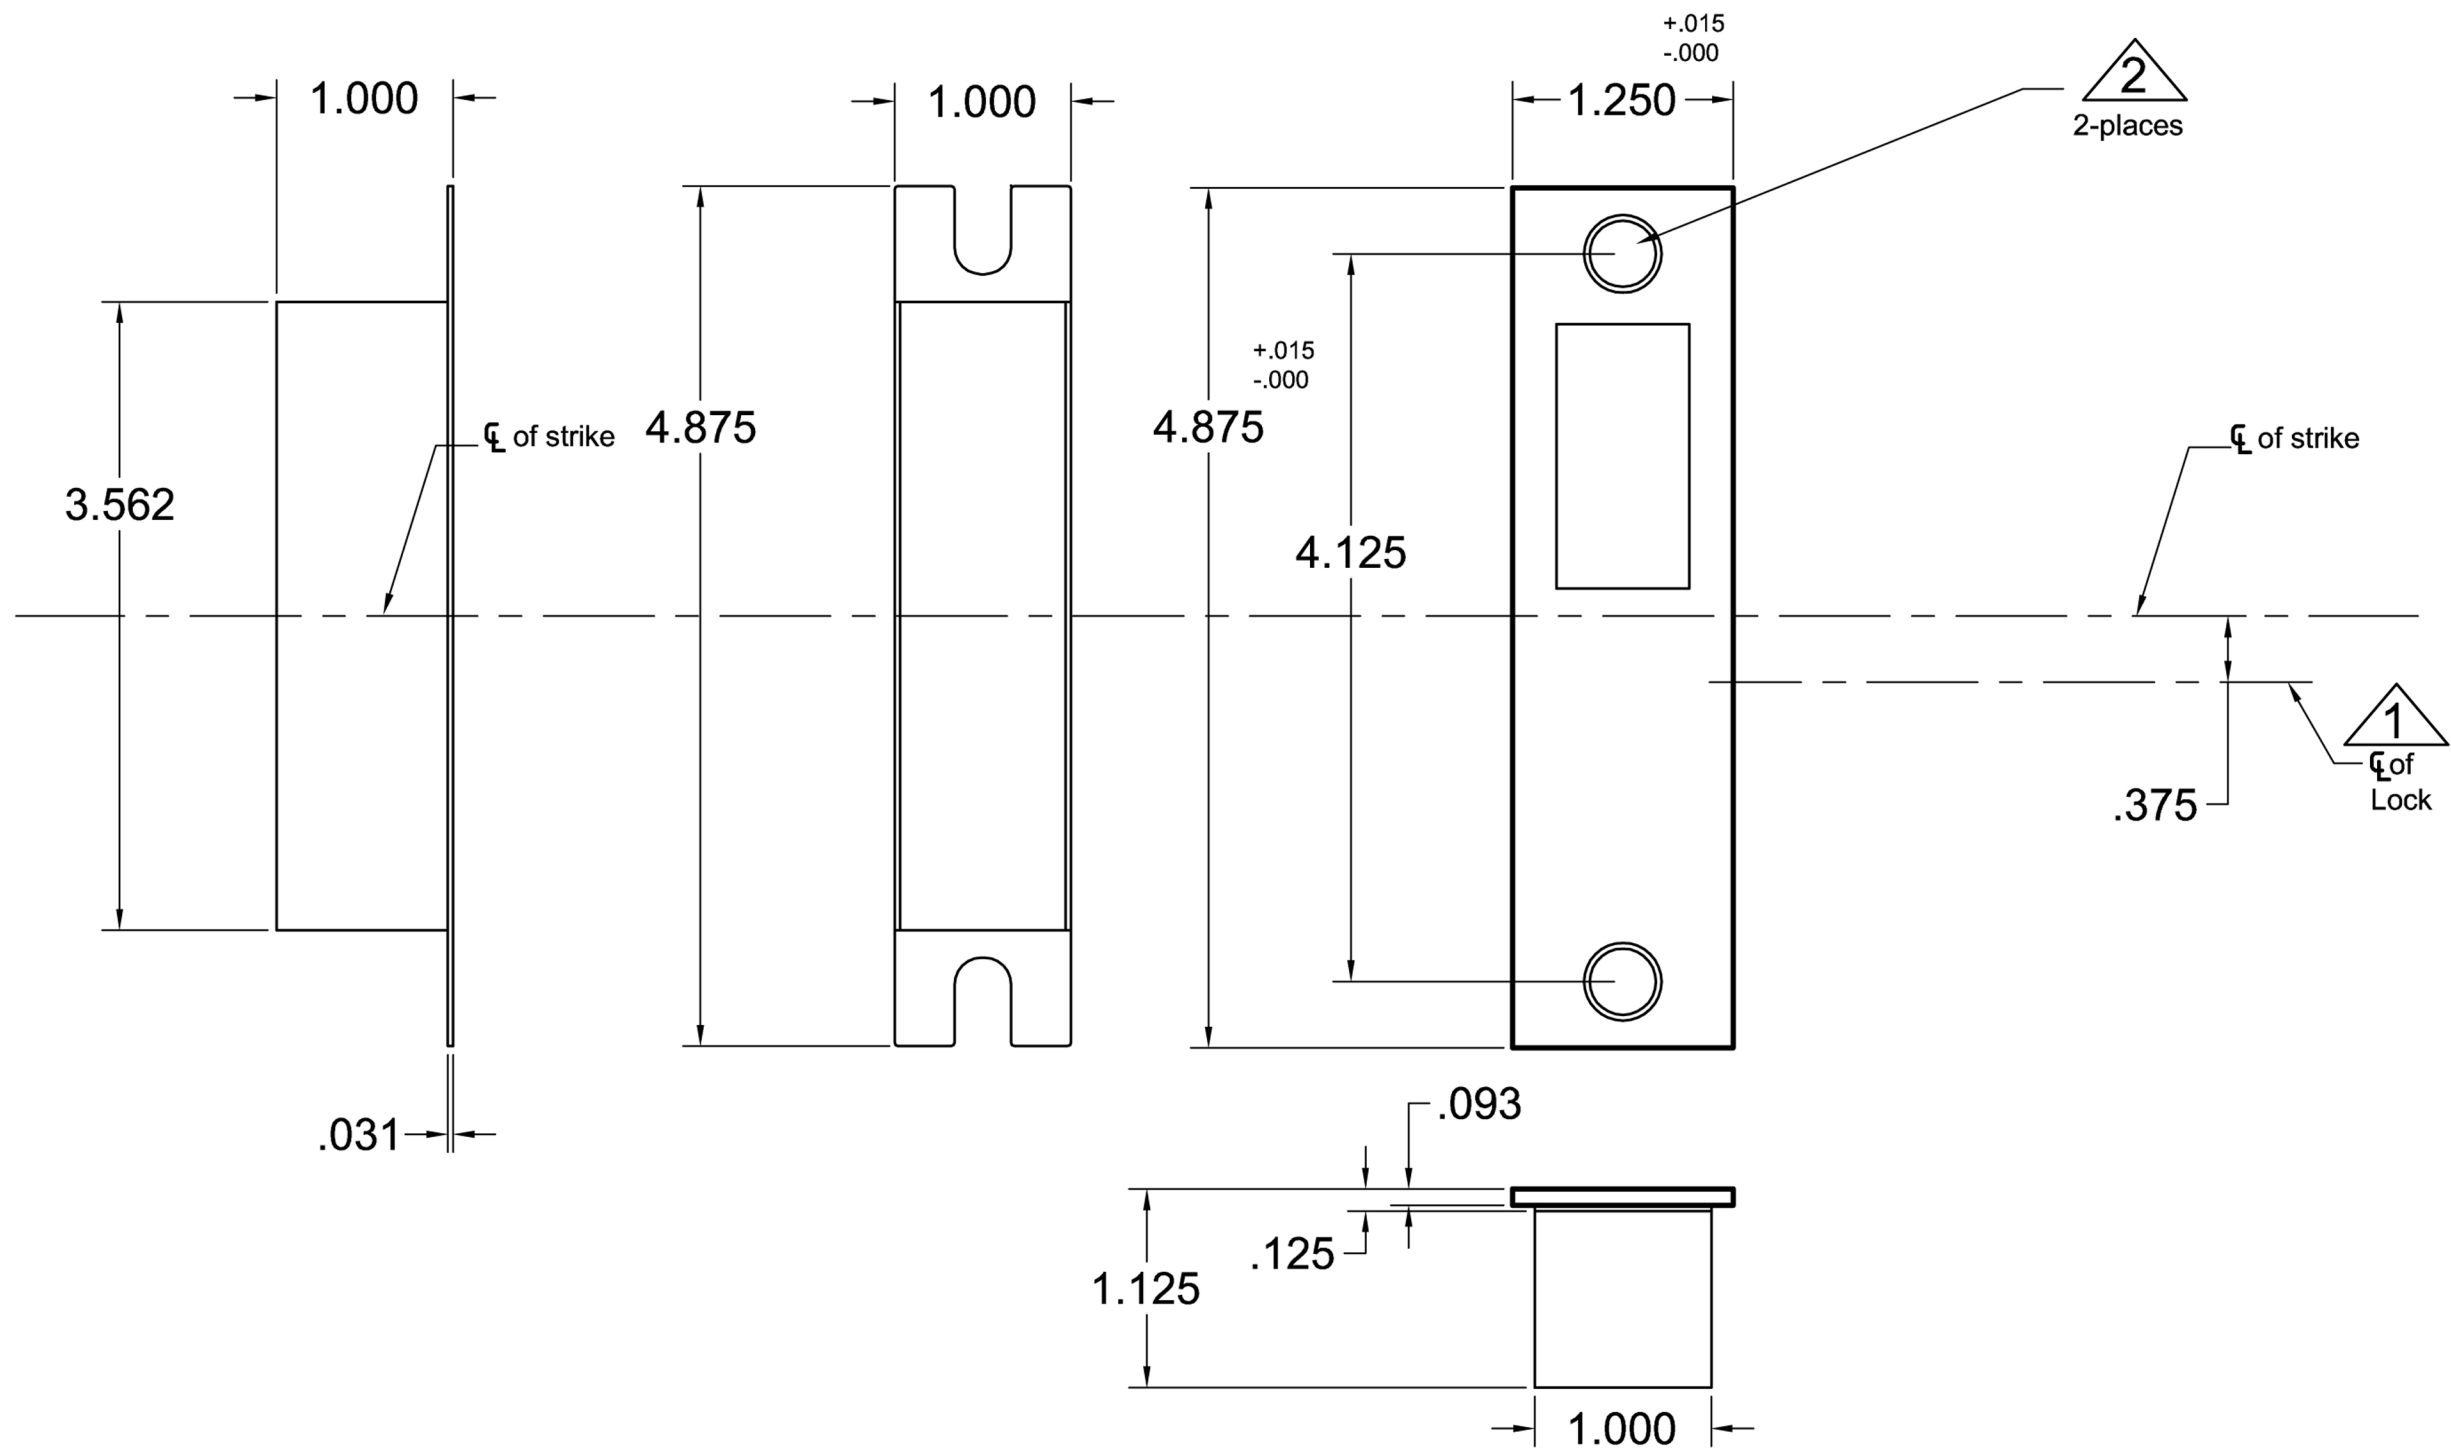

Notes:

- Corresponding lock templates (see side bar)
 - Prep for #12 wood or 12-24 machine screws
- additional notes:
- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
 - b) If door silencers are used on the frame, locate center line of strike from the surface of the silencer
 - c) Please contact us if a double lip strike is needed - for a proper template
 - d) See catalog / spec sheets for additional lock details

Standard ASA Deadbolt Strike with
 Dust Box

T-ALH.ASADB.STK