



Urban Deadbolt
Identify Door Handing

LH Inside

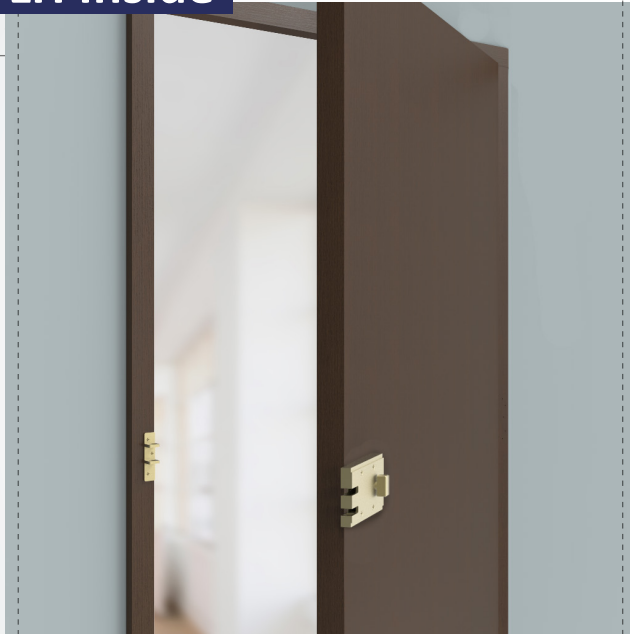


LH Door Swing:
From inside, lock installed on **left** side of the door per illustration.

Use **LH** template plate to mark for holes on door and frame.

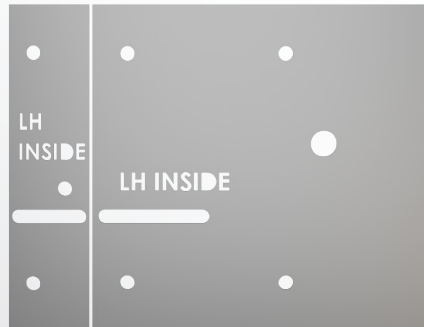


RH Inside

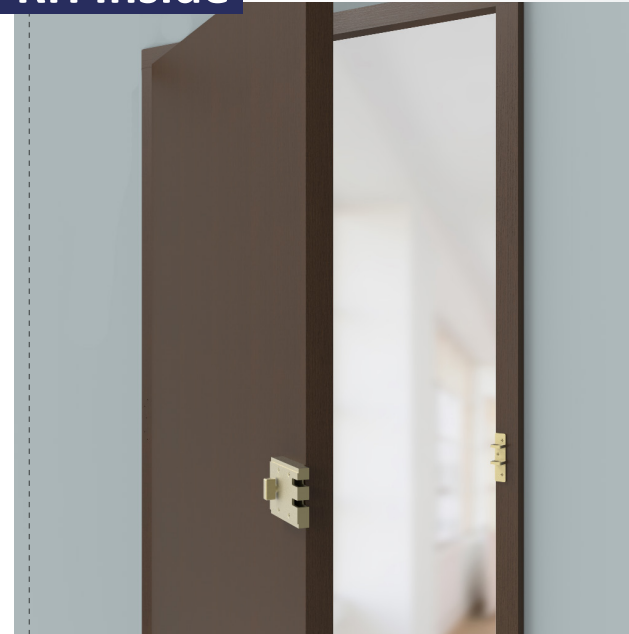


RH Door Swing:
From inside, lock installed on **right** side of the door per illustration.

Use **RH** template plate to mark for holes on door and frame.

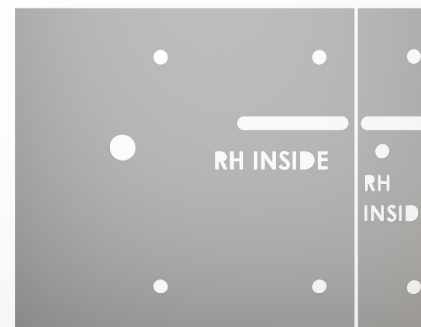

Urban Deadbolt Components

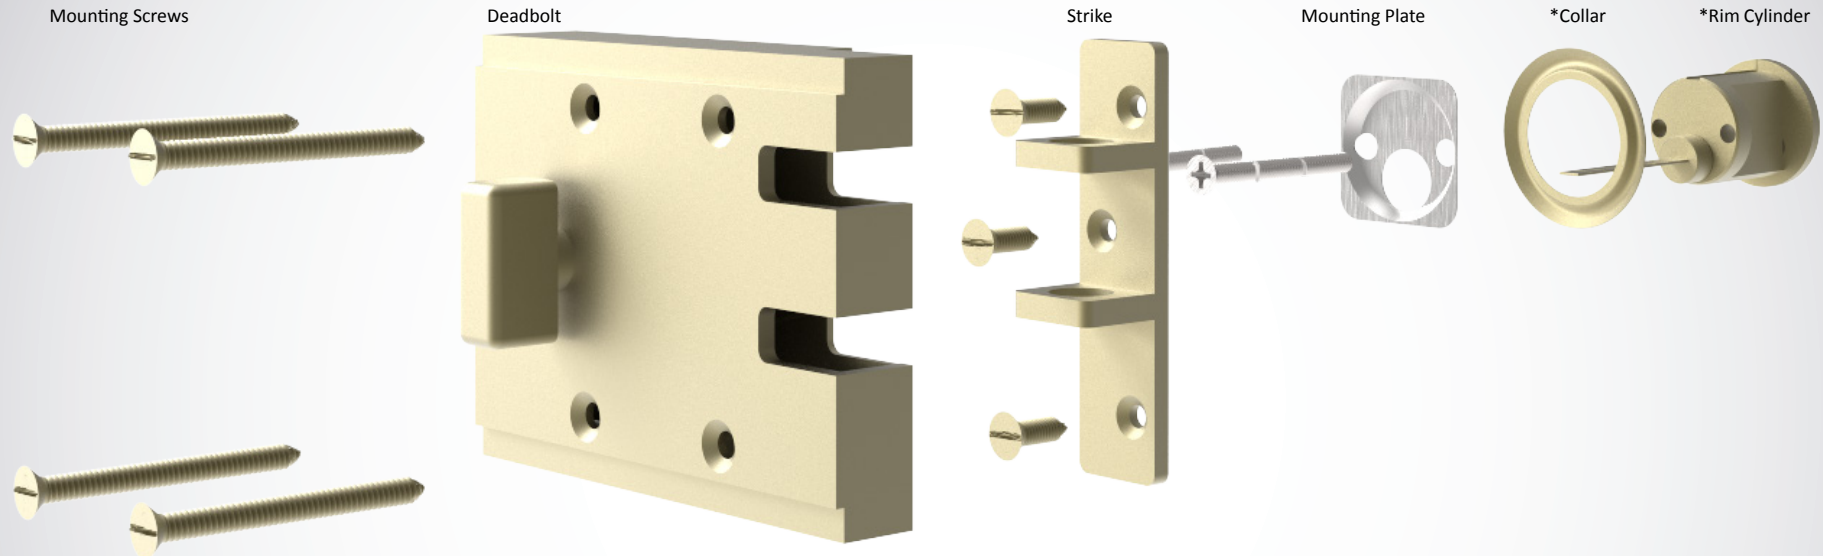

Required Tools

- Power drill with Hole Saw
- Hack saw (to trim screws and cylinder tail)
- Hammer and center punch (to mark the door)

*Collar and Rim Cylinder supplied by Accurate when ordered.

Contact

1 Annie Place | Stamford, CT 06902

P: 203.348.8865

E: sales@accuratelockandhardware.com

W: www.accuratelockandhardware.com



Watch the Video

<http://bit.ly/urbandeadbolt>

In most cases, if you are replacing a Segal Lock, **spacing should be the same.**
If installing on a new door, **follow these first three steps.**



Urban Deadbolt Installation Instructions

1



Prep Holes in Door and Frame

- Place lock template even with door edge at desired height and mark screw hole locations.
- Drill for screw holes (1¼" maximum depth) and then temporarily secure plate with at least two screws.
- Place strike template plate even with edge of frame making sure to align the lock and plate grooves to ensure vertical alignment. Mark and drill screw holes (1¼" maximum depth).
- Drill a ¼" pilot hole through the ¼" hole in lock template, then remove template from door. At this hole location, use Hole Saw to bore 1⅜" hole through the door.

2



Insert Cylinder

- From outside of the door, insert cylinder through the collar and into the 1⅜" hole in the door.

3




Attach Mounting Plate

- From the inside of the door, place mounting plate against door with bump down recessed inside the hole and then secure to the backside of the cylinder using screws provided. Trim screws as needed.
- Cylinder tail should be centered on mounting plate hole.
 - If necessary, trim cylinder tail to project no longer than ⅜" from face of the door.

Urban Deadbolt Installation Instructions

4

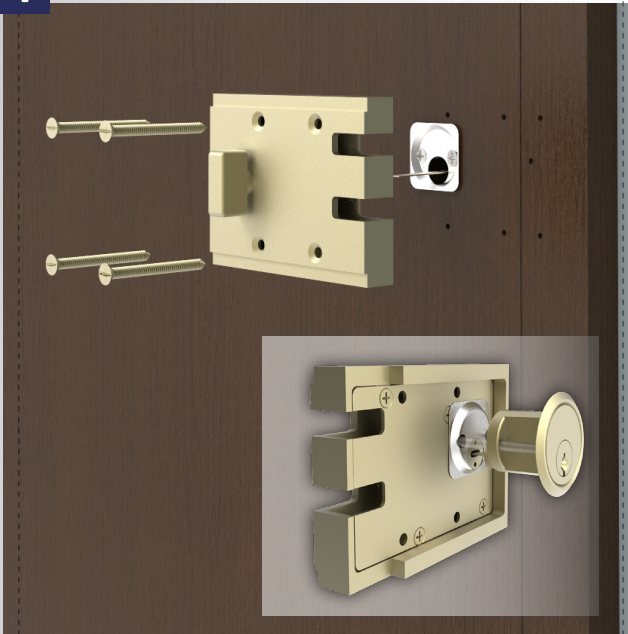

Mount Deadbolt

- Mount the Deadbolt onto the door with mounting screws provided.
- Cylinder tail must be aligned horizontally to the lock tail slot (see inset illustration).

5



Mount Strike

- Mount the strike plate with the supplied screws onto the door frame.

6



Test Functionality

- Make sure the bolt and the strike align properly.
- Test the functionality of the deadbolt by locking and unlocking into the strike.

Contact

1 Annie Place | Stamford, CT 06902

P: 203.348.8865

E: sales@accuratelockandhardware.com

W: www.accuratelockandhardware.com



Watch the Video

<http://bit.ly/urbandeadbolt>