


INSIDE OF DOOR

OUTSIDE OF DOOR

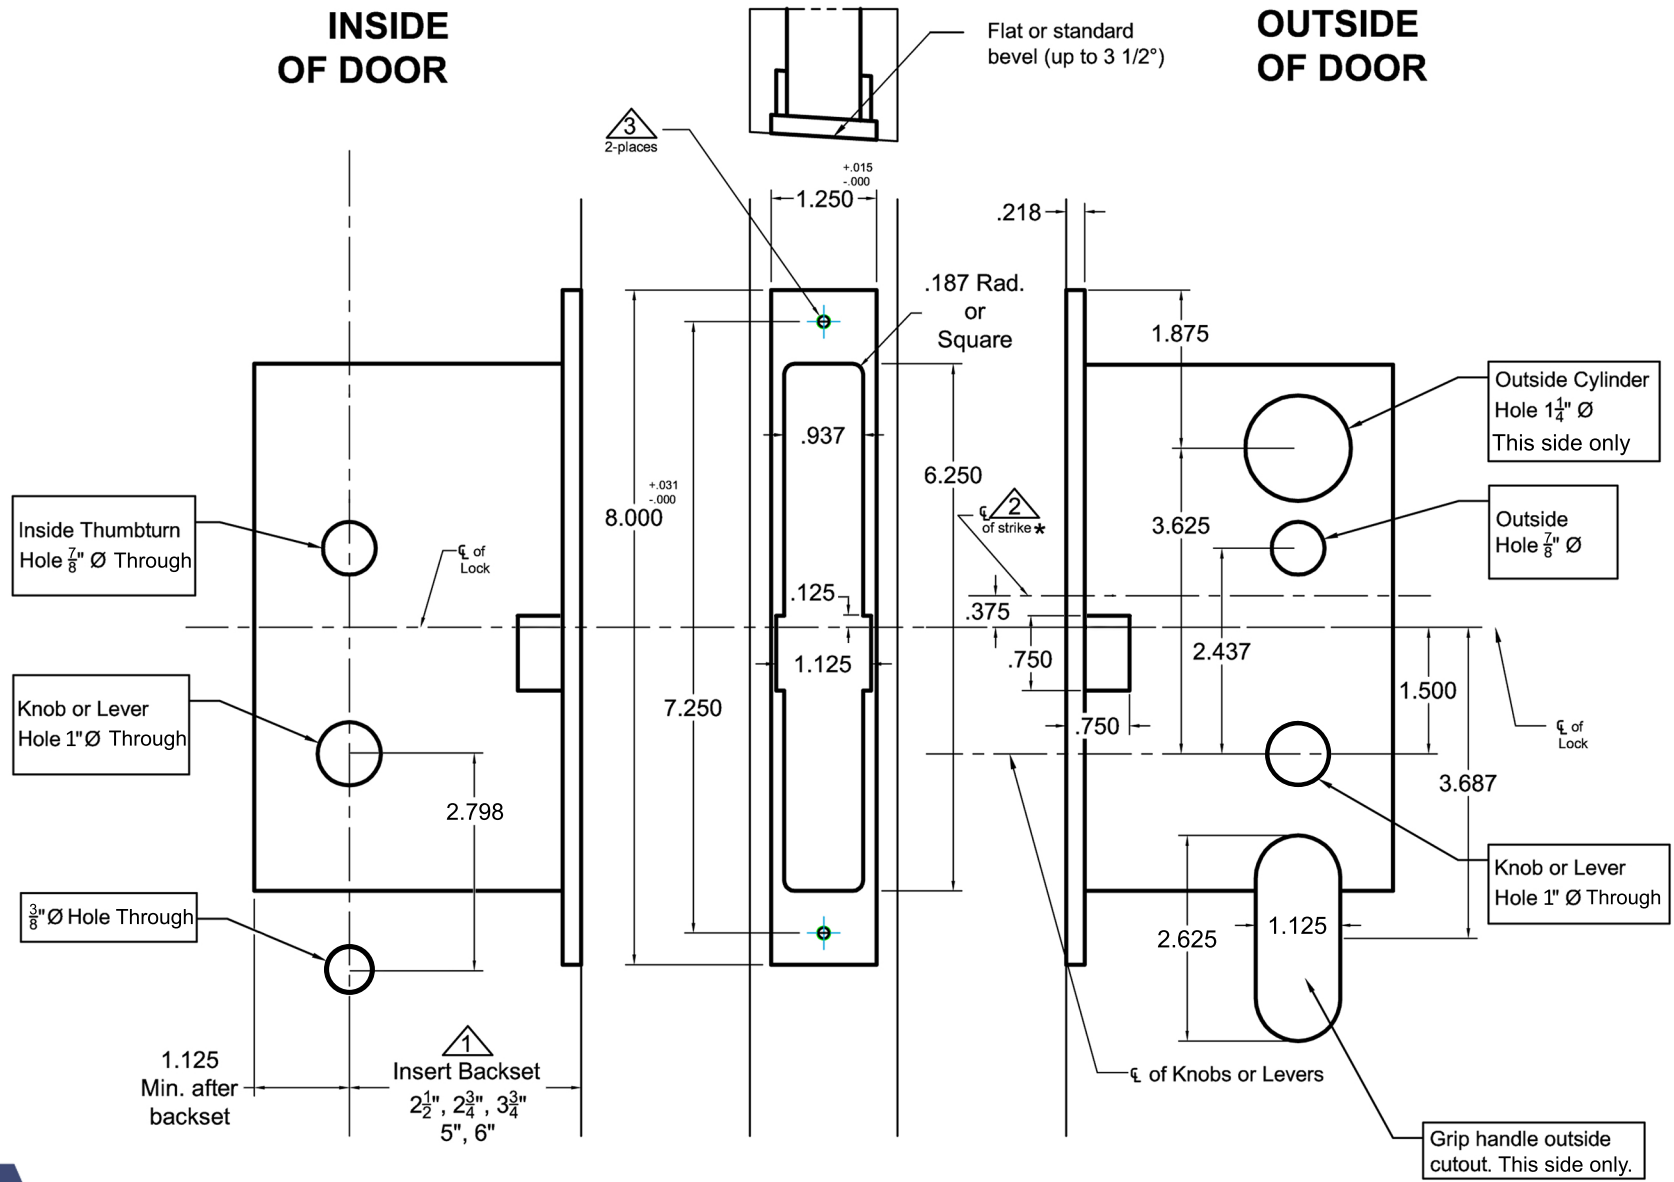

Notes:

- ▲ Insert backset here 2 $\frac{1}{2}$ ", 2 $\frac{3}{4}$ ", 3 $\frac{3}{4}$ ", 5", or 6"
- ▲ ASA strike details on template # T-ALH.ASA.STK
- ▲ Prep for #12 wood or 12-24 machine screws

Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See catalog / spec sheets for additional lock details

Standard 9100 Accurate 5000TG Trim-Thumbpiece x Lever/Thumbpiece x Knob All Backsets

T-ALH.9100.5000TG