


Lock Functions
2002CPDL/2002Q-1
2002CPDL/2002Q-2
2002CPDL/2002Q-3, -3i
2002CPDL/2002Q-4
2002CPDL/2002Q-5, -5i

● Requires Hole

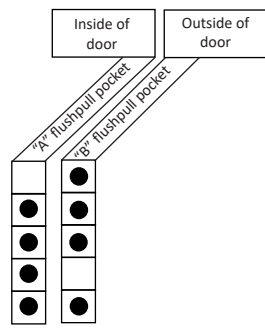

**Notes:**

- ① Insert backset here 2", 2 1/4", 2 3/4", 3 3/4", 5", 6"
- ② Strike is 1 1/4" above centerline of lock
- ③ Prep for #8 wood or 8-32 machine screws
- ④ After the lock is installed and works properly. Pre-drill screw holes for the flush pulls. Then mount the flush pulls with the provided screws.

**Additional Notes:**

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See T-ALH.2002CPDL.2002Q for additional lock details.



Standard 2002CPDL/2002Q Quiet  
Pocket Door Lock with Integrated Edge  
Pull CS2002

T-ALH.2002CPDL.2002Q.CS