


Lock Functions
2002CPDL/2002Q-1
2002CPDL/2002Q-2
2002CPDL/2002Q-3, -3i
2002CPDL/2002Q-4
2002CPDL/2002Q-5, -5i

● Requires Hole

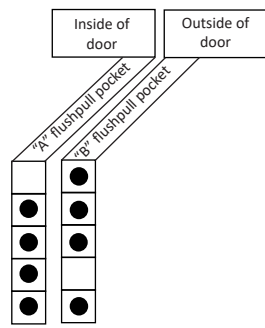

Notes:

- ① Insert backset here 2", 2 $\frac{1}{2}$ ", 2 $\frac{3}{4}$ ", 3 $\frac{3}{4}$ ", 5", 6"
- ② Strike is 1 $\frac{1}{4}$ " above centerline of lock
- ③ Prep for #8 wood or 8-32 machine screws
- ④ After the lock is installed and works properly. Pre-drill screw holes for the flush pulls. Then mount the flush pulls with the provided screws.

Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-reinforcement for proper installation of hardware shown.
- b) See T-ALH.2002CPDL.2002Q for additional lock details.



Standard 2002CPDL/2002Q Quiet
Pocket Door Lock with Integrated Edge
Pull IS2002

T-ALH.2002CPDL.2002Q.IS