


Functions	A	B	C	D	E	F
9100ADL-USD	●			●		●
9122USD	●		●	●		●
9122ARL-USD	●		●	●		●
9124USD	●			●		●
9124ARL-USD	●	●		●		●
9125USD	●			●		●
9125ARL-USD	●			●		●
9134USD	●	●		●		●
9139USD	●			●	○	
9139ARL-USD	●			●	○	
9142USD	●		●	●		●
9143USD	●			●		●
9143E-USD	●			●		●
9144USD	●			●		●
9144E-USD	●			●		●
9145USD	●			●		●
9145S-USD	●		●	●		●
9146USD	●			●		●
9148USD	●			●		●
9149USD	●			●		●
9153USD	●		●	●		●
9156USD	●		●	●		●
9158USD	○		●	○		●
9159USD	●			●		●
9160USD	○			○		●
9167USD	●	●		●		●
9169USD	●	●		●		●

● Required Holes
○ Optional Holes


(No strike needed)

INSIDE
OF DOOR



Flat or standard
bevel (up to 3 1/2")

OUTSIDE
OF DOOR

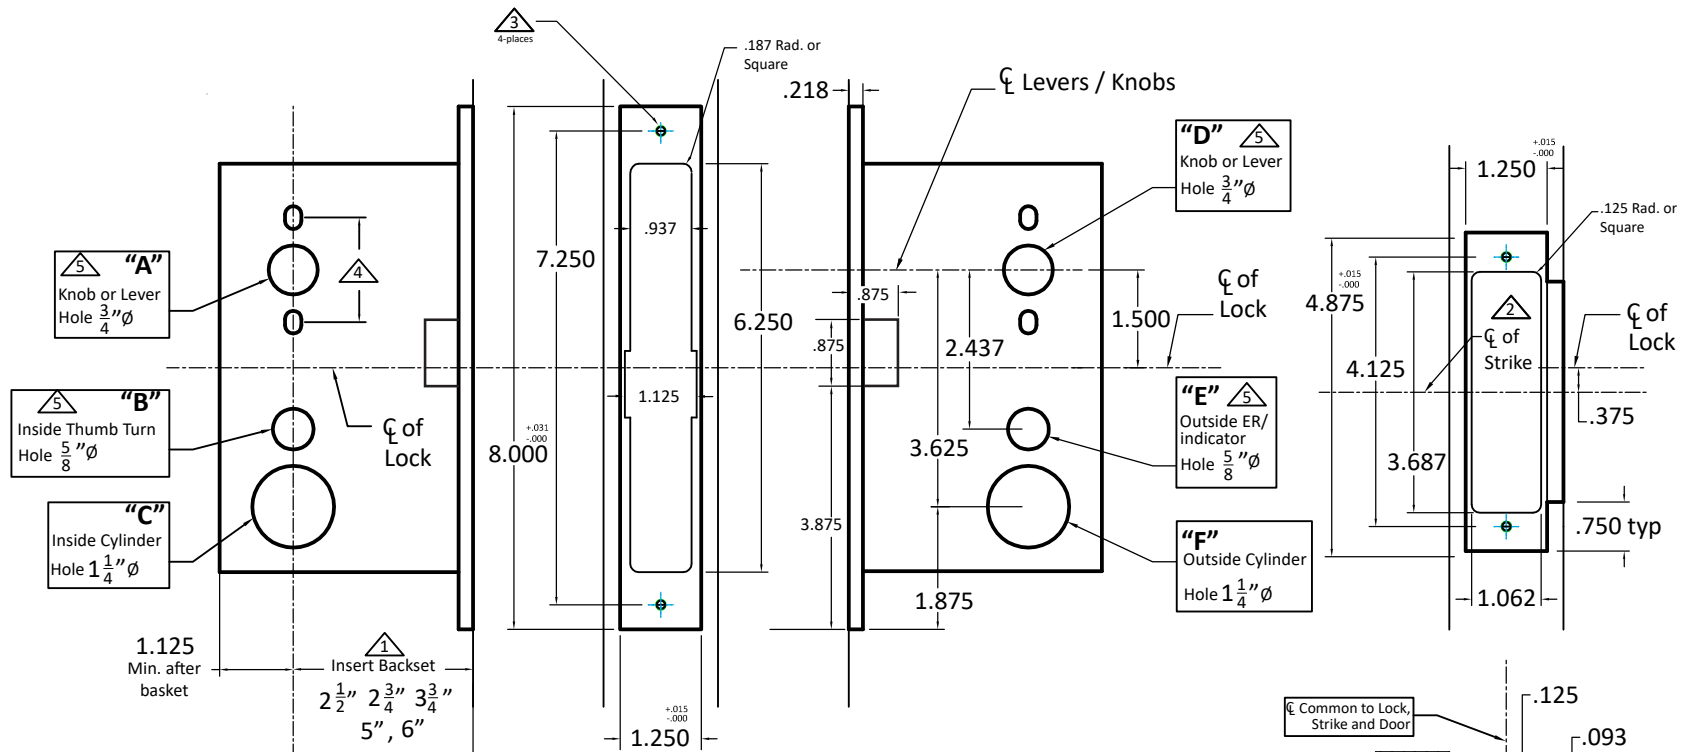

Important Notes:

- ① Insert backset here $2\frac{1}{2}"$, $2\frac{3}{4}"$, $3\frac{3}{4}"$, 5", 6".
- ② ASA strike mounted $\frac{3}{8}"$ BELOW centerline of lock.
- ③ Prep for #12 wood or 12-24 machine screws (lock and strike).
- ④ Through-bolting holes **ONLY** if required. See trim manufacturers' standard template for details.
Accurate locks accommodate $1\frac{1}{2}"$ to $1\frac{11}{16}"$ center to centers and up to $\frac{1}{4}"$ dia. post.
If there are any additional questions about through-bolting, please contact us.
- ⑤ Knob/Lever, Thumb Turn, and ER holes may vary from different trim manufacturers.
Please refer to their templates to confirm dimensions.

Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) Please contact us for double lipped template if needed.
- c) See spec sheets for additional lock details.

ACCURATE
LOCK & HARDWARE
AMERICAN CRAFTED SINCE 1972

Standard 9100USD - Upside Down
(Lever High) Template- All Backsets

T-ALH.9100USD