
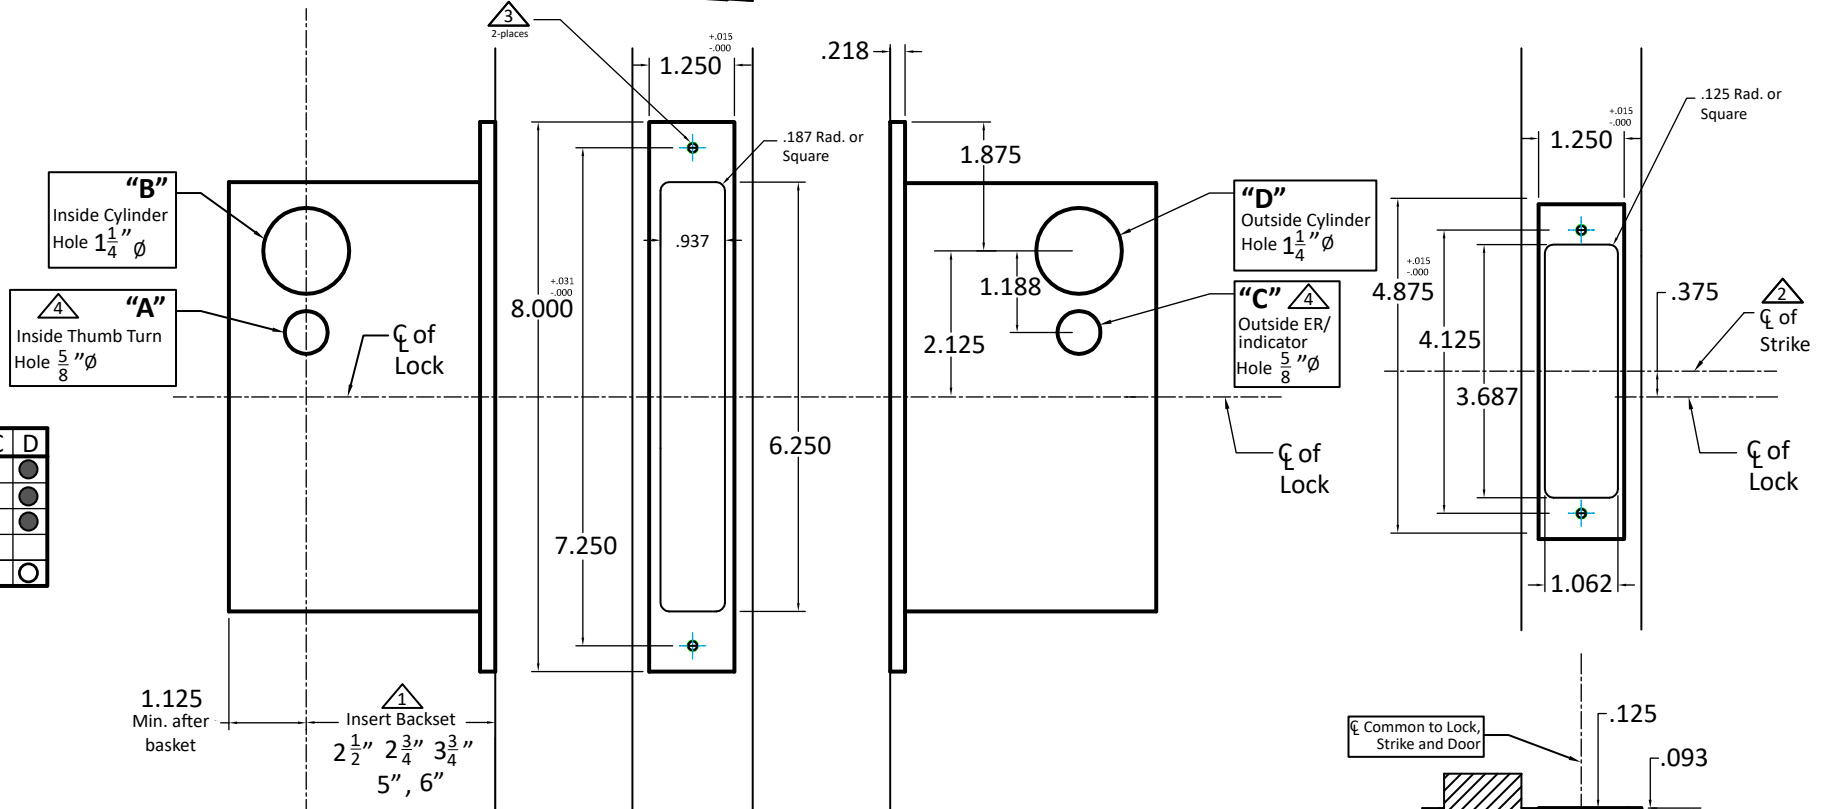


INSIDE  
OF DOOR

OUTSIDE  
OF DOOR



Functions	A	B	C	D
9001		●		●
9002			●	
9003	●			●
9004	●			
9005		●		○

● Required Holes  
○ Optional Holes

**Important Notes:**

- ① Insert backset here  $2\frac{1}{2}$ ",  $2\frac{3}{4}$ ",  $3\frac{3}{4}$ ", 5", 6".
- ② Strike mounted  $\frac{3}{8}$ " ABOVE centerline of lock.
- ③ Prep for #12 wood or 12-24 machine screws (Lock and Strike.)
- ④ Thumb Turn and ER holes may vary from different trim manufacturers. Please refer to their templates to confirm dimensions.

**Additional Notes:**

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) Please contact us for double lipped template if needed.
- c) See spec sheets for additional lock details.

