


Functions	B	C	E	F
9122		●		●
9124	●			●
9125	●			●
9134	●			●
9139	●		○	
9142	●	●		●
9143	●			●
9143E	●		●	●
9144	●			●
9144E	●		●	●
9145				●
9145S		●		●
9146		●		●
9148	●			●
9149	●			●
9153	●			●
9156				●
9158		●		●
9159				●
9160		●		●
9167	●			●
9169				●

● Required Holes  
○ Optional Holes

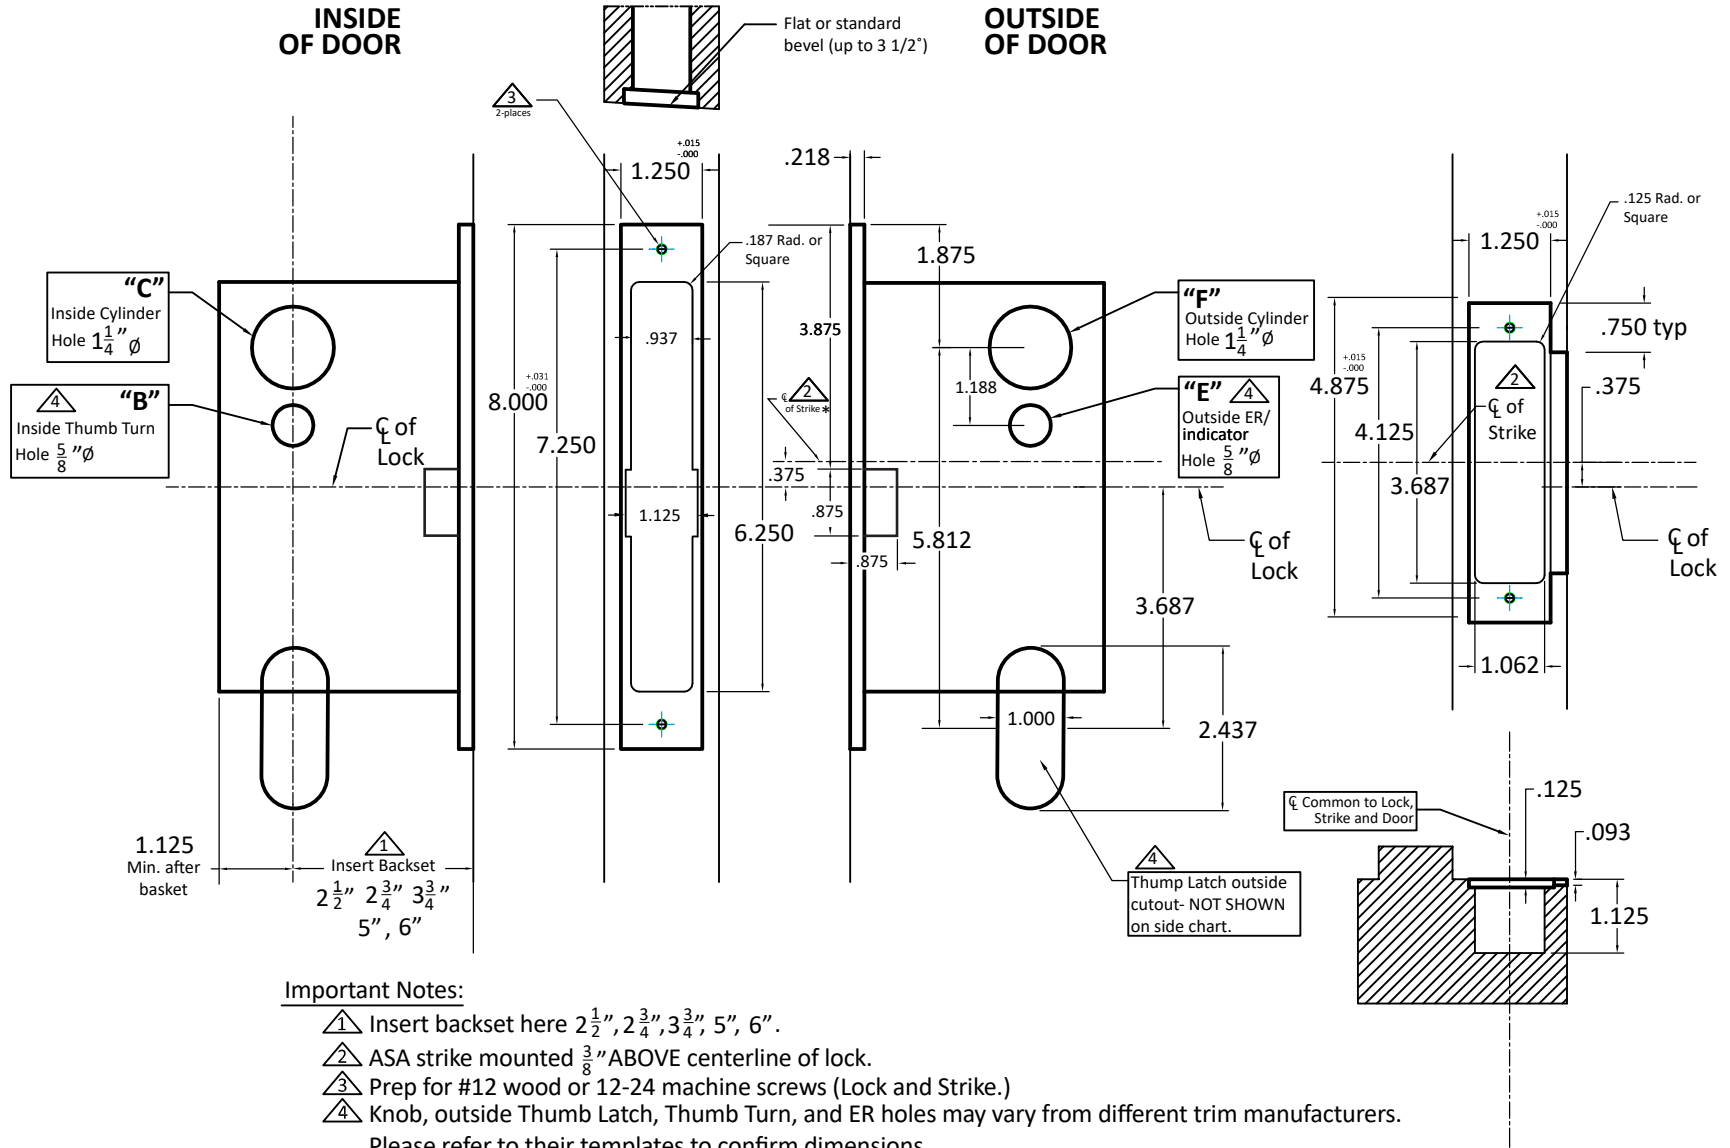

**Important Notes:**

- ① Insert backset here 2 1/2", 2 3/4", 3 3/4", 5", 6".
- ② ASA strike mounted 3/8" ABOVE centerline of lock.
- ③ Prep for #12 wood or 12-24 machine screws (Lock and Strike.)
- ④ Knob, outside Thumb Latch, Thumb Turn, and ER holes may vary from different trim manufacturers. Please refer to their templates to confirm dimensions.

**Additional Notes:**

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) Please contact us for double lipped template if needed.
- c) See spec sheets for additional lock details.



**ACCURATE**  
LOCK & HARDWARE  
AMERICAN CRAFTED SINCE 1972

Standard 9100 Thumb Latch x  
Thumb Latch- All Backsets

T-ALH.9100.TT