


**INSIDE  
OF DOOR**

**OUTSIDE  
OF DOOR**

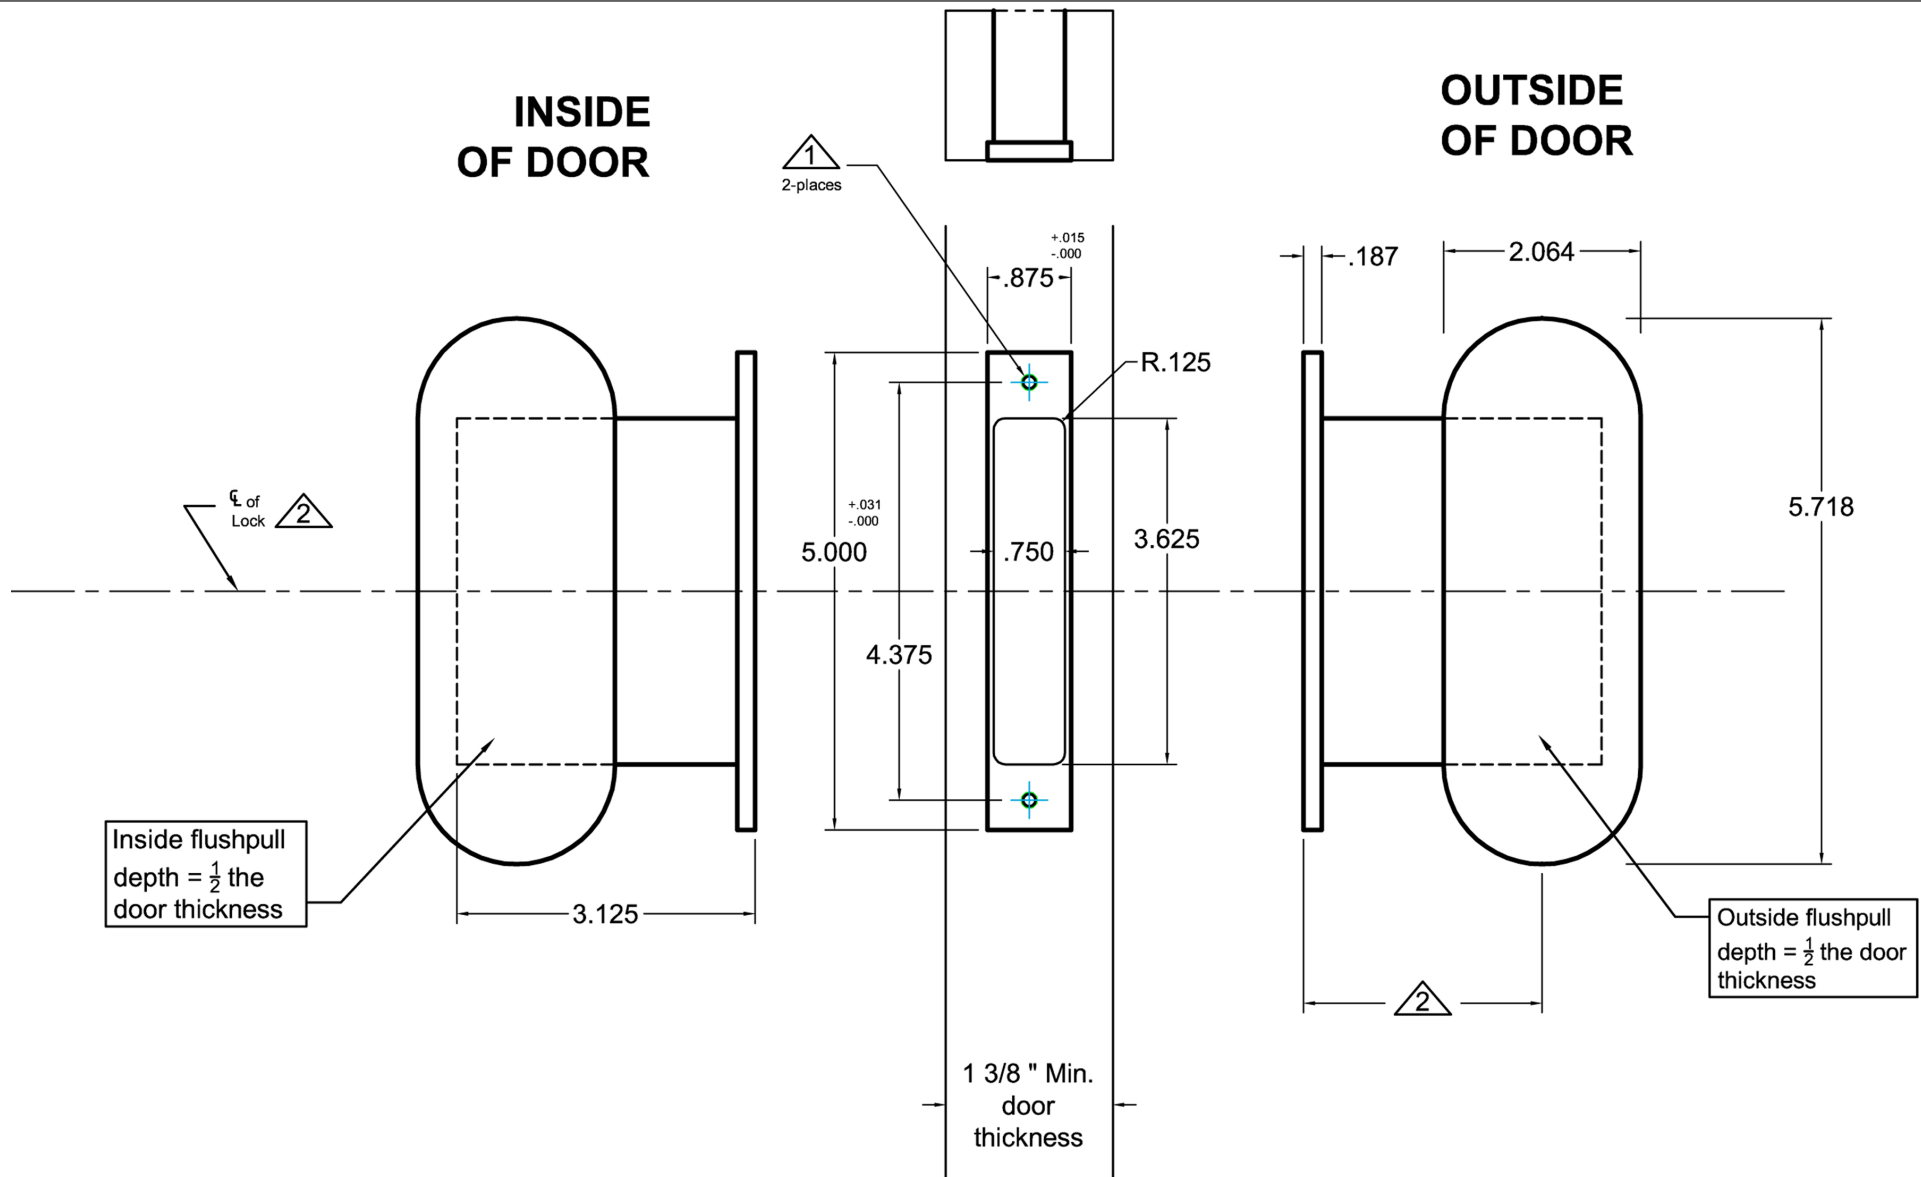

**Notes:**

- △ Prep for #8 wood or 8-32 machine screws.
- △ Horizontal and vertical spacing of the flush pulls is up to the end user. However, we do suggest to line up the backset with the other locks on your project, i.e. 2", 2 1/2", 2 3/4", 3 3/4", 5" and 6"

**Additional Notes:**

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See Spec.2000/2000Q and Spec.A2002/N2002/O2002 for additional details.

**ACCURATE**  
LOCK & HARDWARE  
AMERICAN CRAFTED SINCE 1972

Standard 2000/2000Q Quiet Pocket  
Door Edge Pull - A2002, N2002, O2002

T-ALH.2000.2000Q.A.N.O