


INSIDE OF DOOR

OUTSIDE OF DOOR

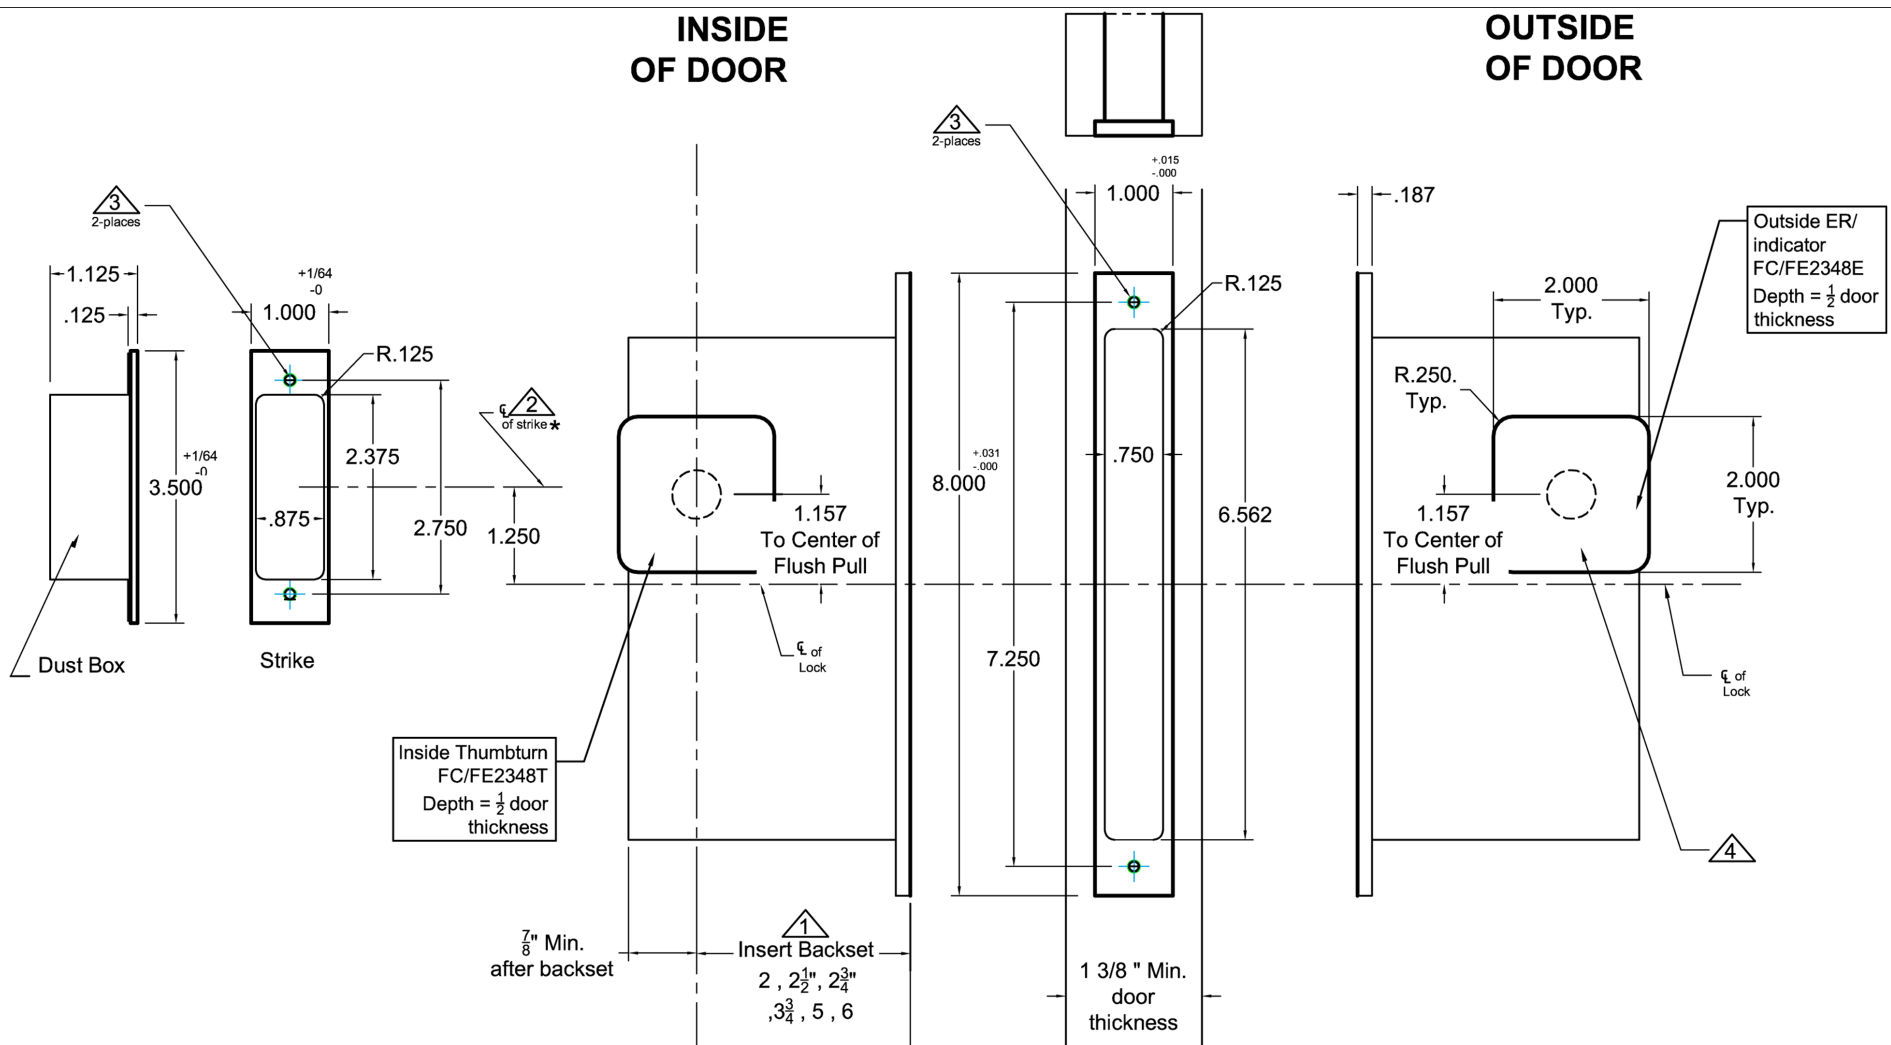

Inside Thumbturn
FC/FE2348T
Depth = 1/2 door
thickness

Outside ER/
indicator
FC/FE2348E
Depth = 1/2 door
thickness

Notes:

- ▲ Insert backset here 2", 2 1/2", 2 3/4", 3 3/4", 5", 6"
- ▲ Strike is 1 1/4" above centerline of lock
- ▲ Prep for #8 wood or 8-32 machine screws
- ▲ After the lock is installed and works properly. Pre-drill screw holes for the flush pulls. Then mount the flush pulls with the provided screws.

Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See Spec.2002CPDL/2002Q for Spec.FE2348T/E for additional details.



Standard 2002CPDL/2002Q-5 Entry
FE2348T/E Flush Pull- All Backsets

T-ALH.2002CPDL.2002Q-5.FE2348T.E