


## INSIDE OF DOOR

## OUTSIDE OF DOOR

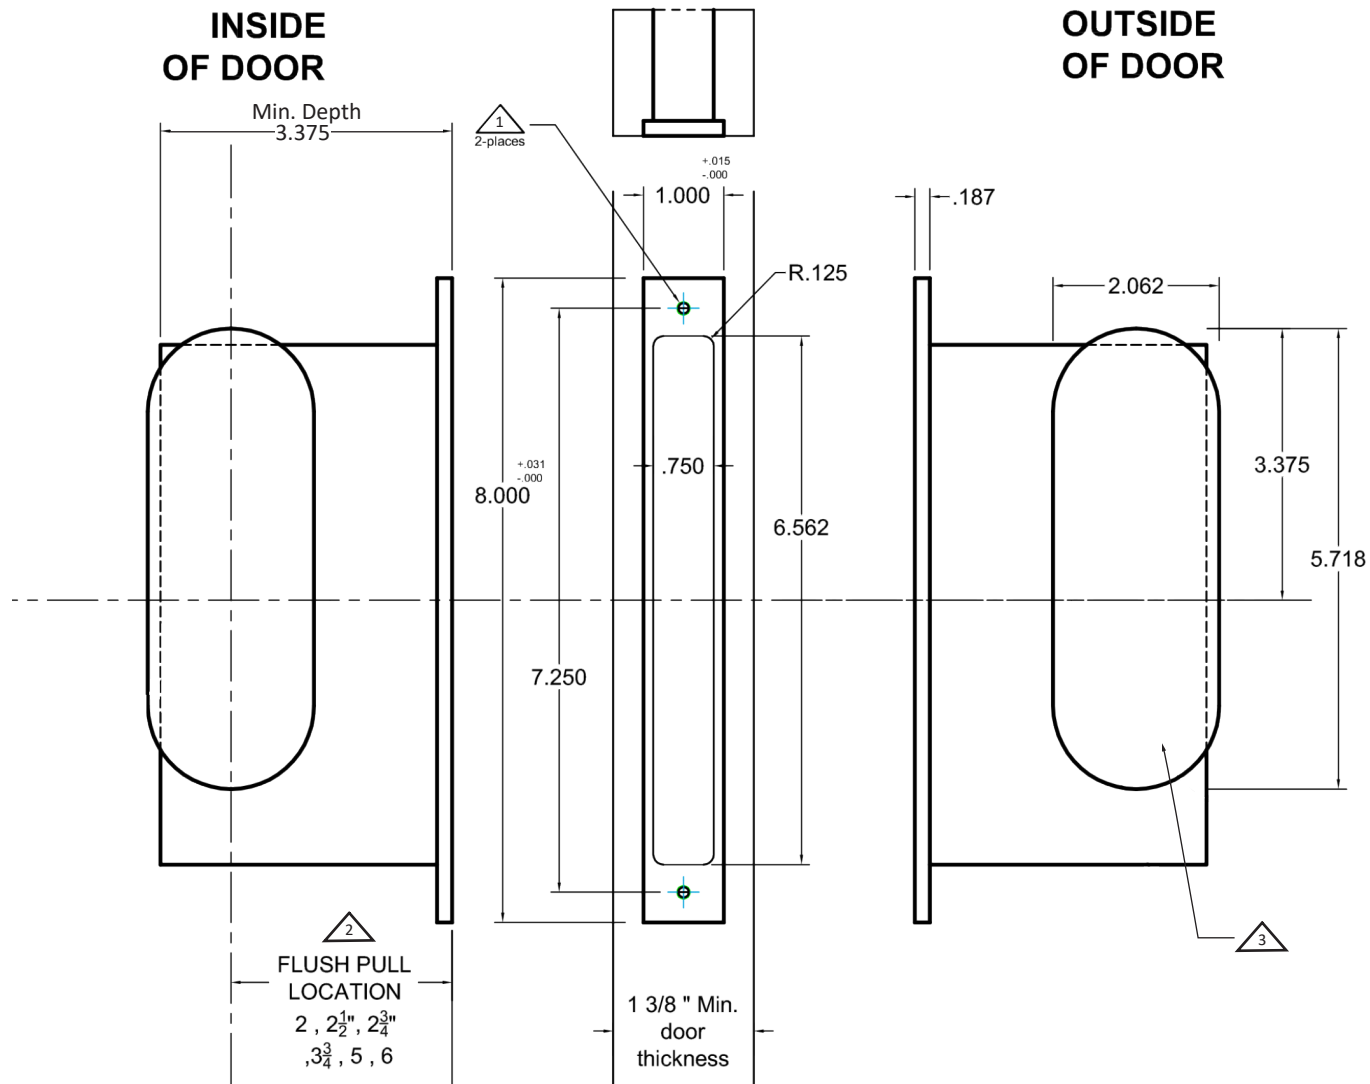

### Notes:

- △ Prep for #8 wood or 8-32 machine screws.
- △ Horizontally and vertically spacing of the flush pull is up to the end user. However, we do suggest to line up the backset with the other locks on the project, i.e. 2", 2 1/2", 2 3/4", 3 3/4", 4", 5" and 6".
- △ If you have flush pulls on both sides of the door, you may simply drill the flush cup through. NOTE: In a few rare situations, the flush pull may be mounted on the side only.

### Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See Spec.2011PDP/2011PDP-Q for additional information.



Standard 2011PDP/2011PDP-Q Quiet  
Door Edge Pull CA2002, CN2002,  
CO2002

T-ALH.2011PDP.2011PDP-Q.CA.CN.CO