


INSIDE
OF DOOR

OUTSIDE
OF DOOR

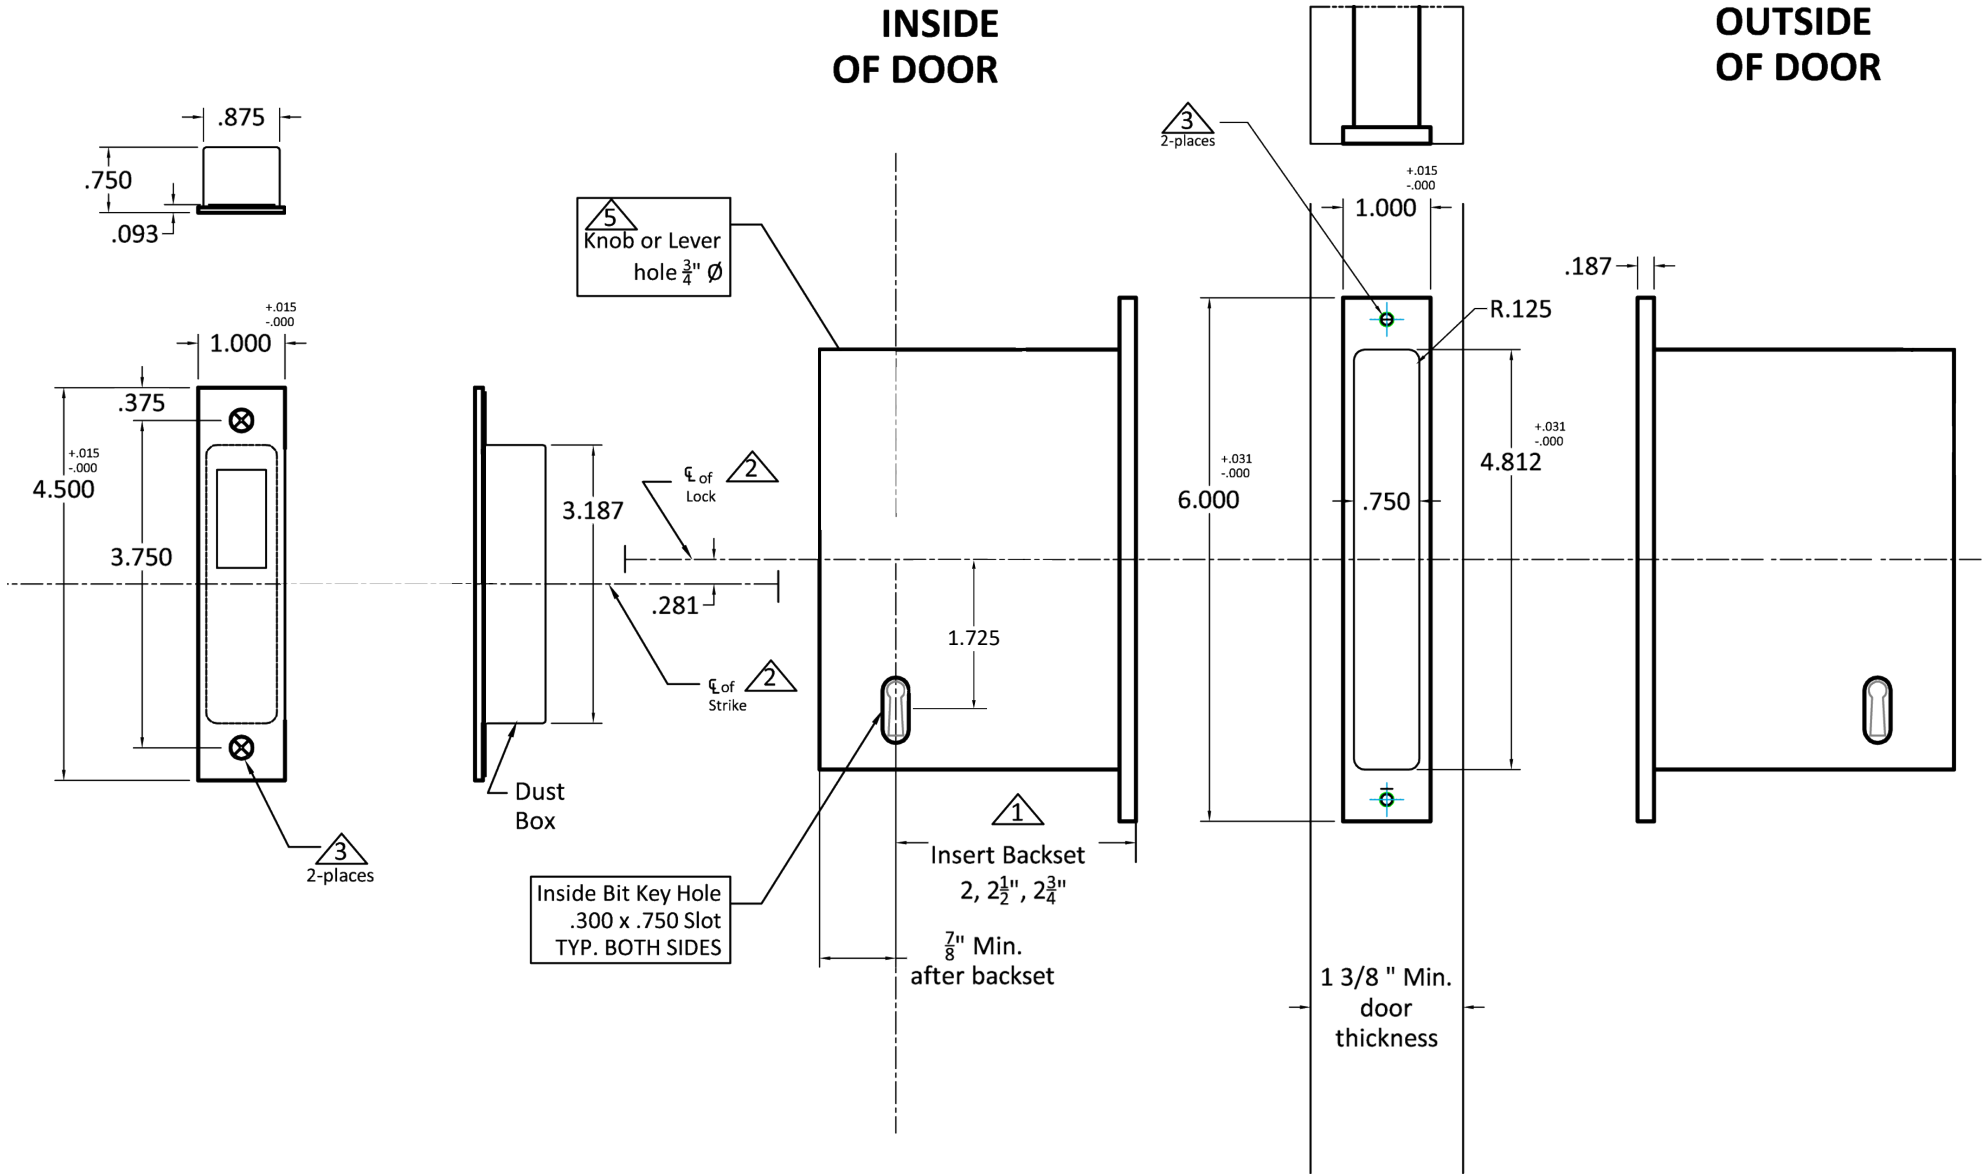

Notes:

- ① Insert backset here 2, 2 1/2" or 2 3/4"
- ② Centerline of strike is 9/32" lower than Centerline of front.
- ③ Prep for #8 wood or 8-32 machine screws.

Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See Spec.9824 for additional lock details.



Standard 9824LLB Interior Bit Key
Deadlock- All Backsets

T-ALH.9824LLB