


INSIDE  
OF DOOR

OUTSIDE  
OF DOOR

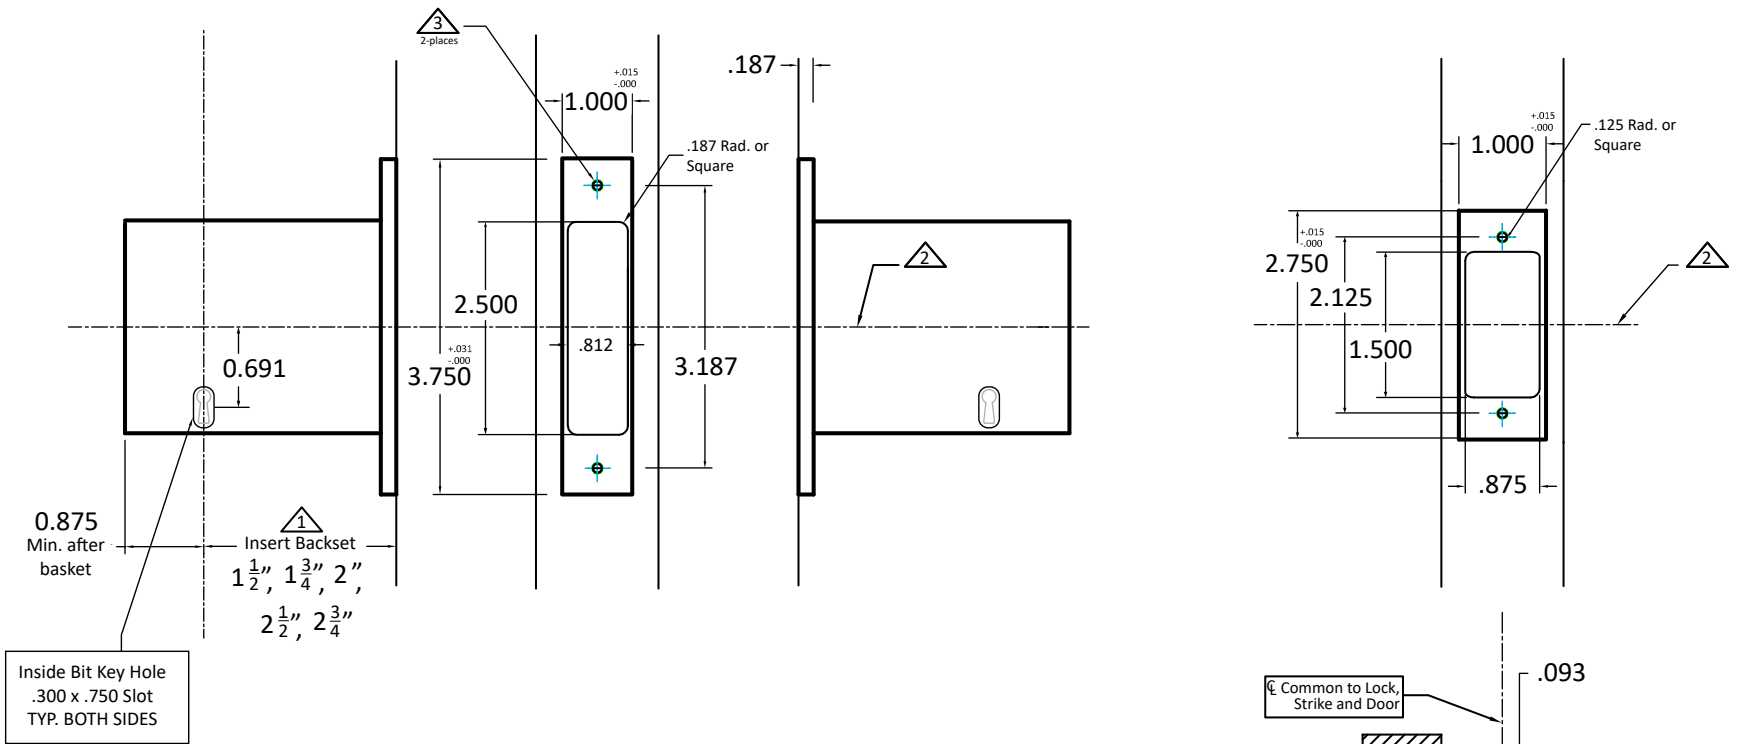

**Important Notes:**

- 1 Insert backset here  $1\frac{1}{2}$ ",  $1\frac{3}{4}$ ", 2",  $2\frac{1}{2}$ ",  $2\frac{3}{4}$ ".
- 2 Centerline of Lock and Strike.
- 3 Prep for #8 wood or 8-32 machine screws (Lock and Strike.)

**Additional Notes:**

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See Spec.9500BK for additional lock details.



ACCURATE  
LOCK & HARDWARE  
AMERICAN CRAFTED SINCE 1972

Standard 9500BK Bit Key Deadlock  
All Backsets

T-ALH.9500BK