


INSIDE OF DOOR

OUTSIDE OF DOOR

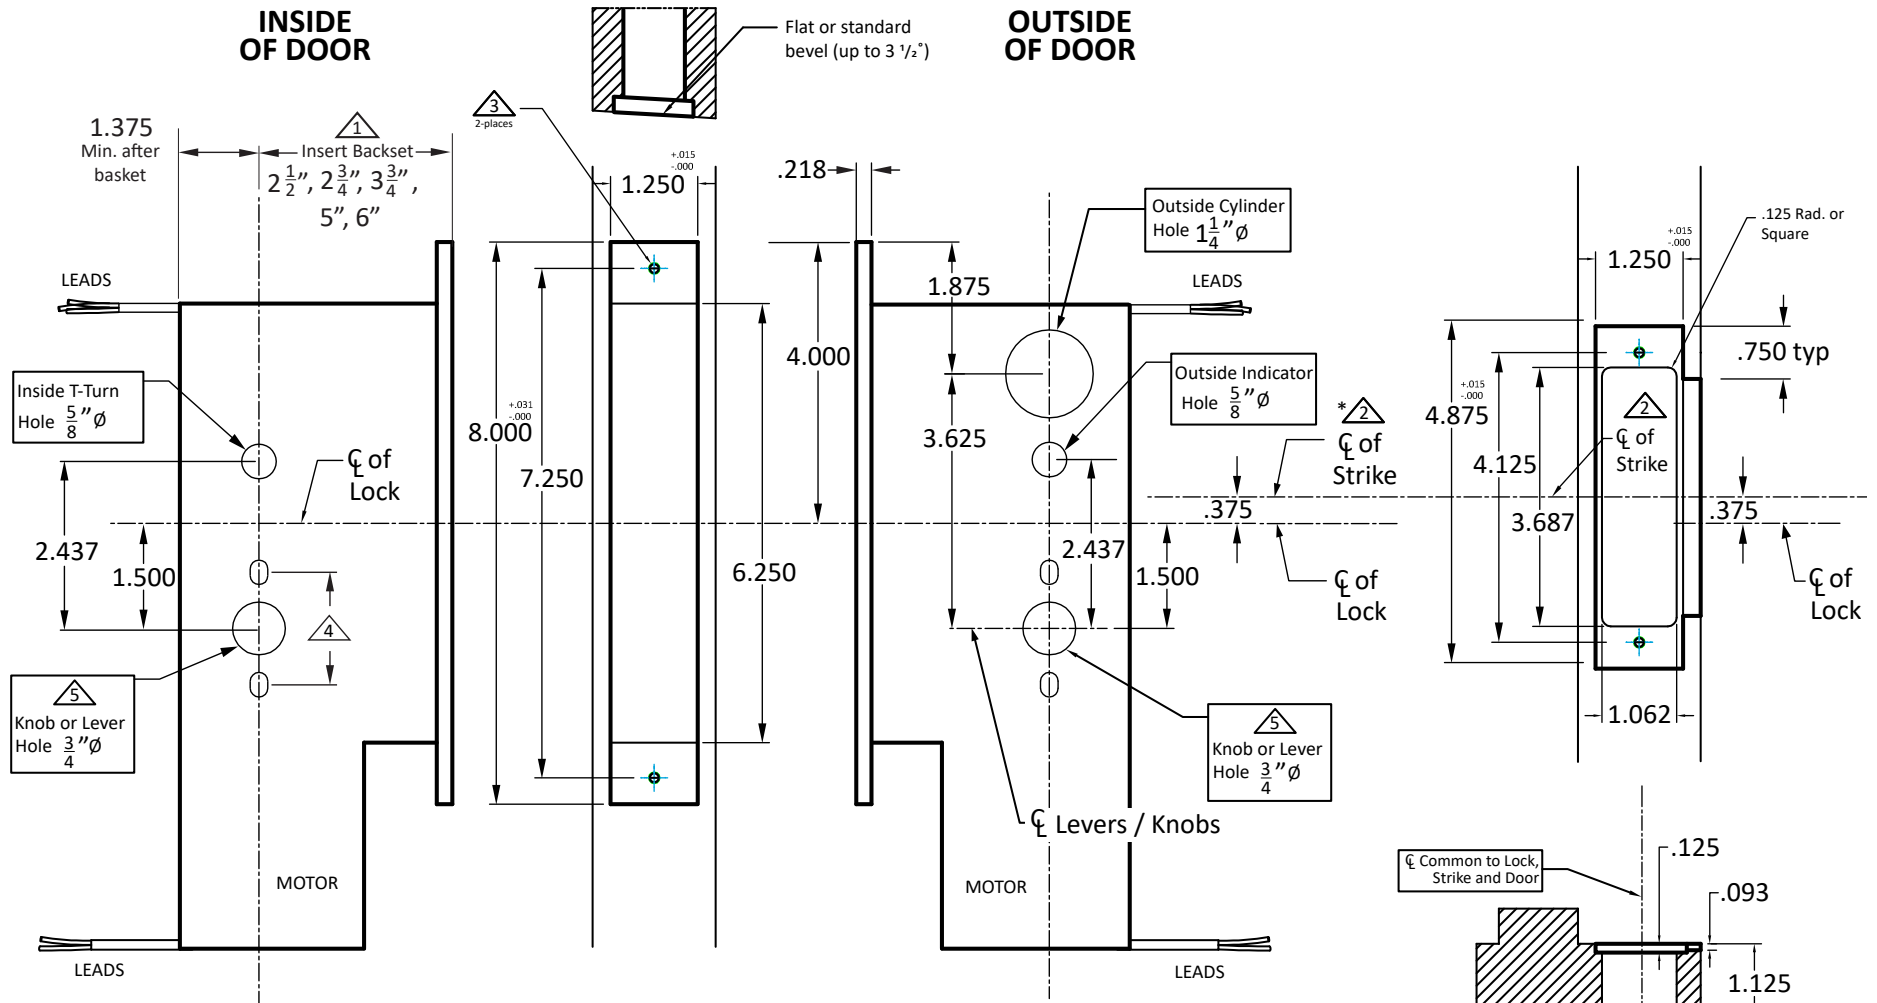

Important Notes:

- ① Insert backset here 2 1/2", 2 3/4", 3 3/4", 5", 6".
- ② ASA strike mounted 3/8" ABOVE centerline of lock.
- ③ Prep for 12-24 machine screws (lock and strike.)
- ④ Through-bolting holes **ONLY** if required. See trim manufacturers' standard template for details.
Accurate locks accommodate 1 1/2" to 1 11/16" center to centers and up to 1/4" dia. post.
If there are any additional questions about through-bolting, please contact us.
- ⑤ Knob/Lever holes may vary from different trim manufacturers. Please refer to their templates to confirm dimensions.

Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) Please contact us for double lipped template if needed.
- c) See spec sheets for additional lock details.



ACCURATE
LOCK & HARDWARE
AMERICAN CRAFTED SINCE 1972

M9143ELR - Hollow Metal Door

T-ALH.M9143ELR.HM