


## INSIDE OF DOOR

## OUTSIDE OF DOOR

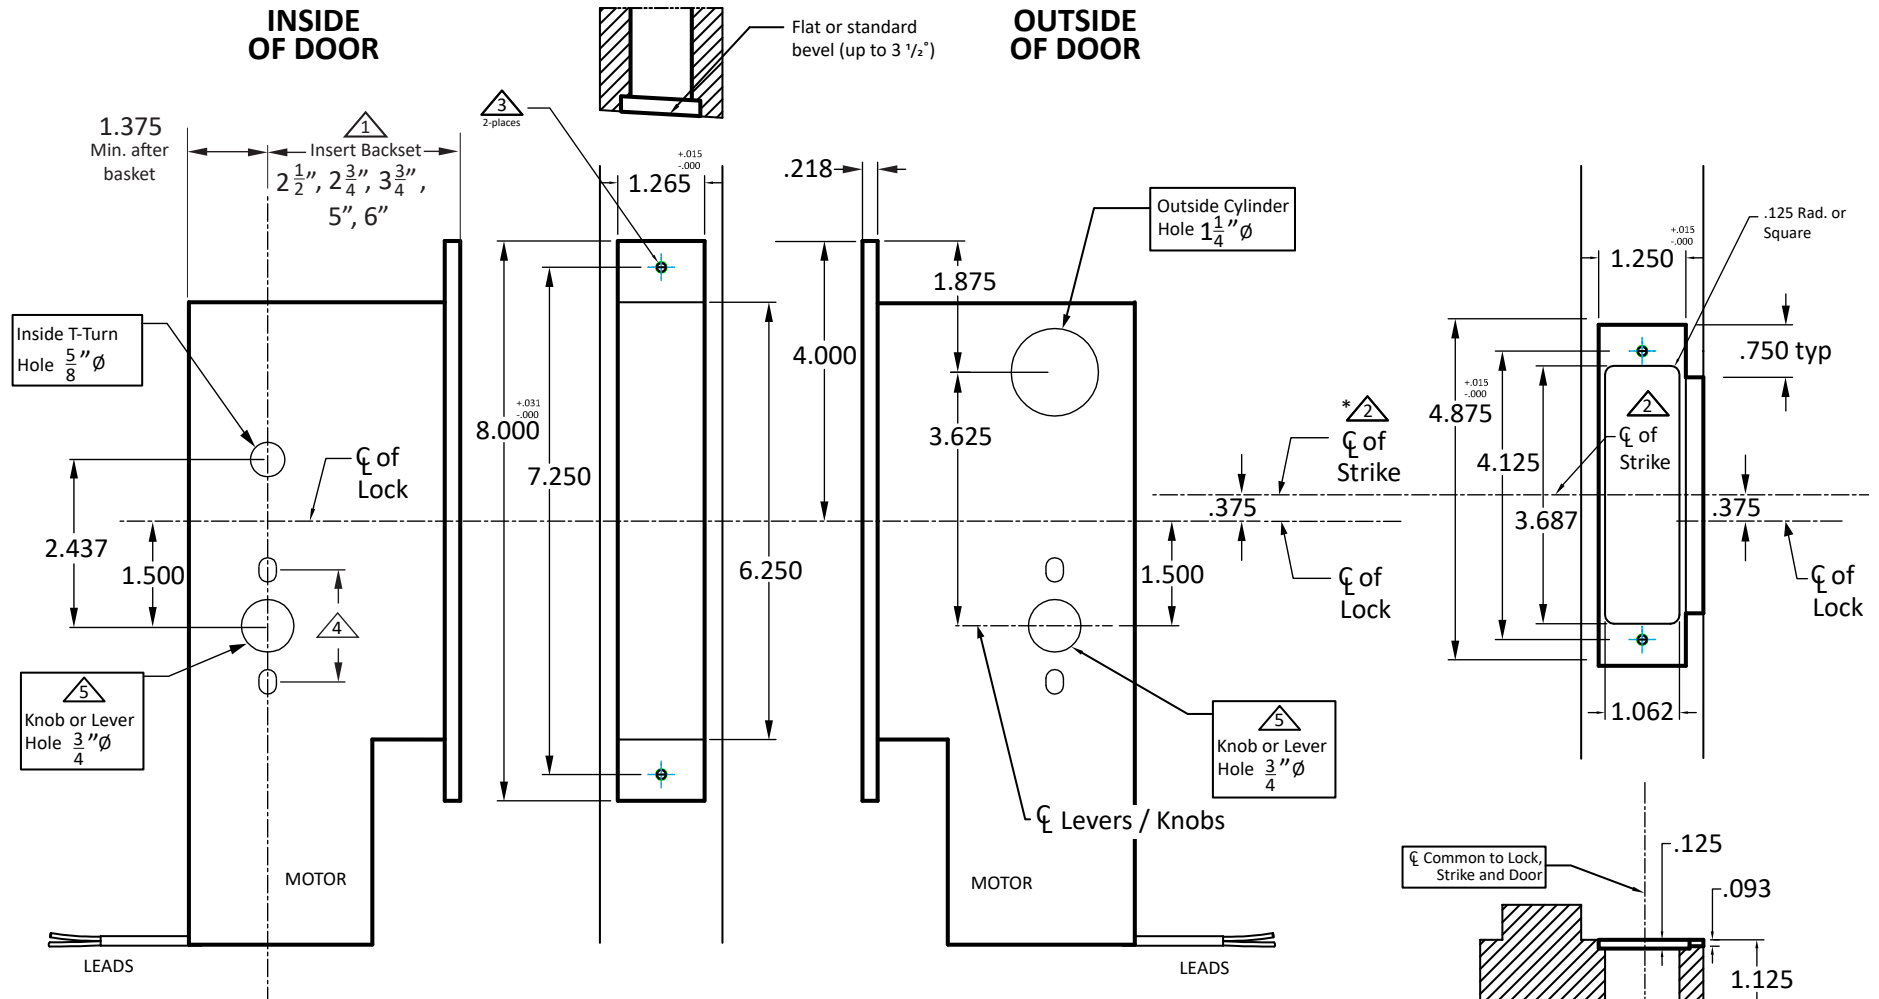

### Important Notes:

- ① Insert backset here  $2\frac{1}{2}"$ ,  $2\frac{3}{4}"$ ,  $3\frac{3}{4}"$ ,  $5"$ ,  $6"$ .
- ② ASA strike mounted  $\frac{3}{8}"$  ABOVE centerline of lock.
- ③ Prep for 12-24 machine screws (lock and strike.)
- ④ Through-bolting holes **ONLY** if required. See trim manufacturers' standard template for details.  
Accurate locks accommodate  $1\frac{1}{2}"$  to  $1\frac{11}{16}"$  center to centers and up to  $\frac{1}{4}"$  dia. post.  
If there are any additional questions about through-bolting, please contact us.
- ⑤ Knob/Lever holes may vary from different trim manufacturers. Please refer to their templates to confirm dimensions.

### Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) Please contact us for double lipped template if needed.
- c) See spec sheets for additional lock details.



**ACCURATE**  
LOCK & HARDWARE  
AMERICAN CRAFTED SINCE 1972

M9134ELR - Hollow Metal Door

T-ALH.M9134ELR.HM