


# INSIDE OF DOOR

# OUTSIDE OF DOOR (RH Shown)

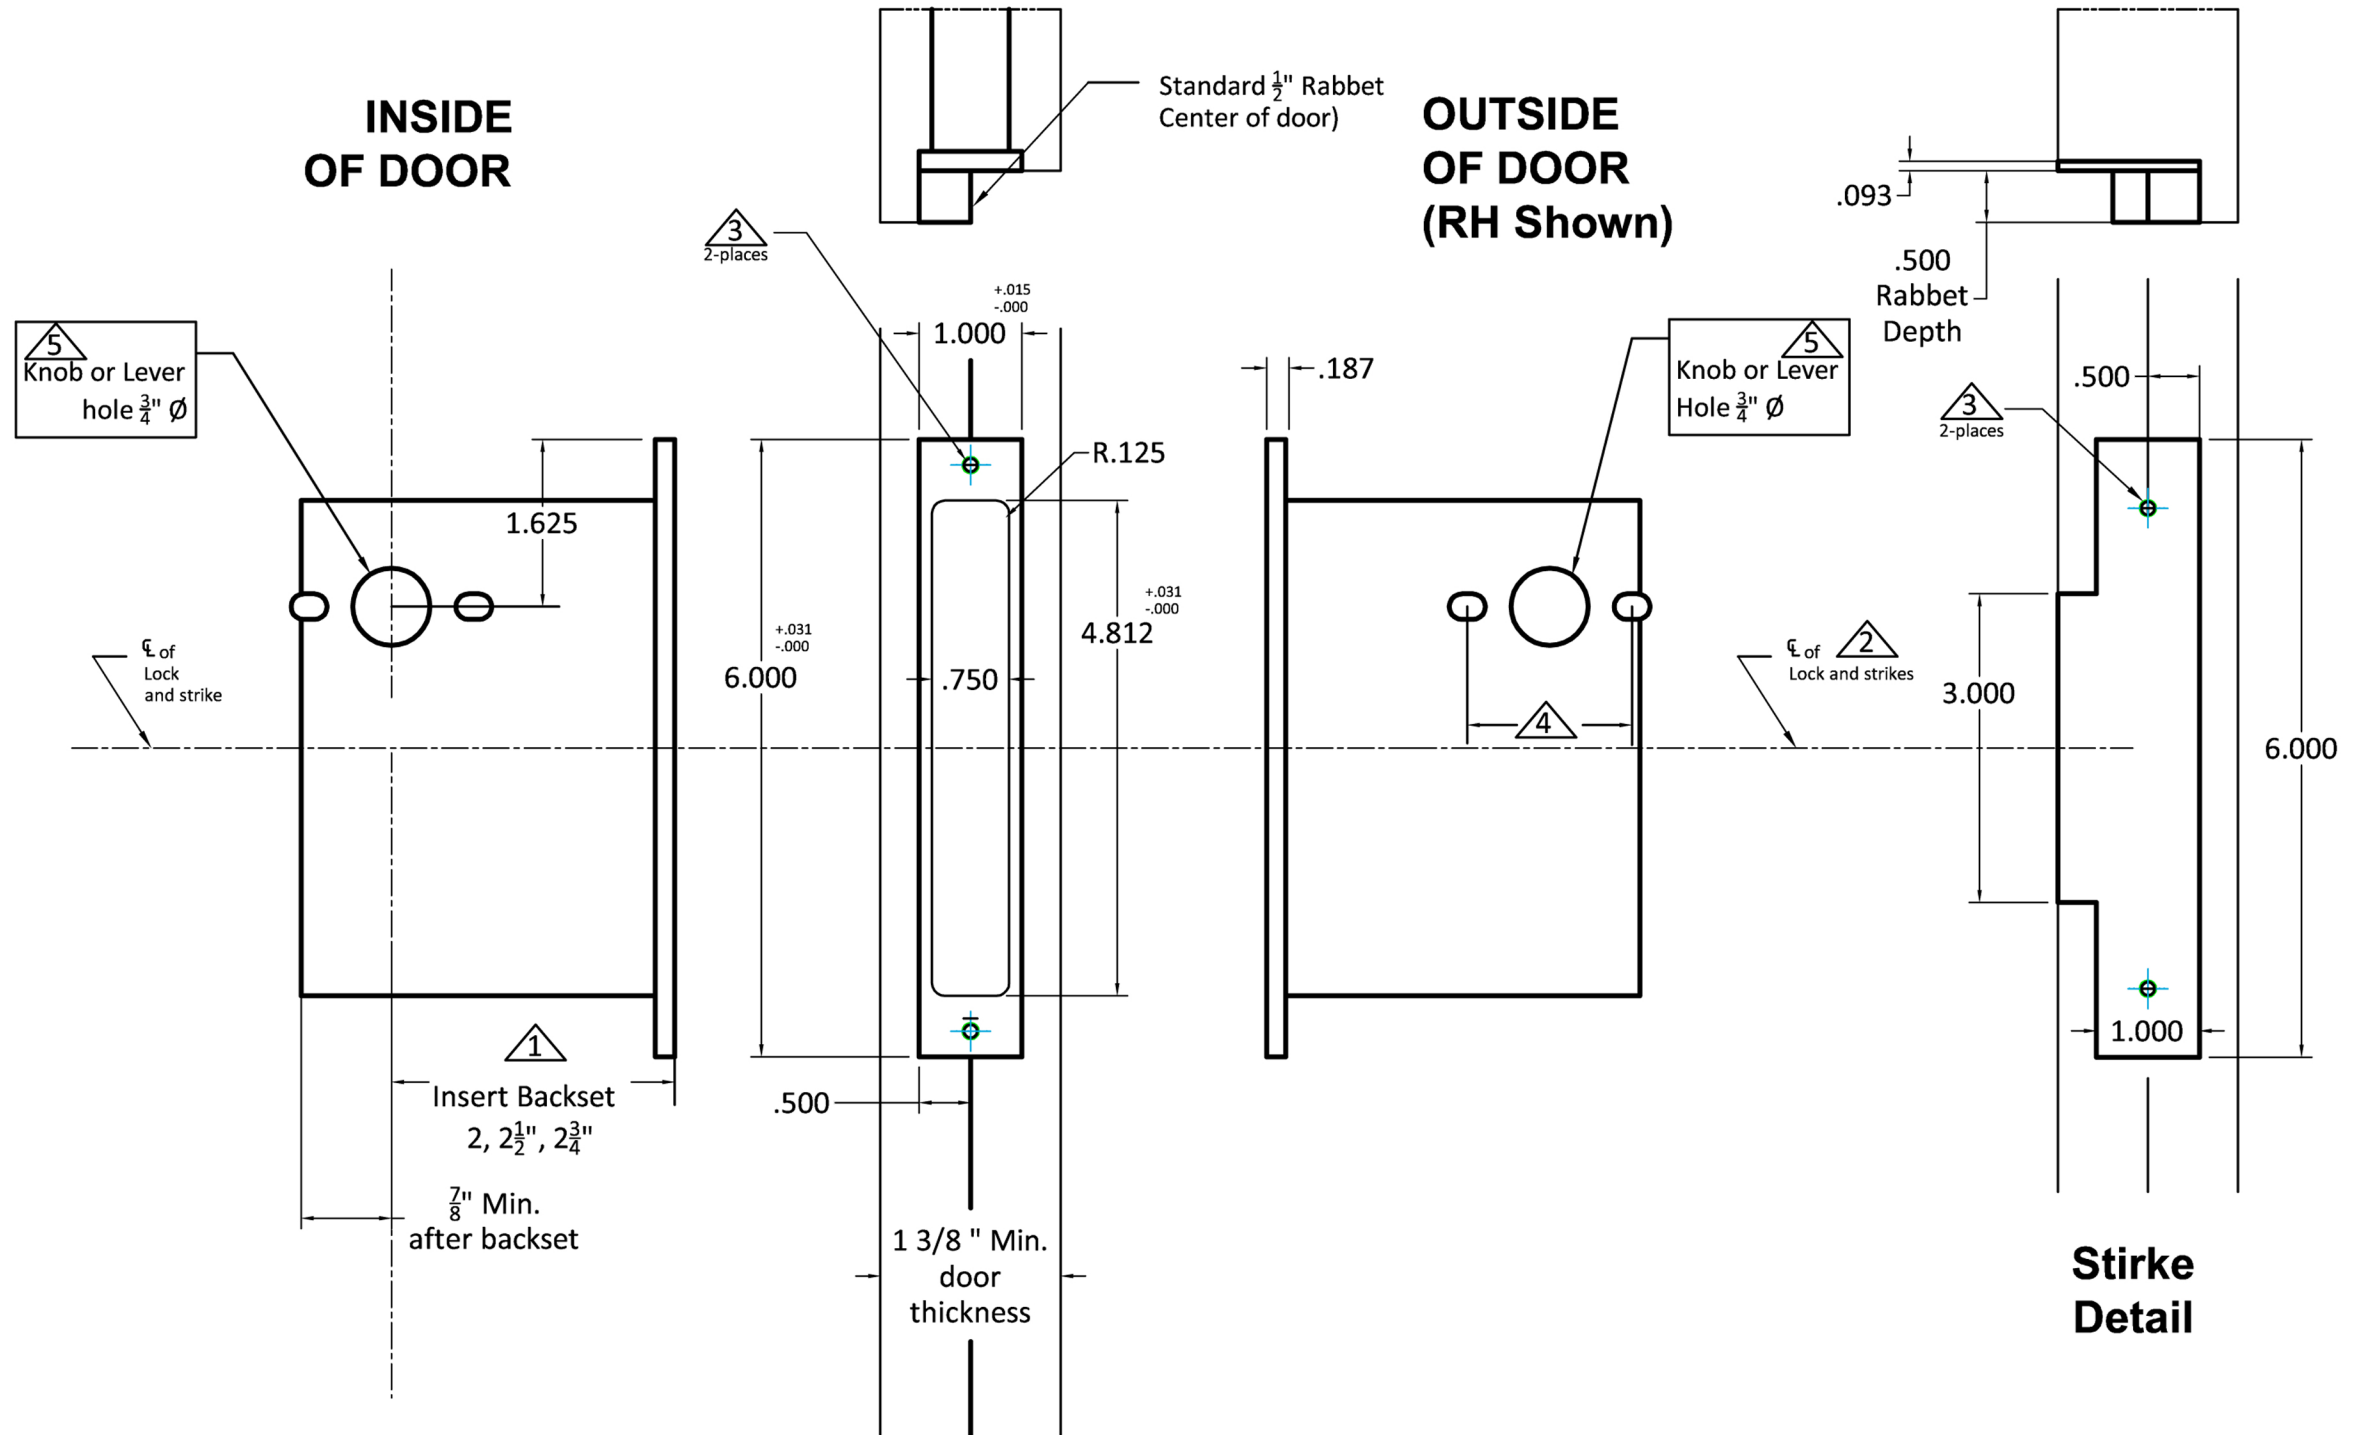

### Notes:

- ▲ Insert backset here 2, 2 $\frac{1}{2}$ " or 2 $\frac{3}{4}$ "
  - ▲ Centerline of strike and front are the same.
  - ▲ Prep for #8 wood or 8-32 machine screws.
  - ▲ Through-bolting holes **ONLY** if required. See trim manufacturers standard template for details
- Accurate lock's accommodates 1 $\frac{1}{2}$ " to 1 $\frac{11}{16}$ " center to centers and up to  $\frac{1}{4}$ " dia. post.  
**IMPORTANT: Through-bolting holes only apply to 2 $\frac{1}{2}$ " and 2 $\frac{3}{4}$ " backset locks (there is no through-bolting on the 2" backset version)**
- ▲ Knob / Lever holes may vary from different trim manufacturers. Please refer to their templates to confirm these dimensions.

### Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See catalog / spec sheets for additional lock details

**ACCURATE**  
 LOCK & HARDWARE  
 AMERICAN CRAFTED SINCE 1972

Standard 9825 Passage Latch with  
 Standard Rabbet- All Backsets

T-ALH.9825.RAB