


INSIDE
OF DOOR

Standard $\frac{1}{2}$ " Rabbet
Center of door

OUTSIDE
OF DOOR
(RH Shown)

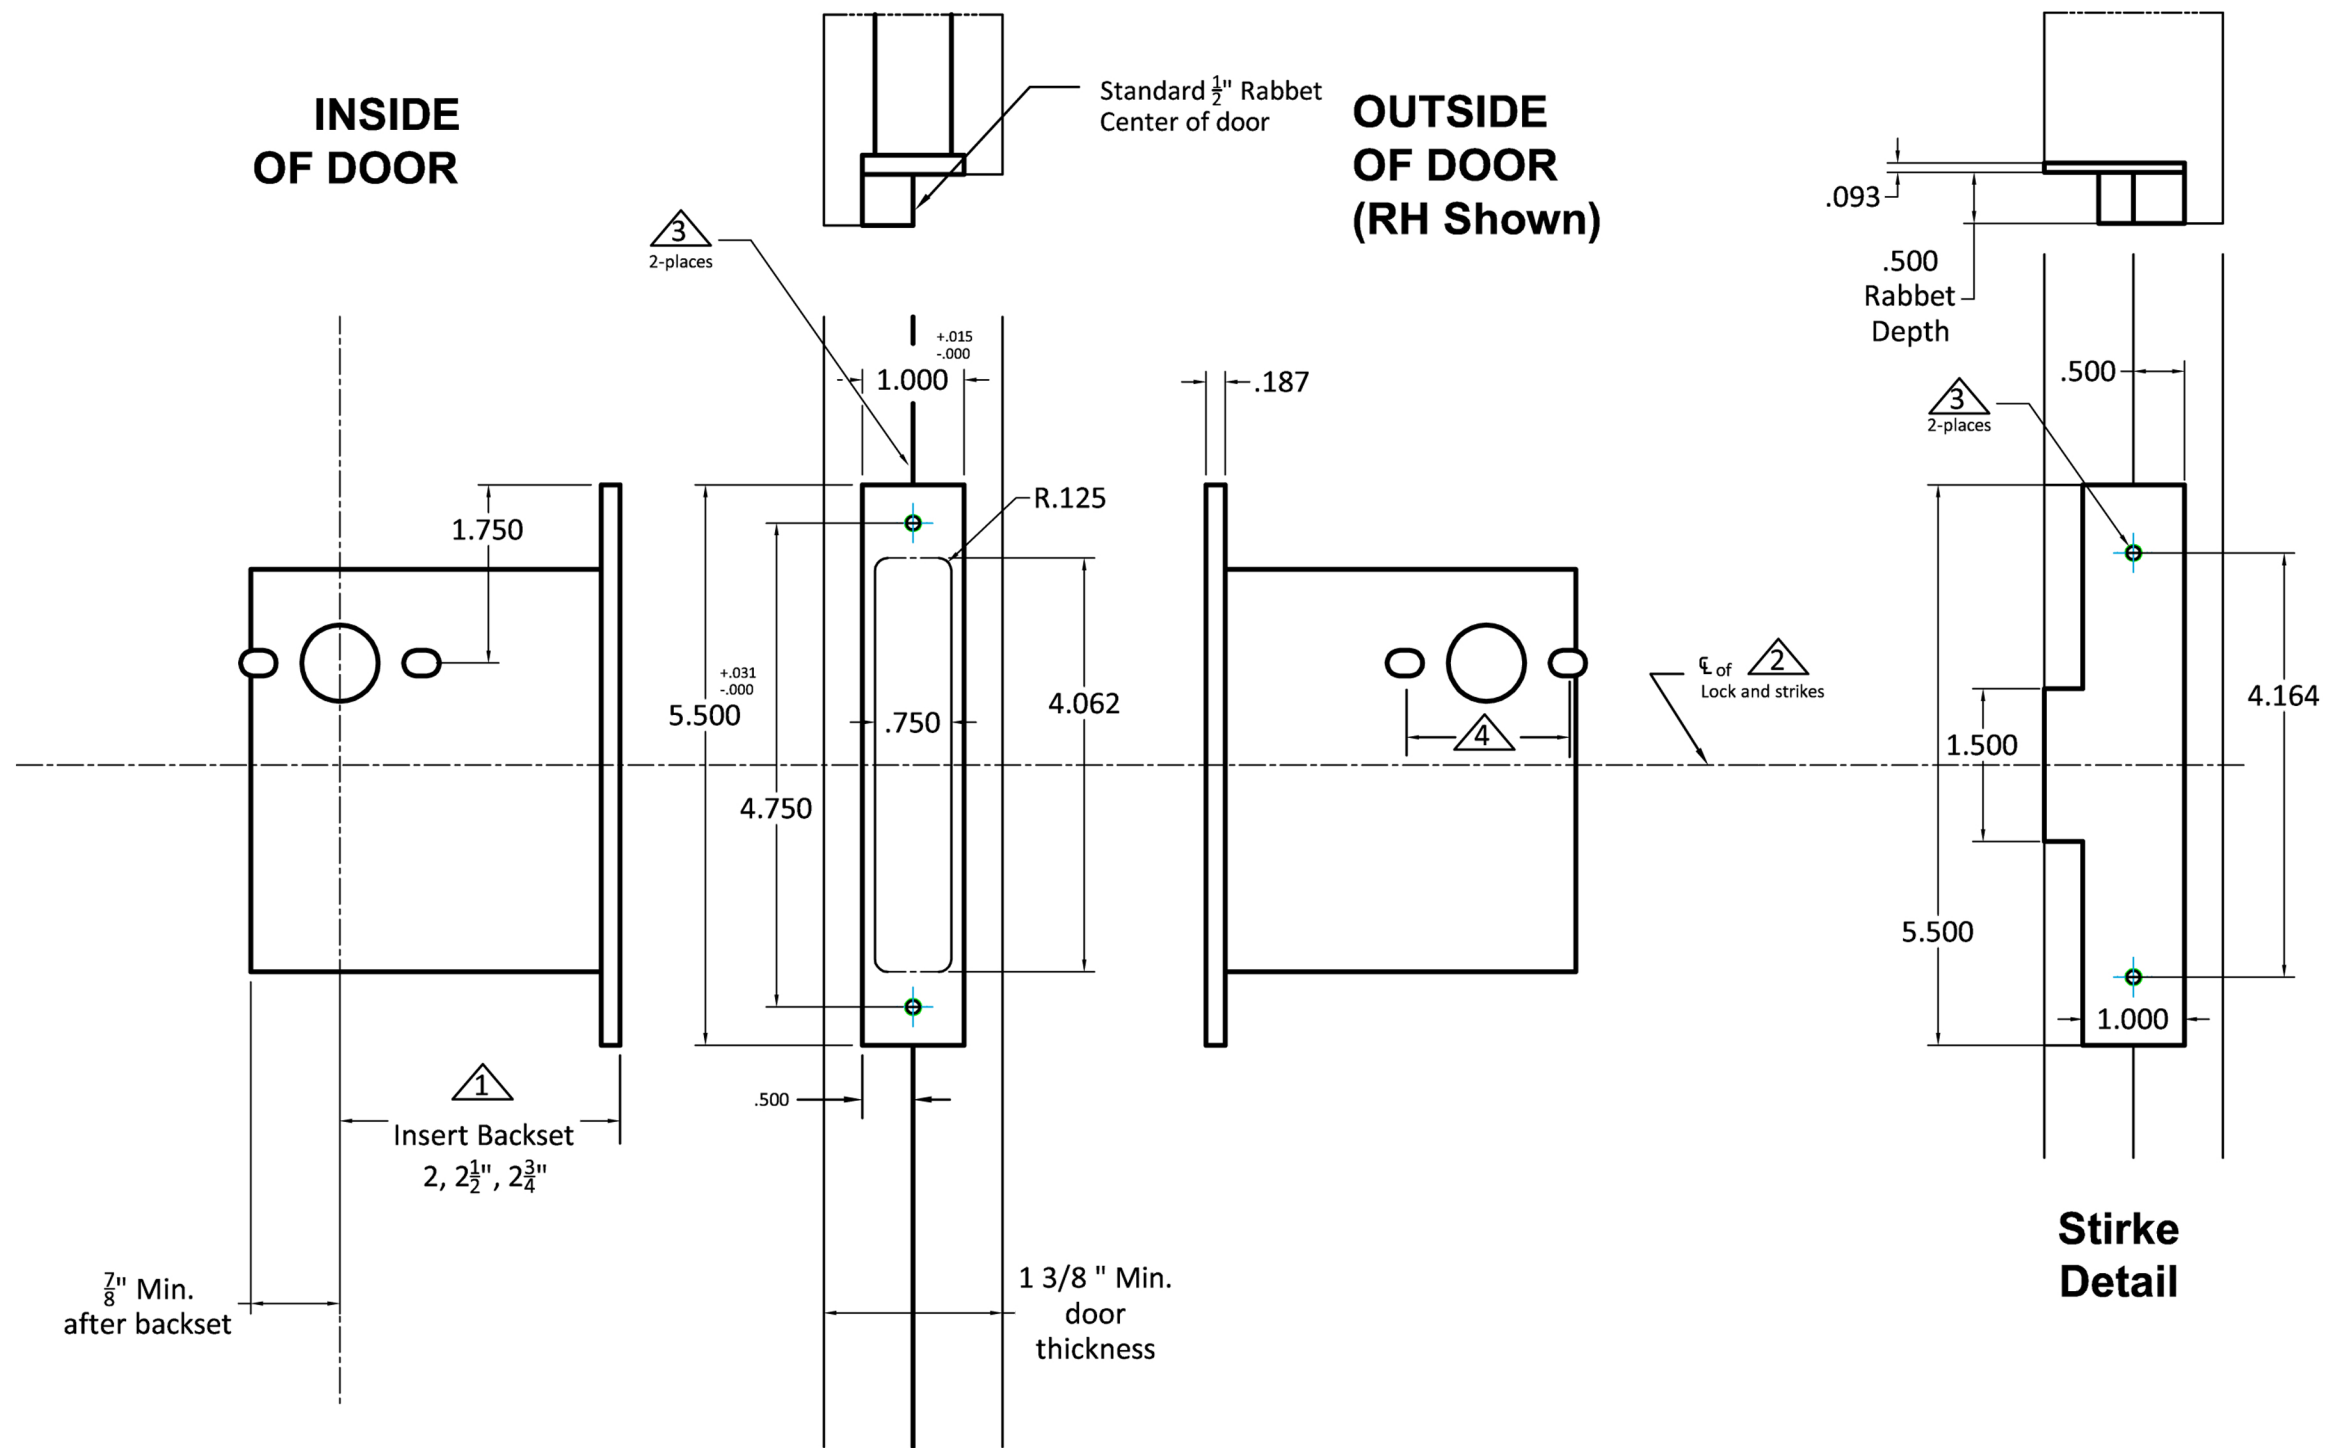

Strike
Detail

Notes:

- ① Insert backset here 2, 2 $\frac{1}{2}$ " or 2 $\frac{3}{4}$ "
- ② Centerline of strike and front are the same.
- ③ Prep for #8 wood or 8-32 machine screws.
- ④ Through-bolting holes **ONLY** if required. See trim manufacturers standard template for details
Accurate lock's accommodates 1 $\frac{1}{2}$ " to 1 $\frac{11}{16}$ " center to centers and up to $\frac{1}{4}$ " dia. post.
IMPORTANT: Through-bolting holes only apply to 2 $\frac{1}{2}$ " and 2 $\frac{3}{4}$ " backset locks (there is no through-bolting on the 2" backset version)
- ⚠ Knob / Lever holes may vary from different trim manufacturers. Please refer to their templates to confirm these dimensions.

Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See catalog / spec sheets for additional lock details



Standard 9525 Passage Latch with
Standard Rabbet- All Backsets

T-ALH.9525.RAB