


**INSIDE
OF DOOR**

**OUTSIDE
OF DOOR**

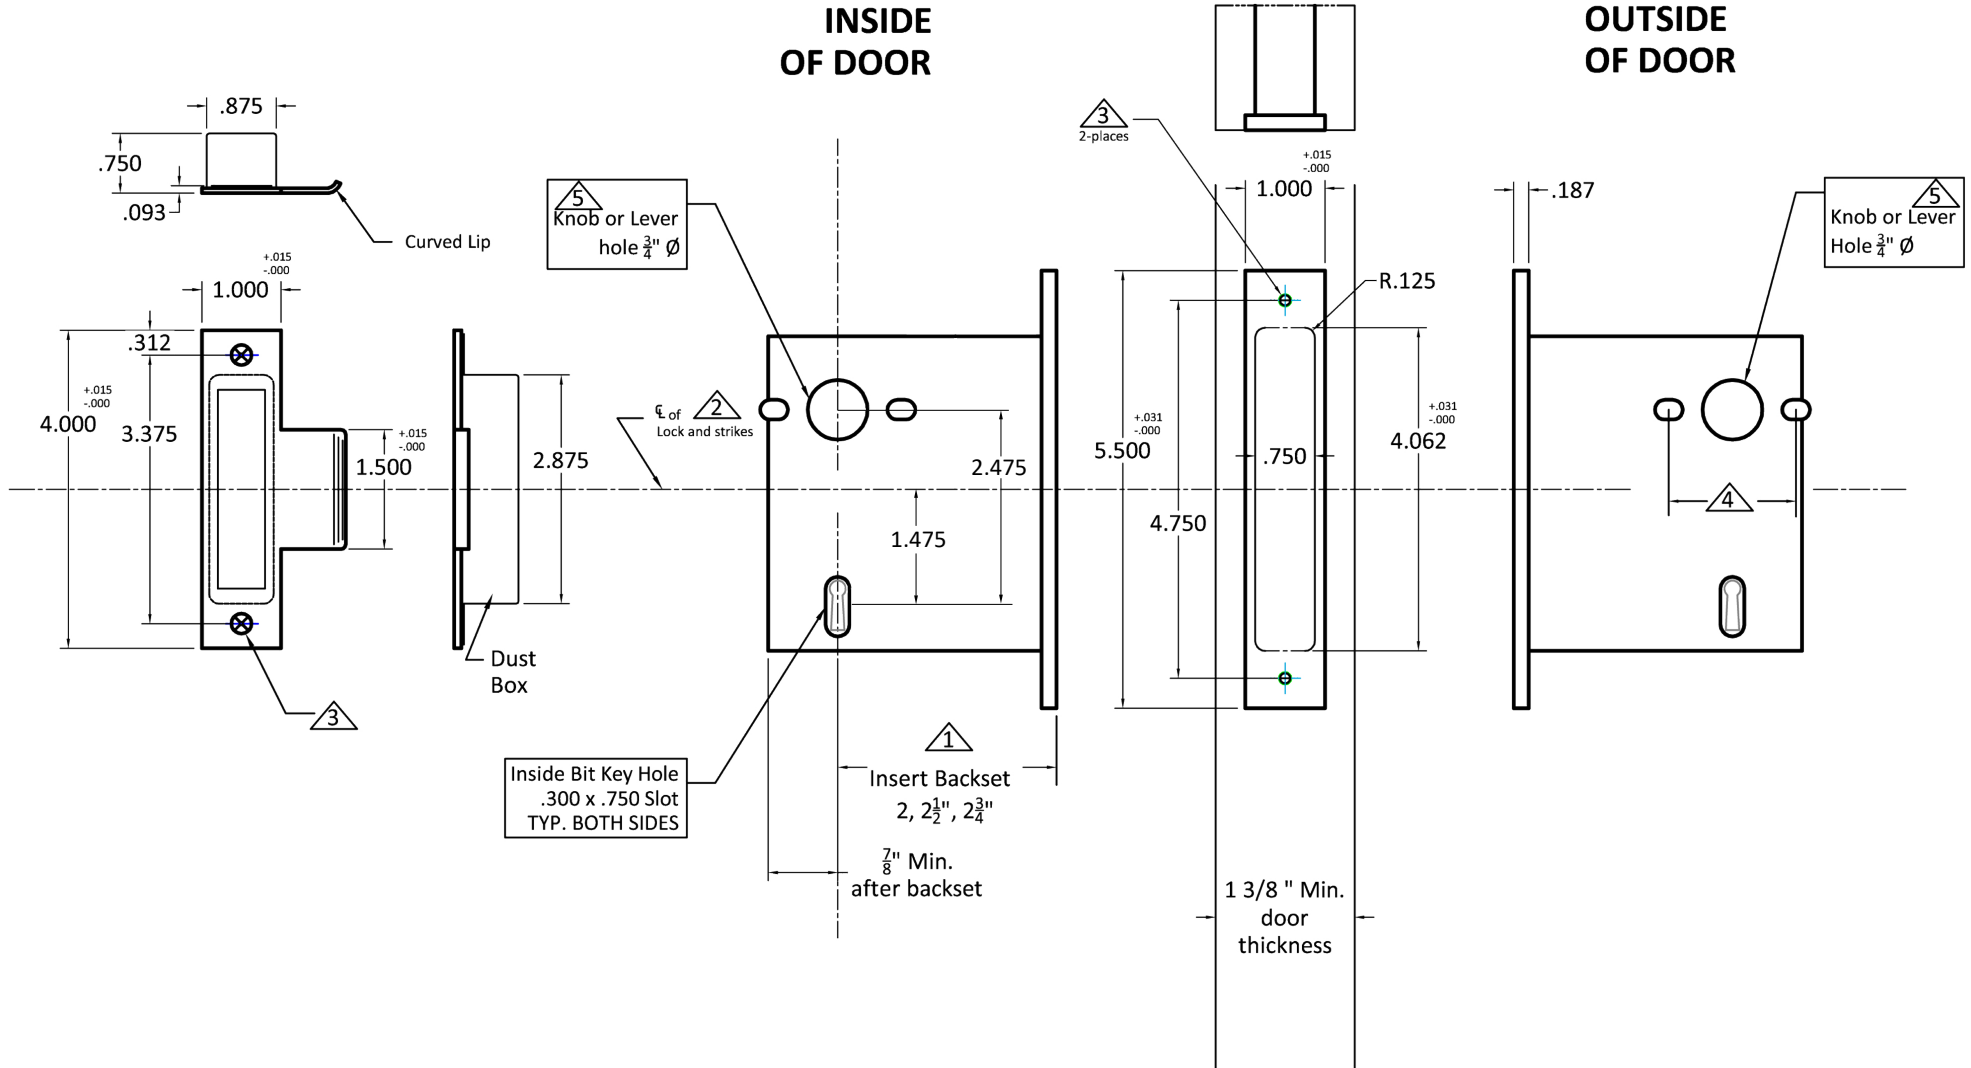

Notes:

- ⚠ Insert backset here 2, 2 1/2" or 2 3/4"
- ⚠ Centerline of strike and front are the same.
- ⚠ Prep for #8 wood or 8-32 machine screws.
- ⚠ Through-bolting holes **ONLY** if required. See trim manufacturers standard template for details.
Accurate lock's accommodates 1 1/2" to 1 11/16" center to centers and up to 1/4" dia. post.
IMPORTANT: Through-bolting holes only apply to 2 1/2" and 2 3/4" backset locks (there is no through-bolting on the 2" backset version)
- ⚠ Knob /Lever holes may vary from different trim manufacturers. Please refer to their templates to confirm these dimensions.

Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See Spec.9524 for additional lock details.



Standard 9524 Bit Key Lock
All Backsets

T-ALH.9524