


# INSIDE OF DOOR

# OUTSIDE OF DOOR

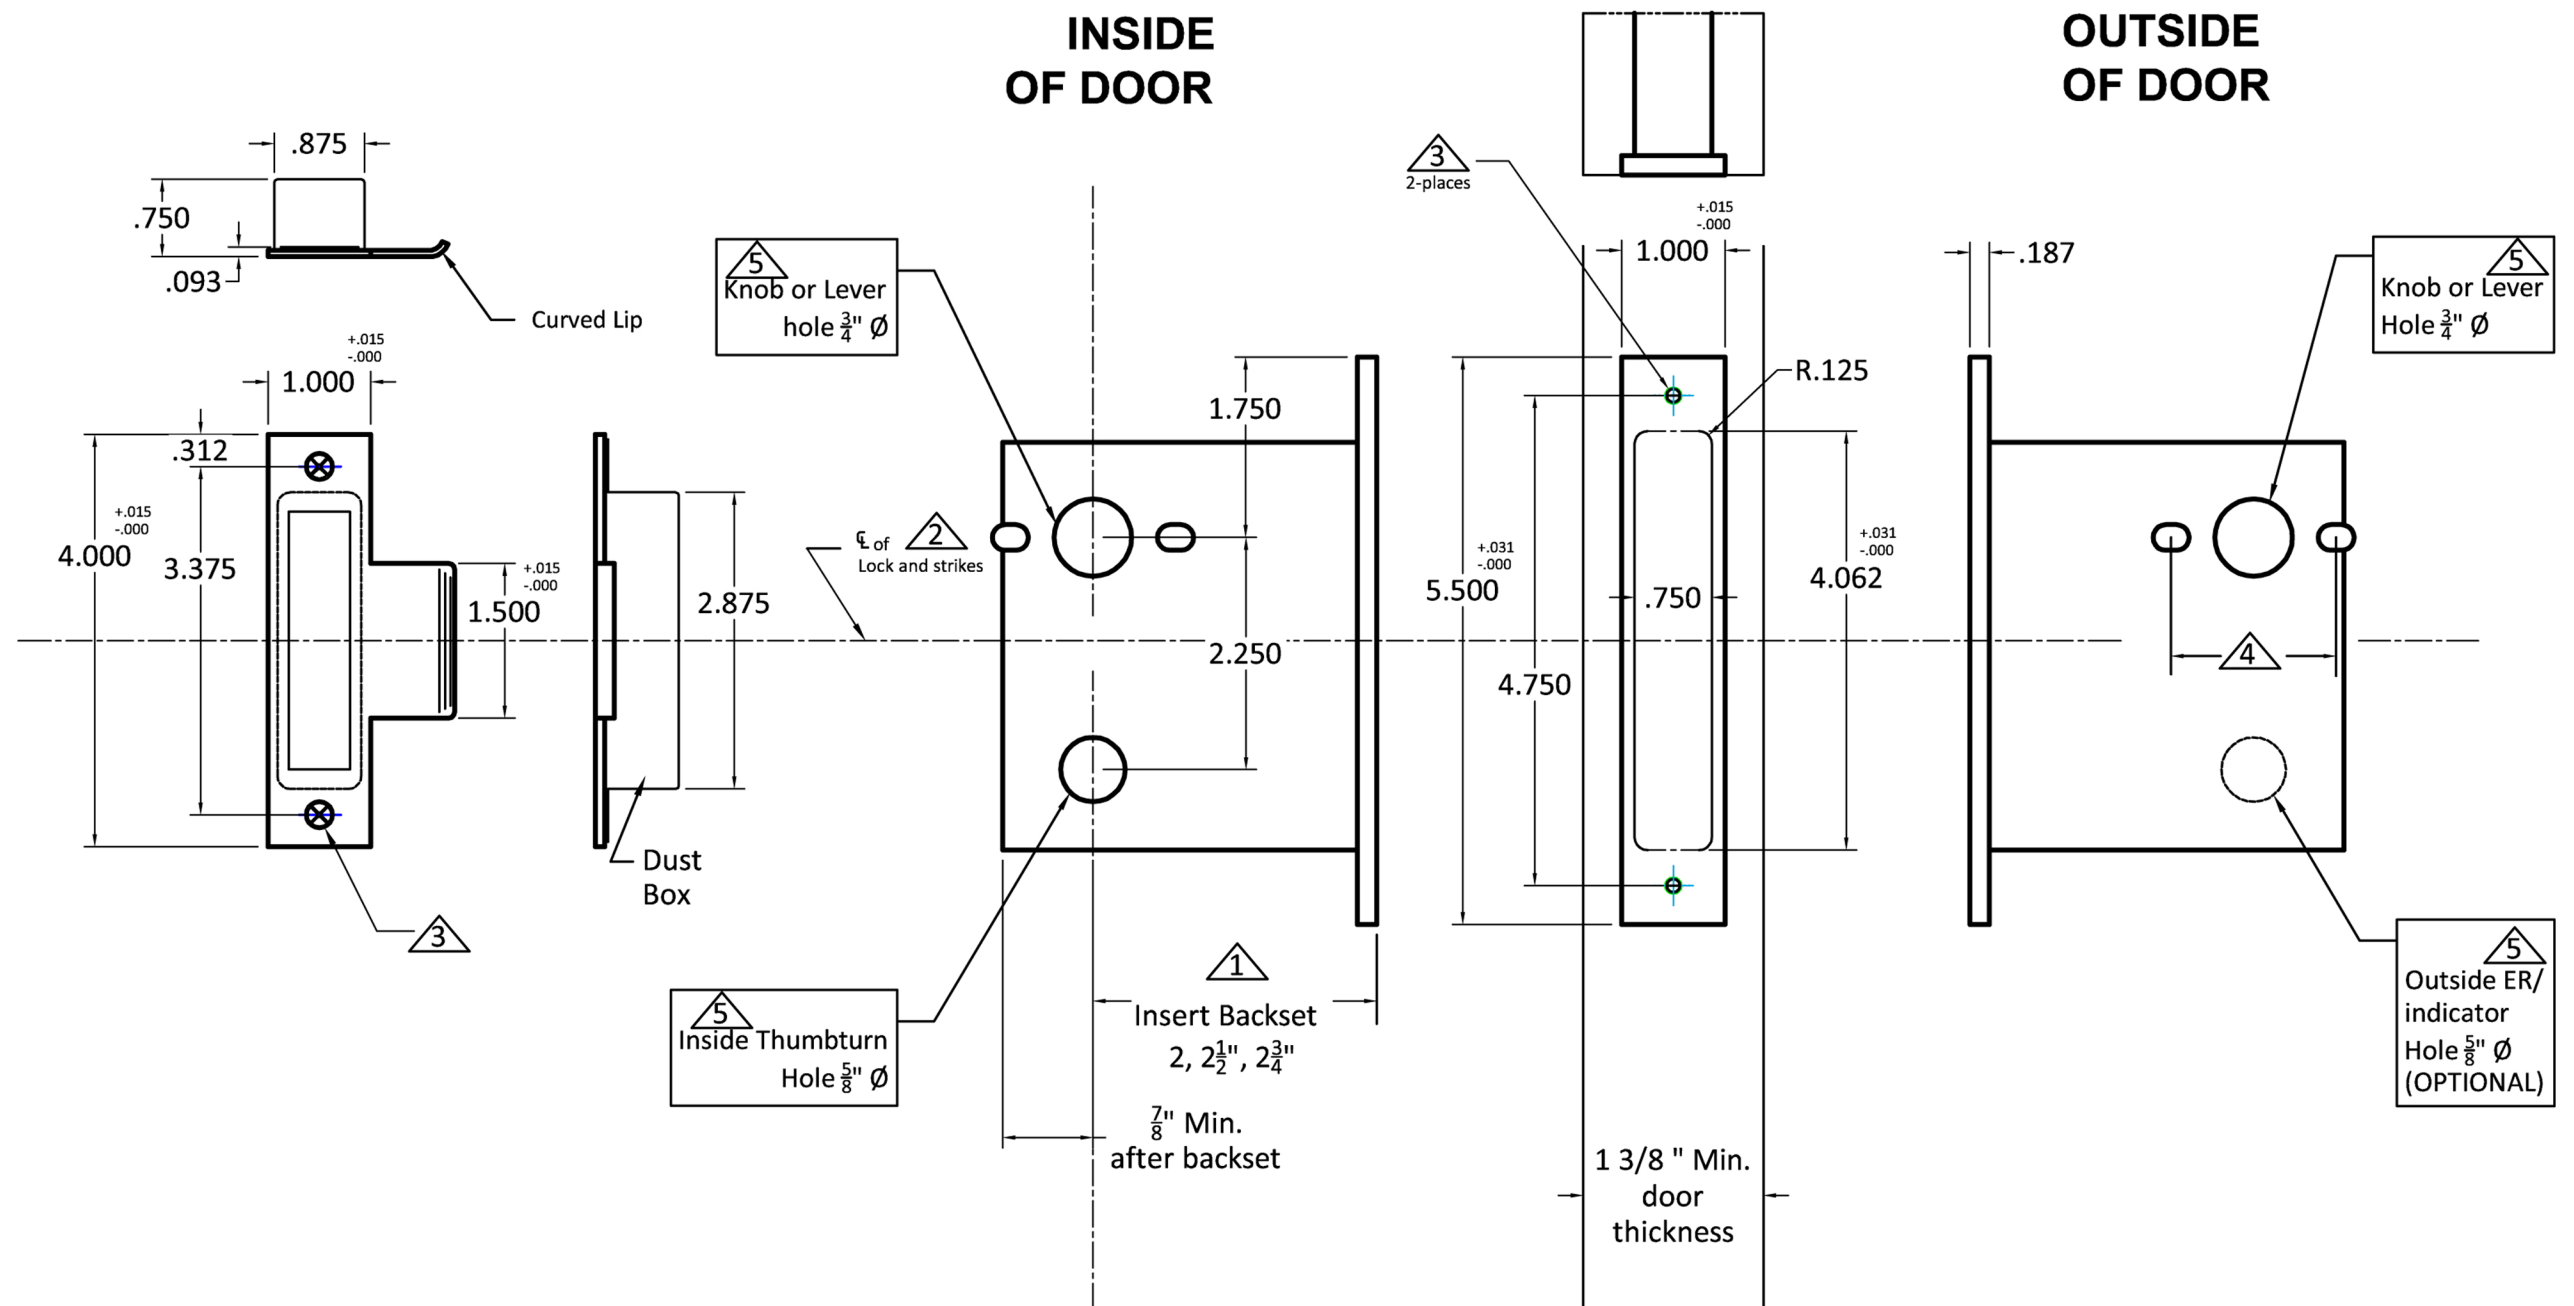

### Notes:

- ① Insert backset here 2, 2 1/2" or 2 3/4"
- ② Centerline of strike and front are the same.
- ③ Prep for #8 wood or 8-32 machine screws.
- ④ Through-bolting holes **ONLY** if required. See trim manufacturers standard template for details  
Accurate lock's accommodates 1 1/2" to 1 11/16" center to centers and up to 1/4" dia. post.  
**IMPORTANT: Through-bolting holes only apply to 2 1/2" and 2 3/4" backset locks (there is no through-bolting on the 2" backset version)**
- ⑤ Knob, thumbturn and ER holes may vary from different trim manufacturers. Please refer to their templates to confirm these dimensions.

### Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See catalog / spec sheets for additional lock details

**ACCURATE**  
LOCK & HARDWARE  
AMERICAN CRAFTED SINCE 1972

Standard 9539 Privacy Lock-  
All Backsets

T-ALH.9539