


## INSIDE OF DOOR

## OUTSIDE OF DOOR

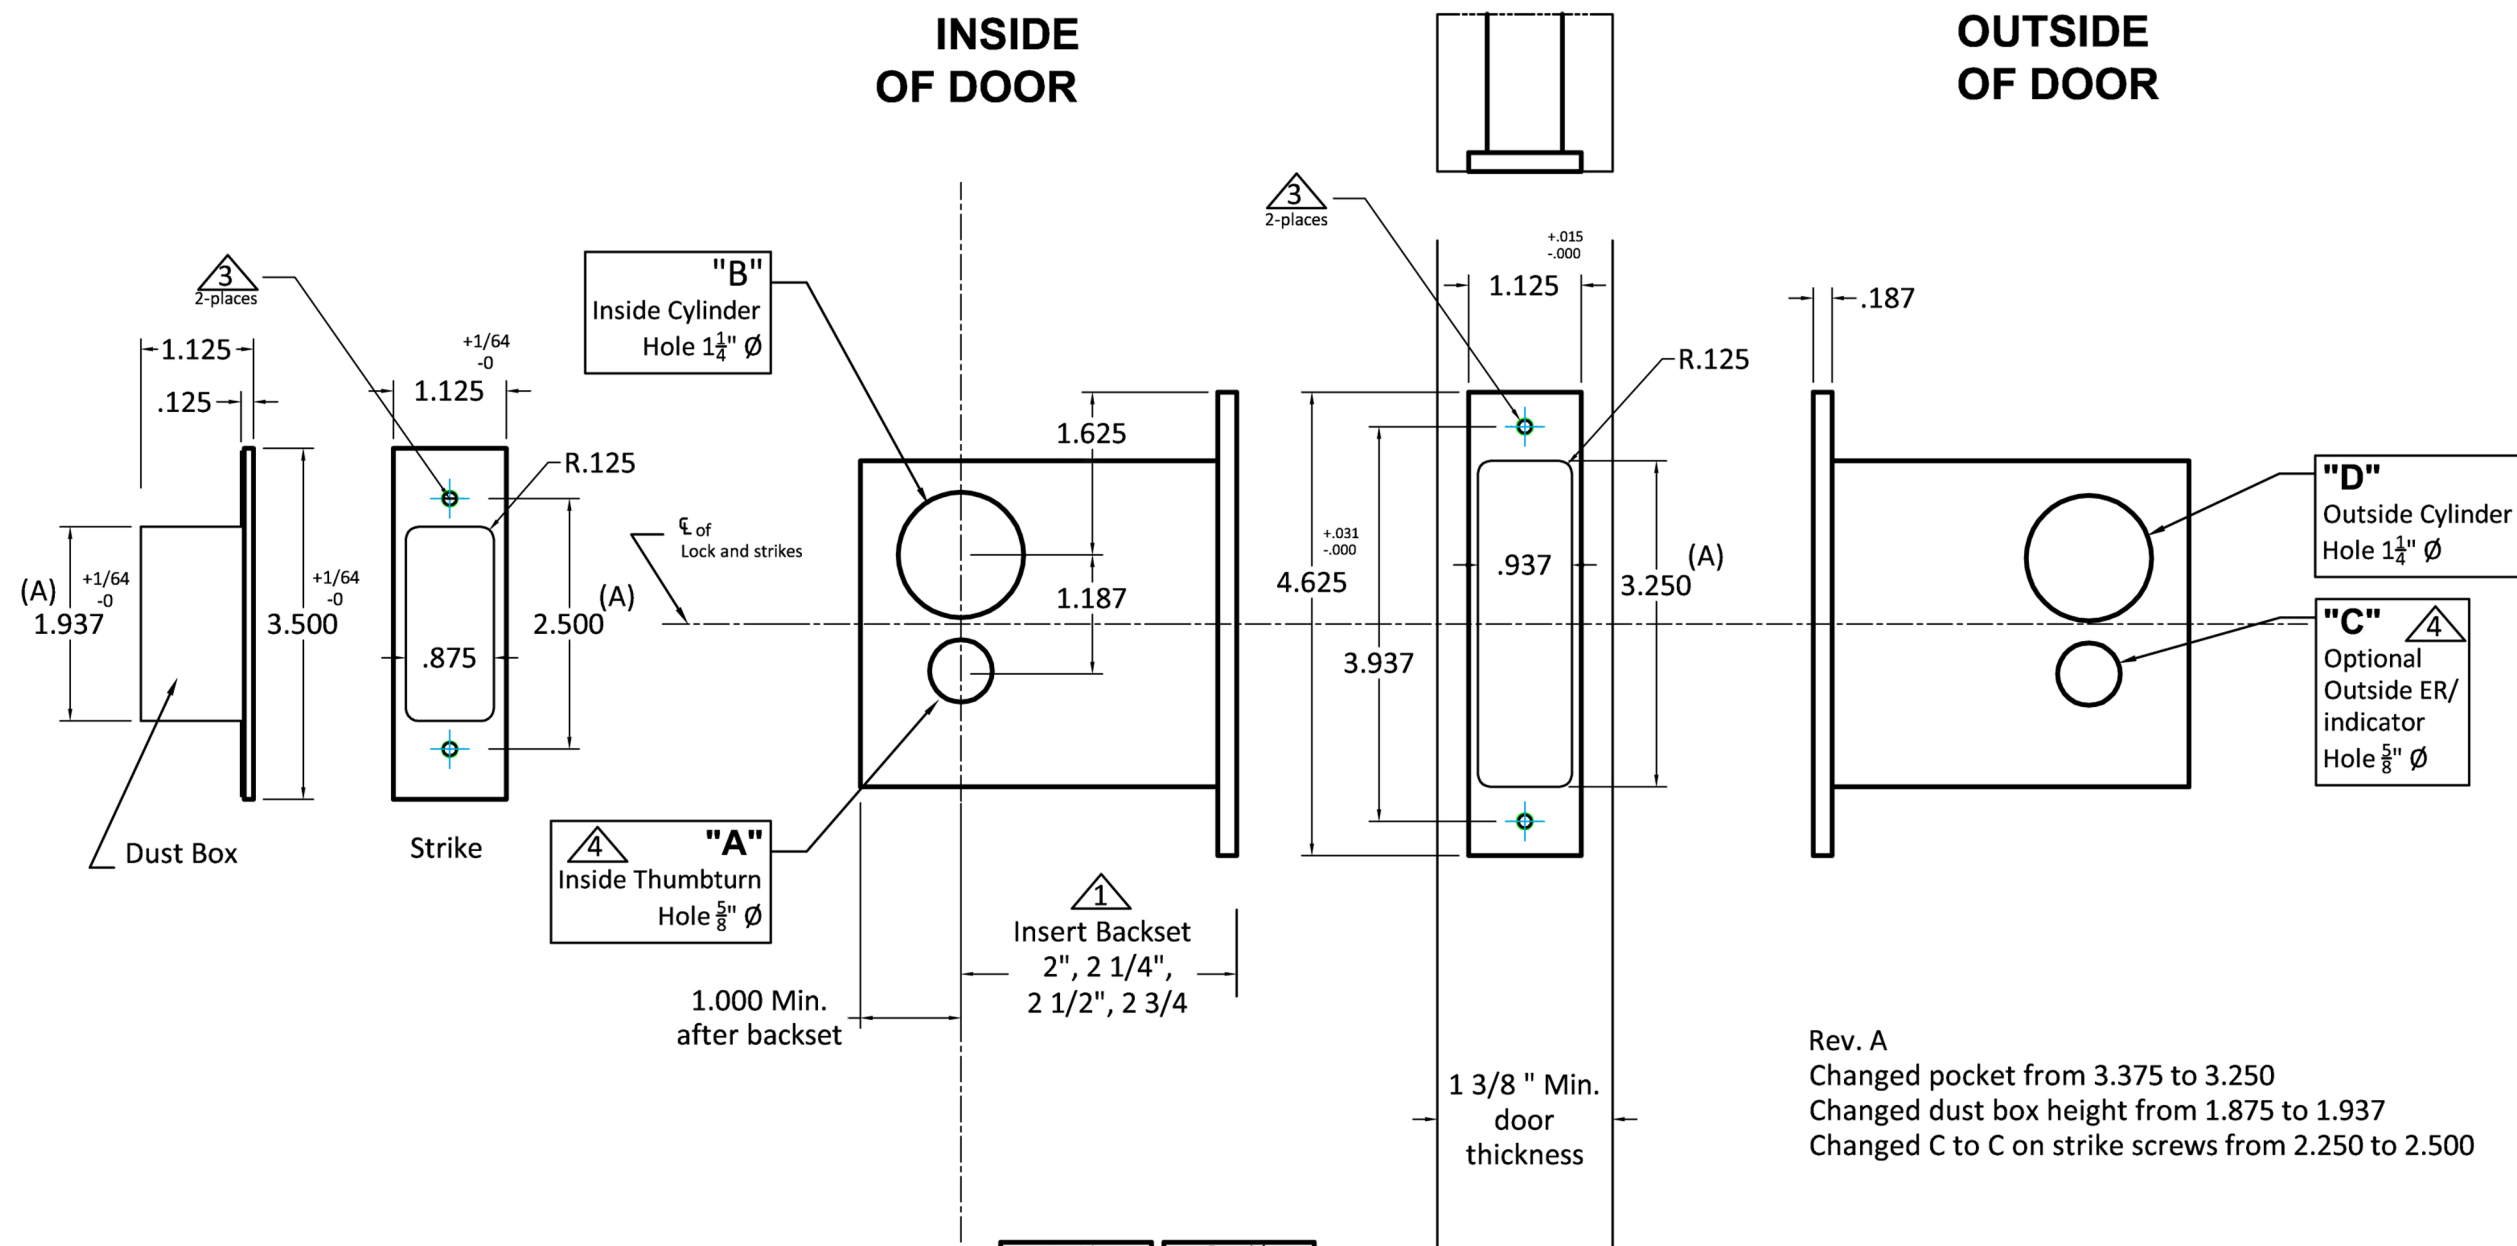

### Notes:

- ① Insert backset here 2", 2 1/4", 2 1/2", 2 3/4
- ② Centerline of strike and front are the same.
- ③ Prep for #8 wood or 8-32 machine screws.
- ④ Thumbturn and ER holes may vary from different trim manufacturers. Please refer to their templates to confirm these dimensions.

### Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See catalog / spec sheets for additional lock details

Lock Functions	Inside of door	Outside of door
7201	●	●
7202	●	●
7203	●	●
7203ST	●	●
7204	●	●
7205	●	○
● Required Holes ○ Optional Holes		