



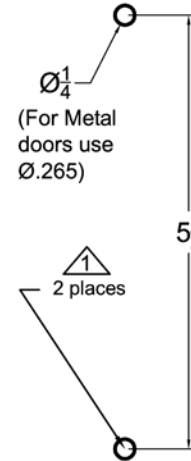


7200P Template

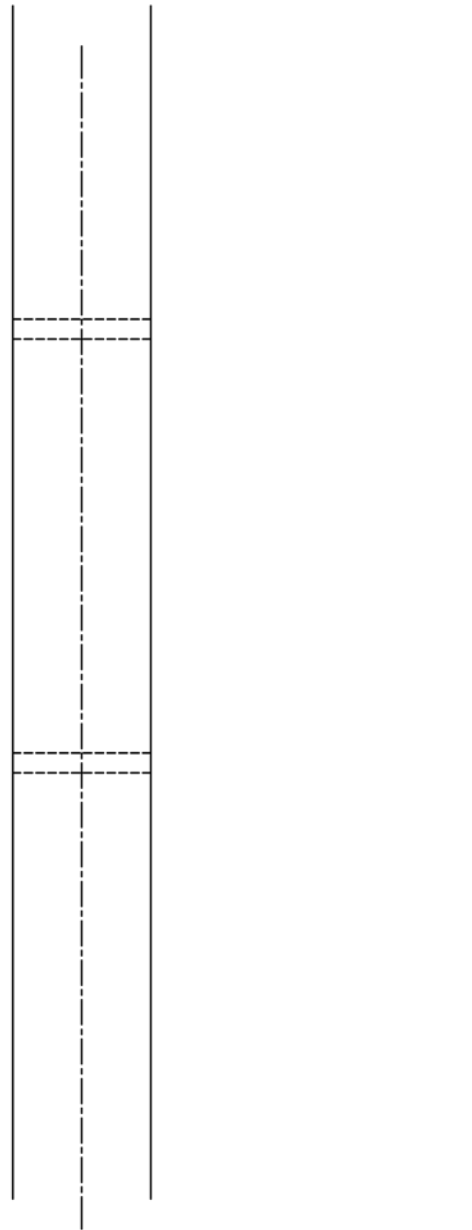

Notes:

-  The holes for the 7200P back to back pulls are meant to be very tight, the installer can tap the cone head thru-bolts in place with a rubber mallet for wood doors.

Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See catalog / spec sheets for additional lock details

T-ALH.7200P