


Recommended ADA Location
from finished floor to the
center-line of the lock is $41\frac{1}{2}$ "

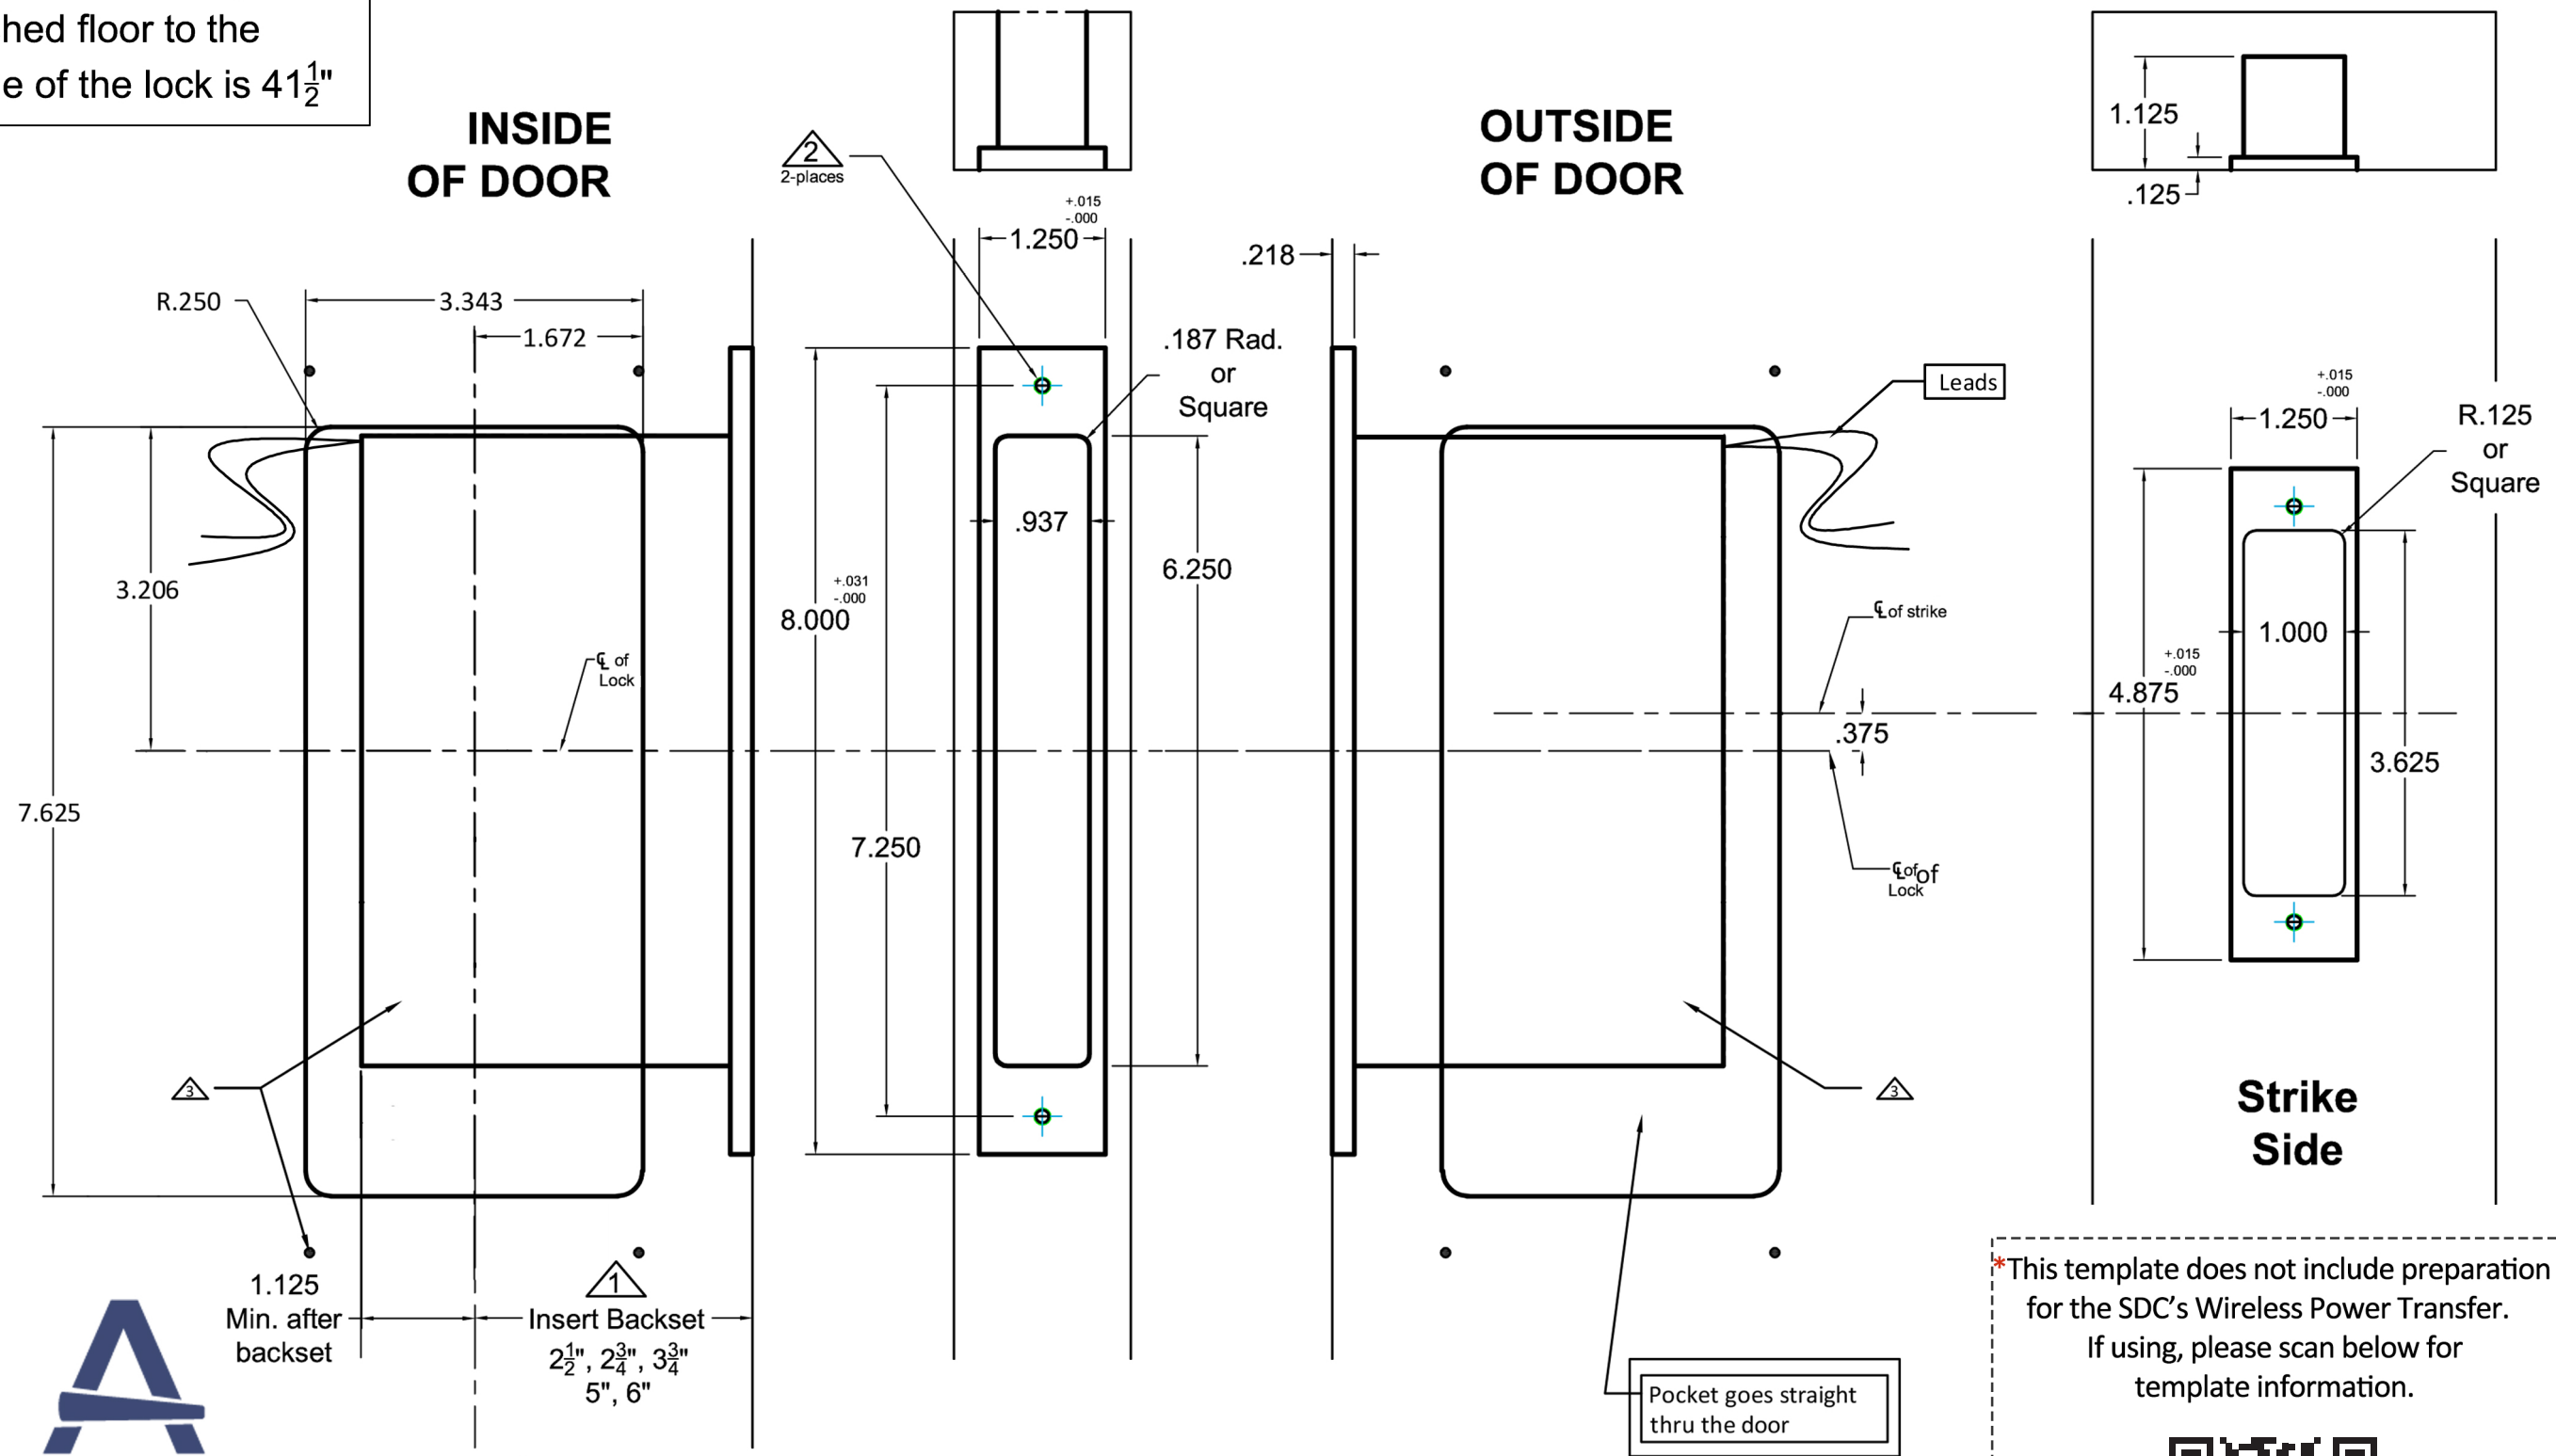

Notes:

- 1 Insert backset here 2 $\frac{1}{2}$ ", $2\frac{3}{4}$ ", $3\frac{3}{4}$ ", 5", or 6"
- 2 Prep for #12 wood or 12-24 machine screws
- 3 After the lock is installed and works properly. Pre-drill screw holes for the flush pulls. Then mount the flush pulls with the provided screws

Additional Notes:

- a) Responsibility : Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- c) See catalog / spec sheets for additional lock details

*This template does not include preparation for the SDC's Wireless Power Transfer. If using, please scan below for template information.



Template for SL-M9158E.PDL &
SL-M9159E.PDL - All Backsets

T-ALH.SL-M915XE.PDL