



### RABBETED DOORS

Rabbeted kits were traditionally used before weather stripping became popular on exterior doors. Now they are commonly used to create seamless openings on interior pairs of doors. Each door is cut with a recess (half of the edge) so that high edge of the door meets the low edge of the other door creating a seamless closure that enhances privacy and eliminates gaps.

11

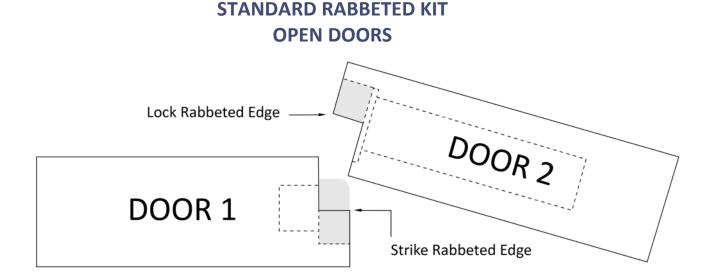

## STANDARD RABBETED KIT CLOSED DOORS

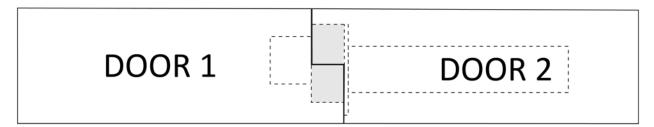

11

8

4


I


### STANDARD RABBETED KIT

### 9000 | 9100 SERIES





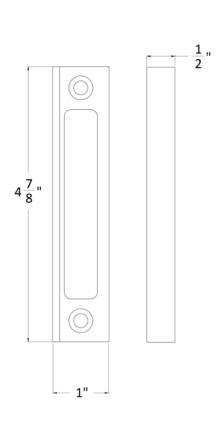

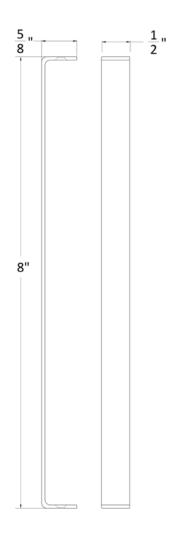


The above rabbeted kit works with most 9100 functions. Other rabbeted kits are available for functions with anti-pick bolts.

11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1

## STANDARD RABBETED KIT EXPLODED VIEW

### 9000 | 9100 SERIES

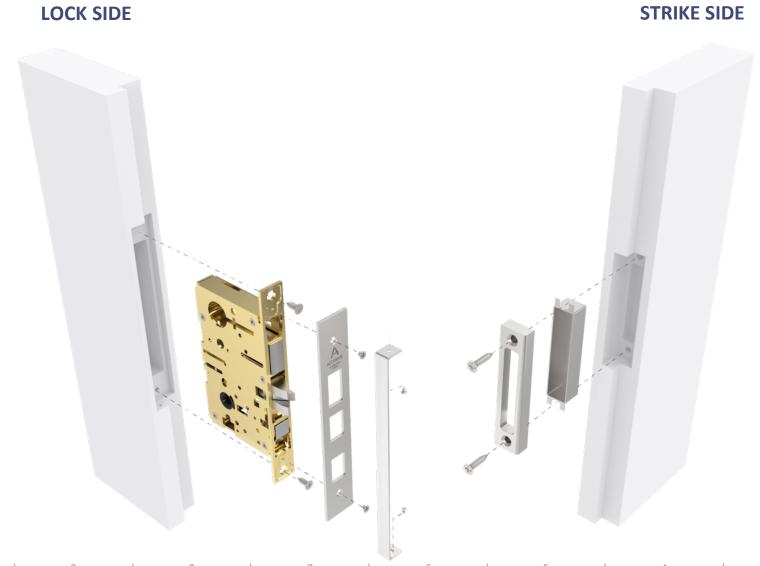



11

STANDARD RABBETED KIT

FOR 8700 | 8800 SERIES



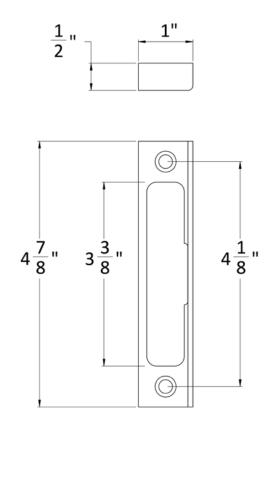

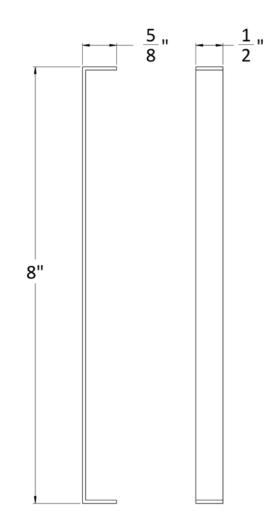


The above rabbeted kit works with most 8800 functions. Other rabbeted kits are available for functions with anti-pick bolts.

11

## STANDARD RABBETED KIT EXPLODED VIEW

FOR 8700 | 8800 SERIES



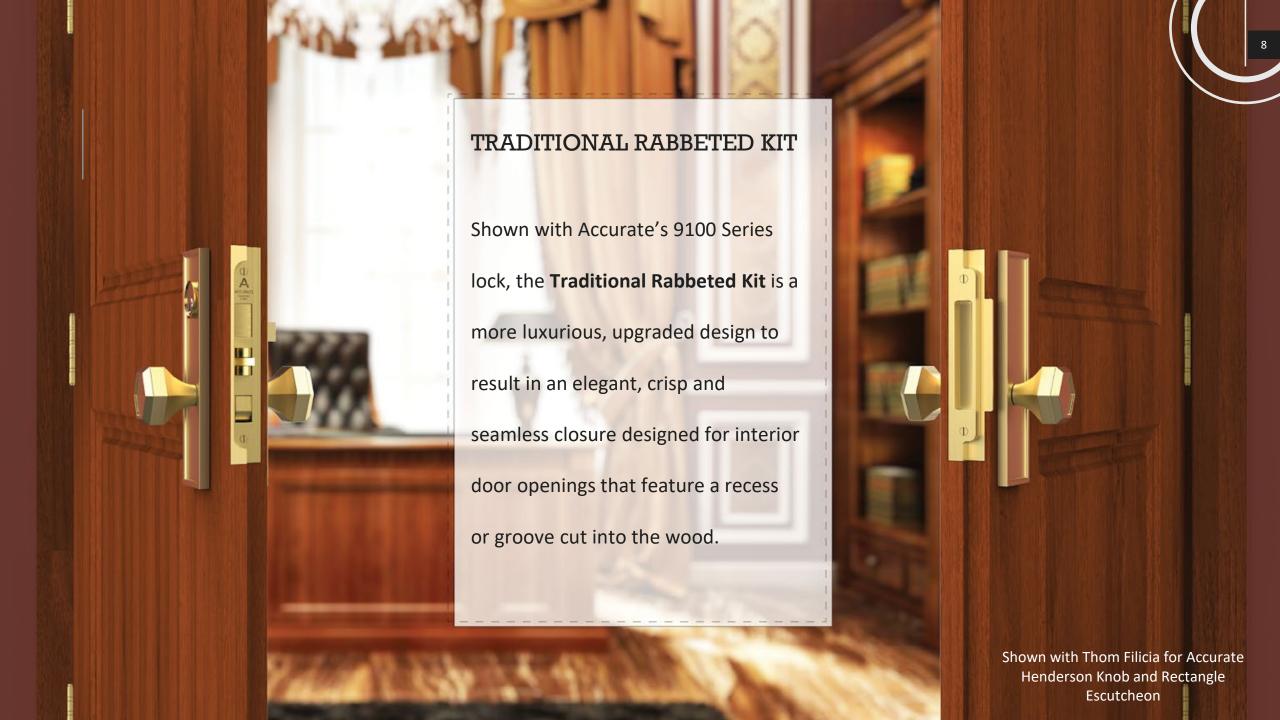


### RABBETED DOORS

The Traditional Rabbeted Kit is an upgraded design and comes standard with slotted screws.


Rabbeted kits were traditionally used before weather stripping became popular on exterior doors. Now they are commonly used to create seamless openings on interior pairs of doors. Each door is cut with a recess (half of the edge) so that high edge of the door meets the low edge of the other door creating a seamless closure that enhances privacy and eliminates gaps.

11

## TRADITIONAL RABBETED KIT OPEN DOORS

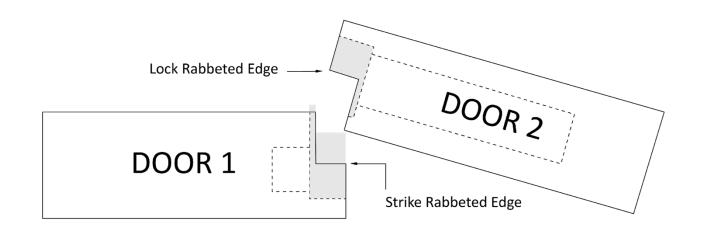

## TRADITIONAL RABBETED KIT CLOSED DOORS

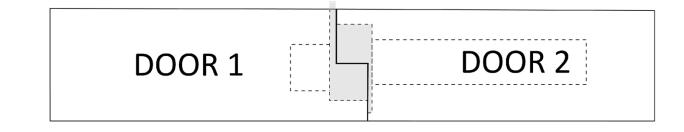



11

### TRADITIONAL RABBETED KIT

### 9000 | 9100 SERIES



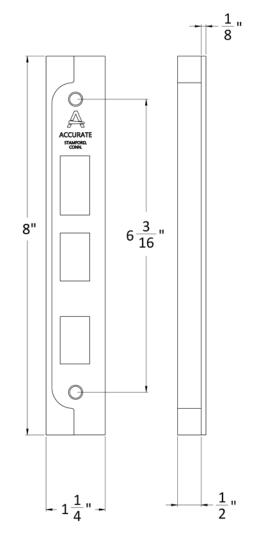

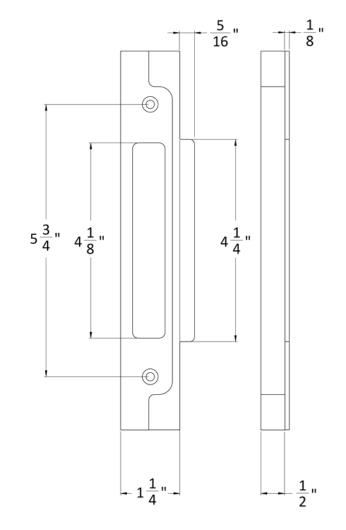

The above rabbeted kit works with most 9100 functions. Other rabbeted kits are available for functions with anti-pick bolts.

## TRADITIONAL RABBETED KIT EXPLODED VIEW


9000 | 9100 SERIES





### TRADITIONAL RABBETED KIT

### **8800 SERIES**



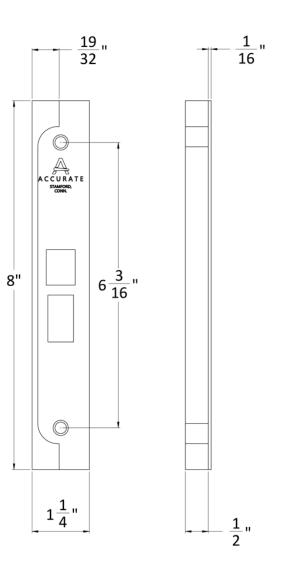

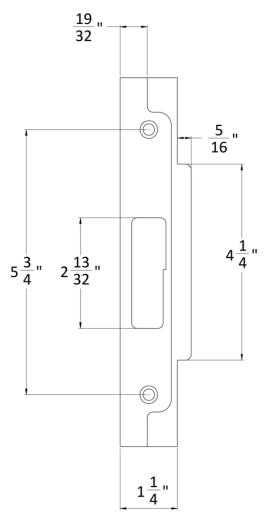

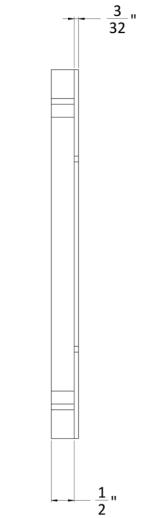

The above rabbeted kit works with most 8800 functions. Other rabbeted kits are available for functions with anti-pick bolts.

| 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2

## TRADITIONAL RABBETED KIT EXPLODED VIEW

### **8800 SERIES**





## TRADITIONAL RABBETED KIT


### **9500 SERIES**





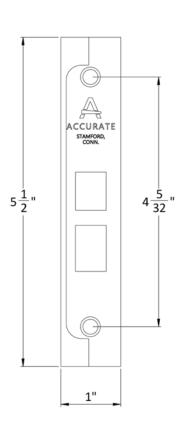

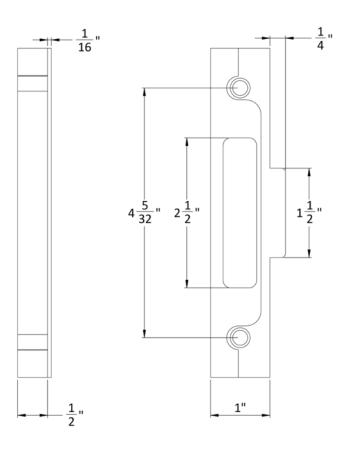



## TRADITIONAL RABBETED KIT EXPLODED VIEW


### **9500 SERIES**




## TRADITIONAL RABBETED KIT

### **9800 SERIES**



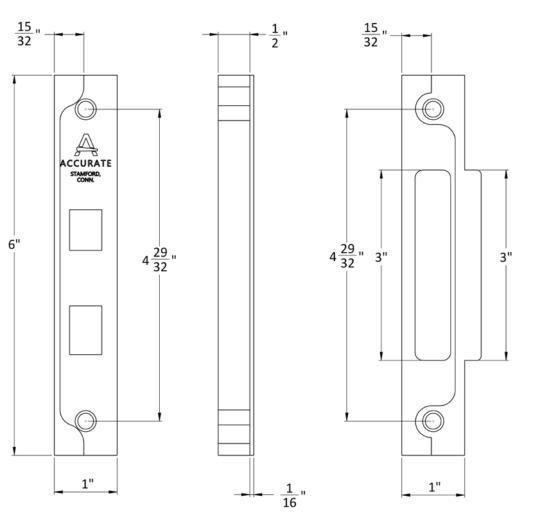



. | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2

## TRADITIONAL RABBETED KIT EXPLODED VIEW


### **9800 SERIES**



11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2

### HOW TO SPECIFY

### **HANDING**

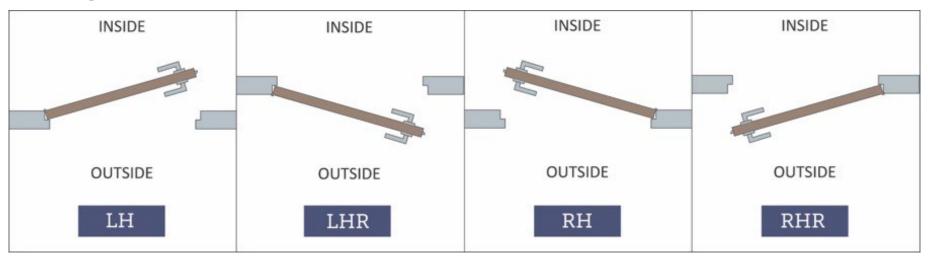

### **FINISHES**

GROUP 1: US4, US4NL, US32D\*, US26D


**GROUP 2:** US3, US3NL, US26, US32\*, US9\*, US10\*, US10B, US14, US15, US19

GROUP 3: BN, BB, TN, TB, DURO, ESN, US15A, US5

Applicable finishes come standard with <u>Cerakote Premium</u> <u>Protective Coating.</u> Available in gloss or matte.

To view example of finishes visit: Accurate Finishes.

### **CYLINDERS & KEYING**

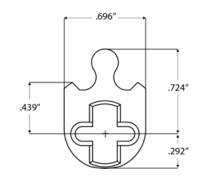


9000/9100 and 8700/8800 Series locks accept any standard American mortise cylinder. For details on required cams and compatibility with other manufacturers' cylinders, please visit: <a href="Accurate">Accurate</a> Support.

11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1

<sup>\*</sup> Trim options (including Accurate Levers) may not be available in US32D, US32, US9, or US10 finish. Please call for assistance.

### HOW TO SPECIFY

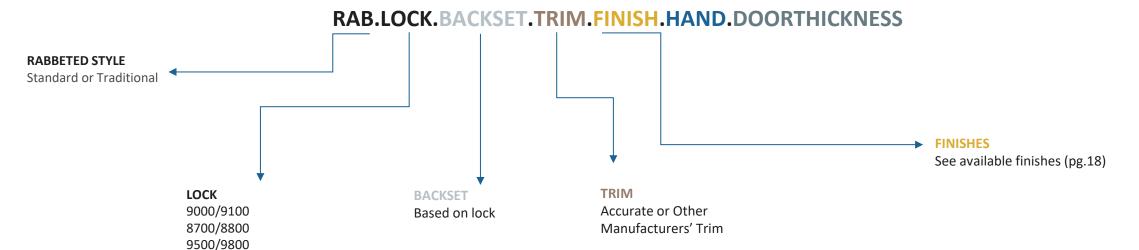

### **EXAMPLES**

Standard Rabbeted Kit | 9100 | Accurate Trim E.g.: STD.RAB.9134.212.19L/1R.US4.RH.134

Standard Rabbeted Kit | 8800 | Accurate Trim E.g.: STD.RAB.8845.234.21L/1E.US4.RH.134

Traditional Rabbeted Kit | 9500 | Accurate Trim E.g.: TRAD.RAB.9539.234.18L/2R.US4.LH.134

Traditional Rabbeted Kit | 9800 | Other Manufacturers' Trim E.g.: TRAD.RAB.9825.234.LxL.8mm.US4.LH.134

### **NOTES**

- Typical rabbeted prep is 1/2" from high side to low side of door, with cut centered on the door. For other preps, please call for assistance.
- 9500/9800 Rabbeted Kits available as Traditional Only

11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1

### **ACCURATE LOCK & HARDWARE MANUFACTURERS OF LOCKS AND CUSTOM ARCHITECTURAL HARDWARE**

Stamford, CT 06902 1 Annie Place

**P:** 203.348.8865 **F:** 203.348.5234

E: sales@accuratelockandhardware.com

www.accuratelockandhardware.com

# **AMERICAN CRAFTE** — SINCE 1972 —