






ACCURATE  
LOCK & HARDWARE  
AMERICAN CRAFTED SINCE 1972

INSIDE  
OF DOOR

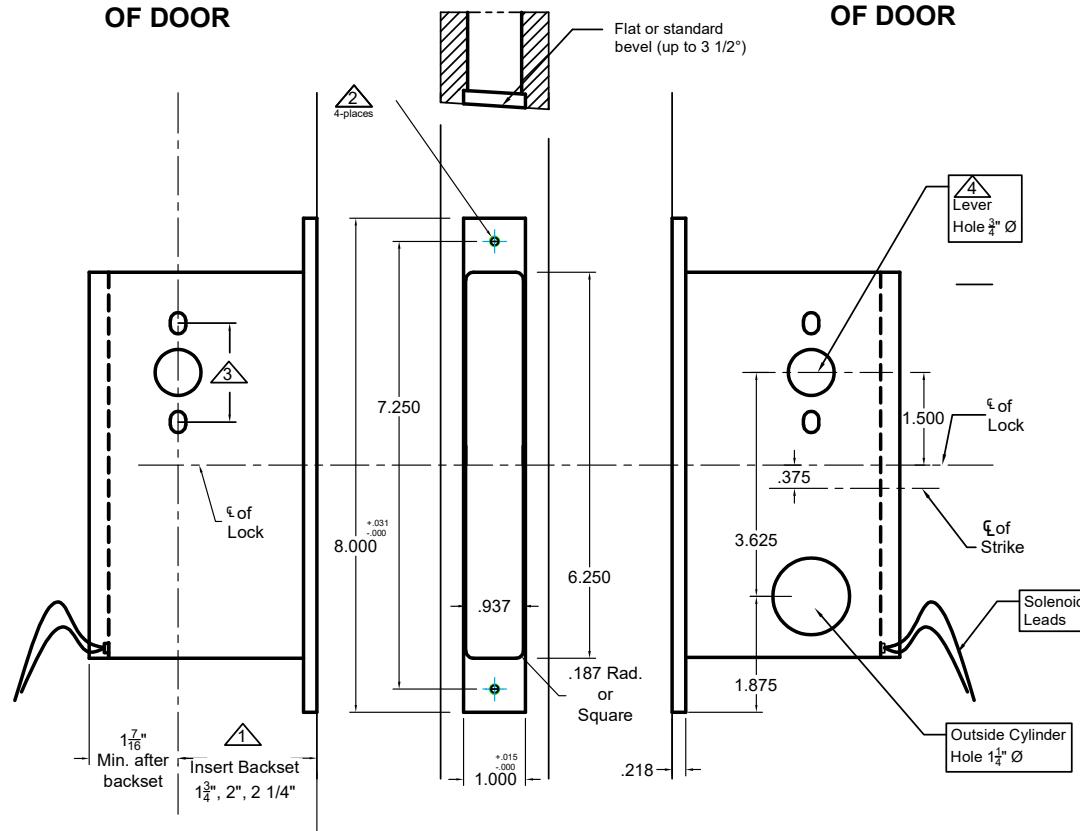

OUTSIDE  
OF DOOR

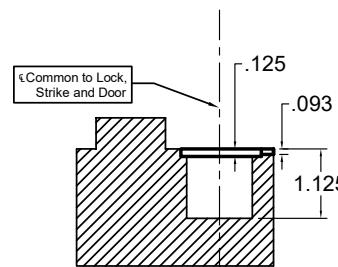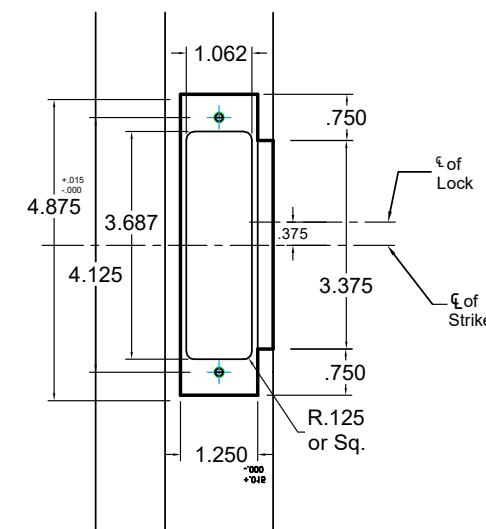

Notes:

- ▲ Insert backset here 1 3/4", 2", 2 1/4"
- ▲ Prep for #12 wood or 12-24 machine screws
- ▲ Thru bolting holes **ONLY** if required. See trim manufacturers standard template for details. Accurate lock's accommodates 1 1/2" to 1 1/4" center to centers and up to 1/4" dia. post. If there are any additional questions about the thru-bolting, please contact our office.
- ▲ Lever holes may vary from different trim manufacturers. Please refer to their templates to confirm these dimensions.

Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) Please contact us if a double lip strike is needed - for a proper template
- c) See catalog / spec sheets for additional lock details