


# INSIDE OF DOOR

# OUTSIDE OF DOOR

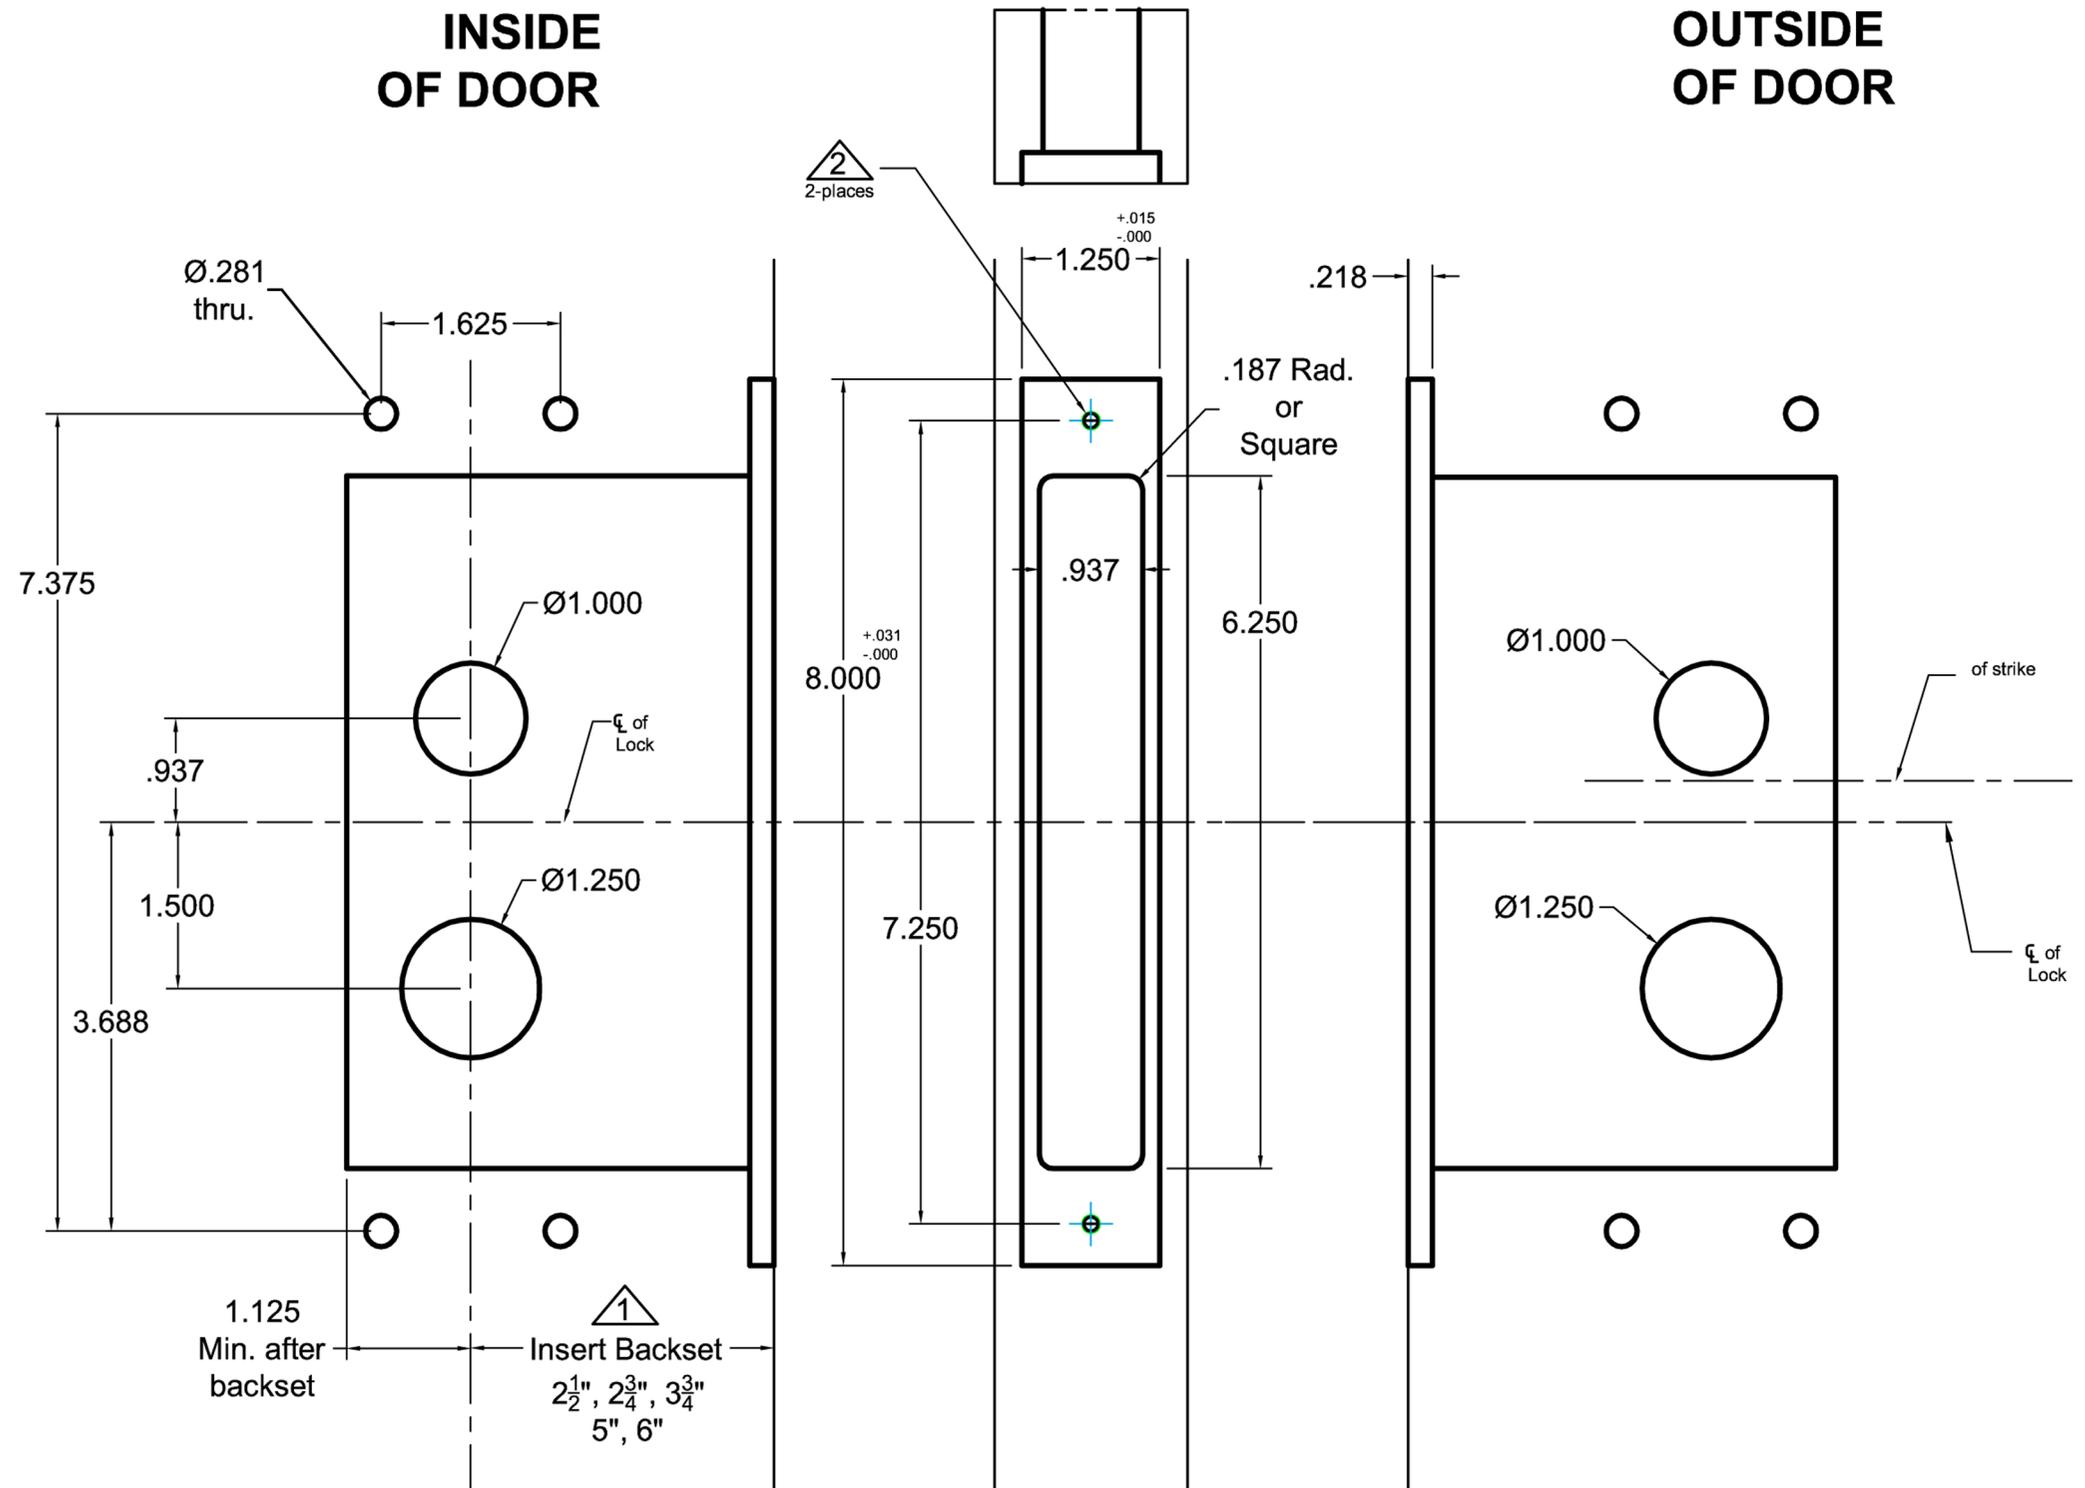

### Notes:

- ▲ Insert backset here  $2\frac{1}{2}"$ ,  $2\frac{3}{4}"$ ,  $3\frac{3}{4}"$ ,  $5"$ , or  $6"$
- ▲ Prep for #12 wood or 12-24 machine screws

### Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- c) See catalog / spec sheets for additional lock details

**ACCURATE**  
LOCK & HARDWARE  
AMERICAN CRAFTED SINCE 1972

9100ADAL-5.1E  
All Backsets

T-ALH.9100ADAL-5.1E