


INSIDE
OF DOOR

OUTSIDE
OF DOOR

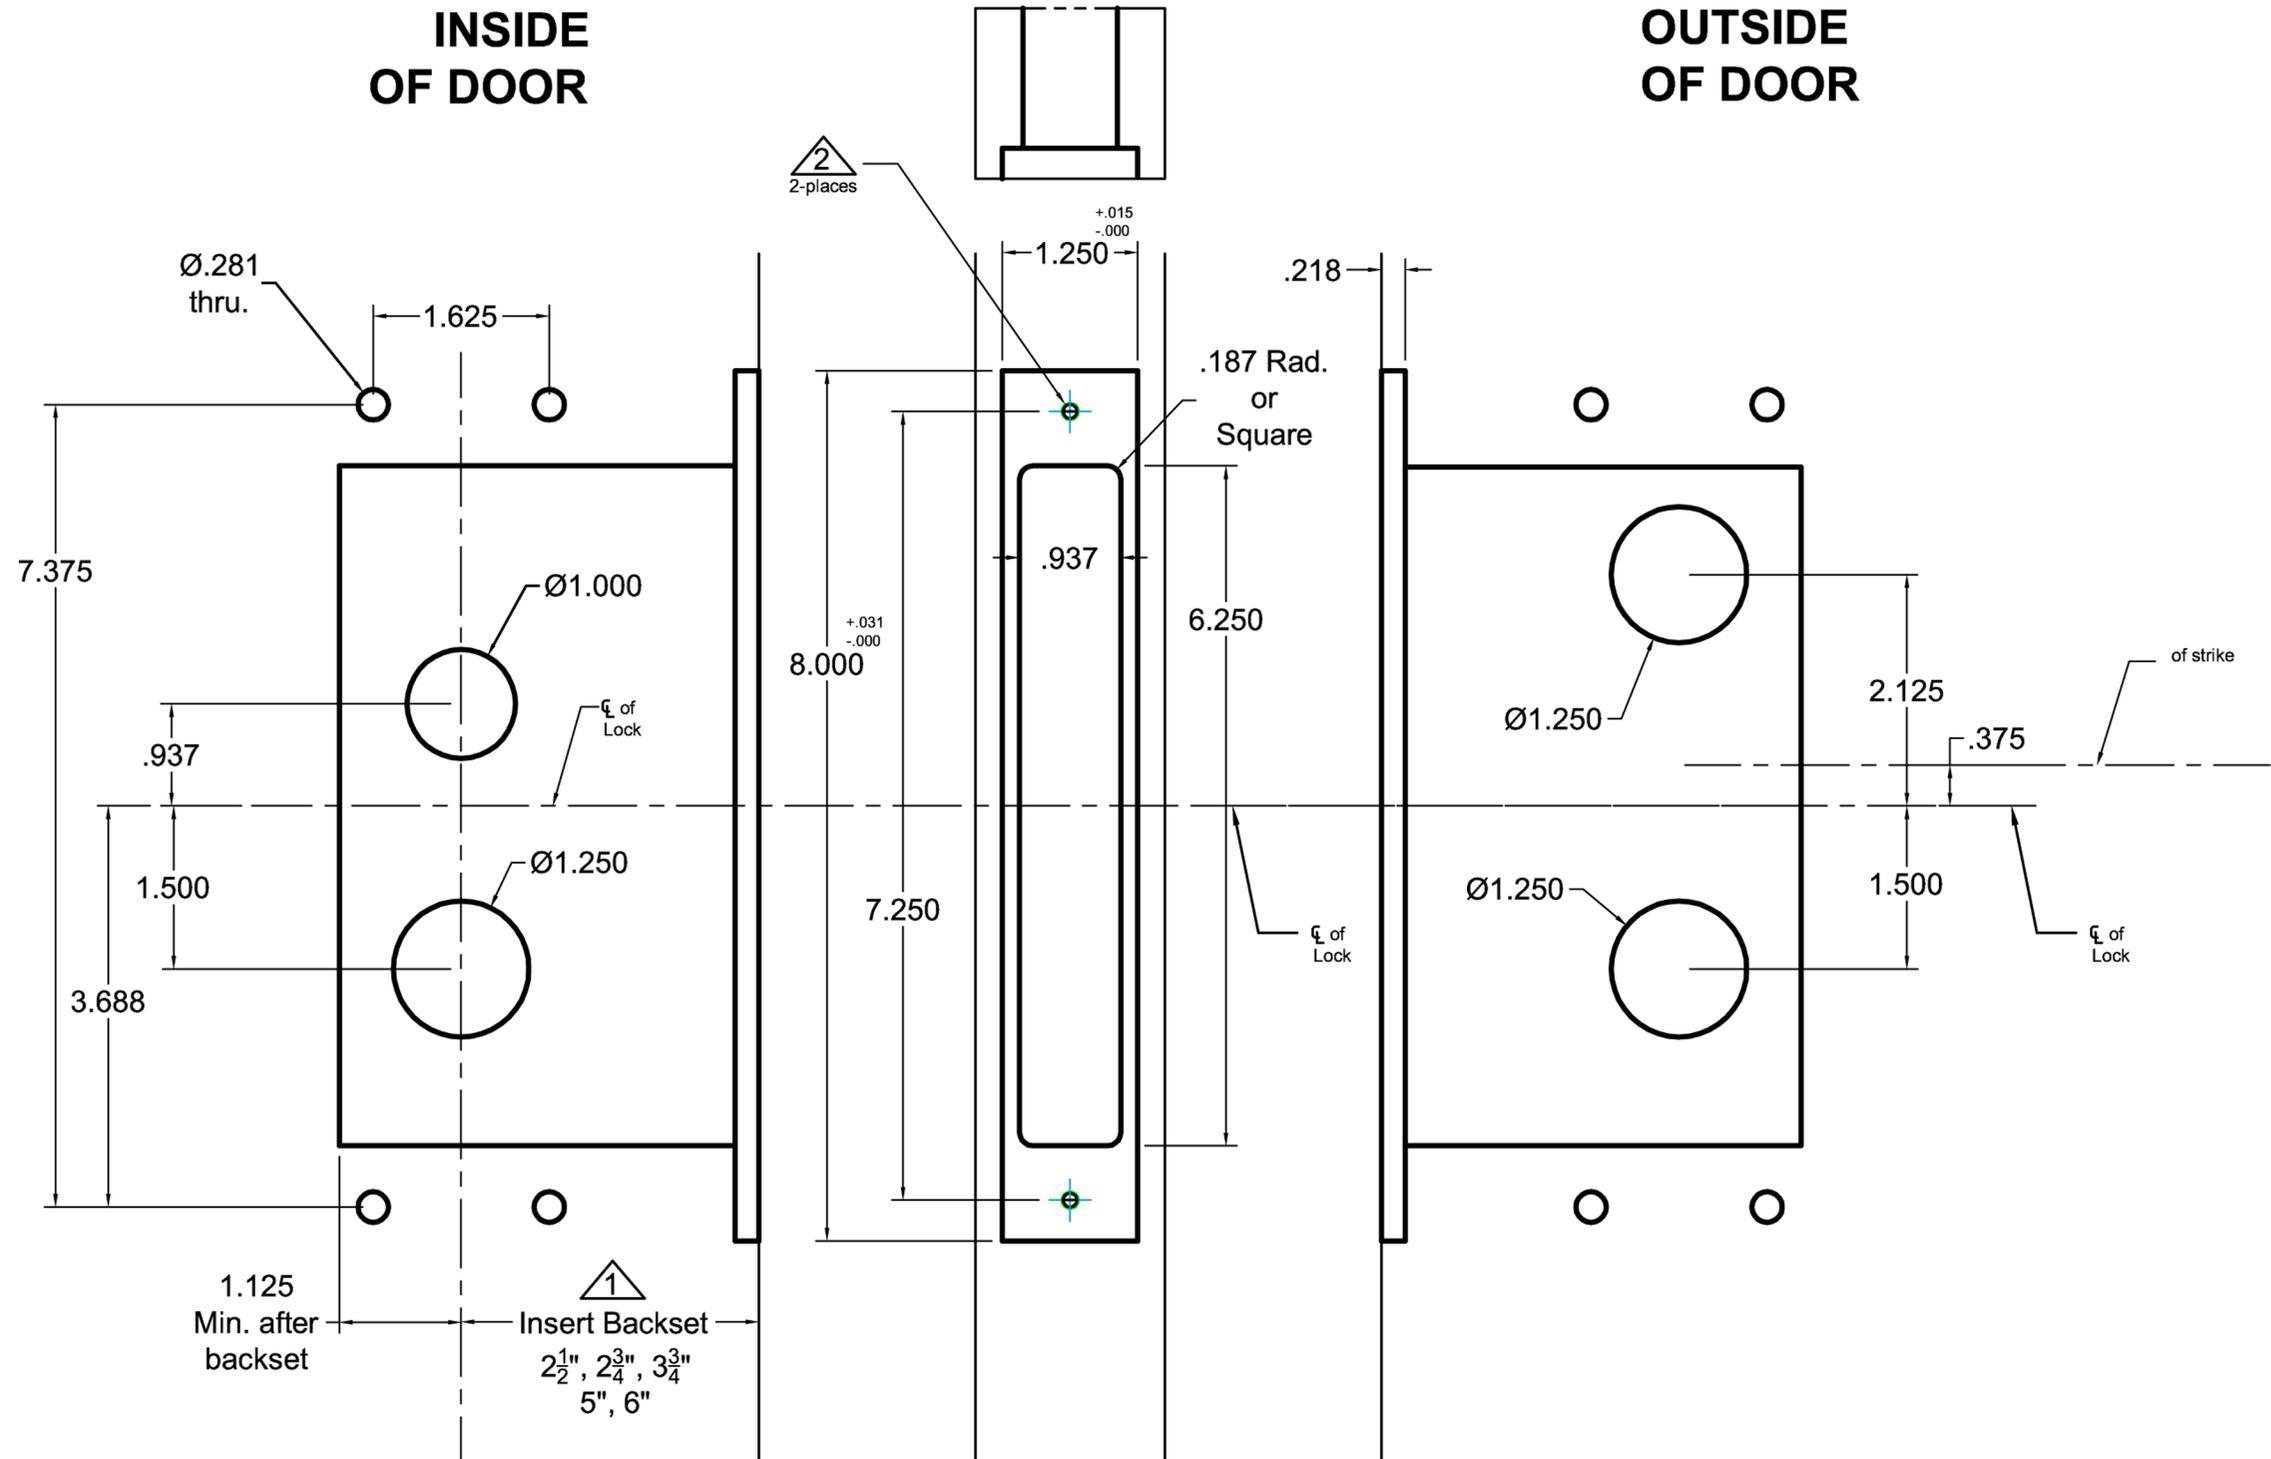

Notes:

- ▲ Insert backset here 2 1/2", 2 3/4", 3 3/4", 5", or 6"
- ▲ Prep for #12 wood or 12-24 machine screws

Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- c) See catalog / spec sheets for additional lock details

ACCURATE
LOCK & HARDWARE
AMERICAN CRAFTED SINCE 1972

9100ADAL-3.1E
All Backsets

T-ALH.9100ADAL-3.1E